Kurz-Kasch, Inc.
Electronics Division
Box 1246
1501 Webster Street
Dayton, Ohio 45401
Telephone (513)223-8161

Operating Instructions For Model 232A

BAZOOKA

P.S.E.

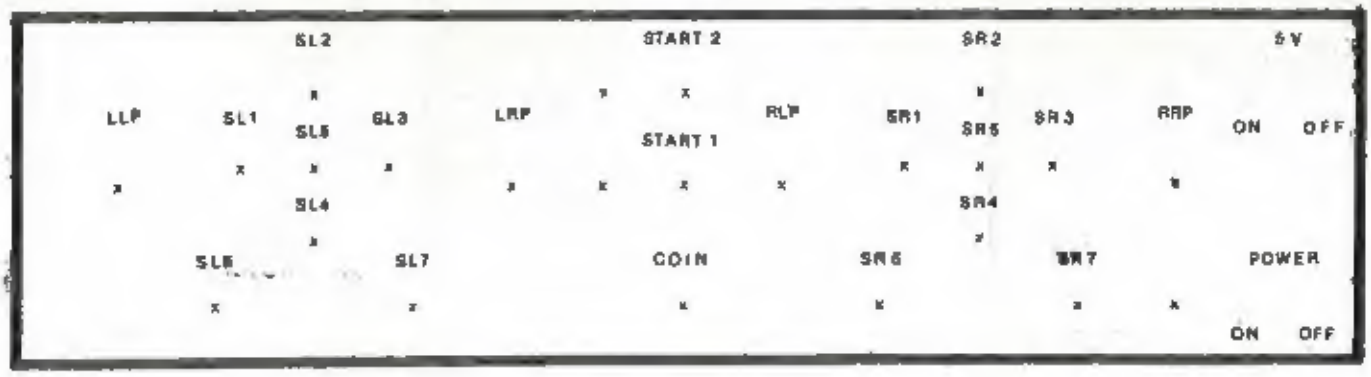

1. Insert the 232A card into program A connector number side up.
2. Connect the 3 Molex connectors to the Bazooka game board.
3. Connect speakers to the speaker leads on the 232A card.
4. NOTE!! DO NOT TURN ON +5 VOLTS!! Damage may result to the test fixture and/or the program card!
5. Slide the POWER switch to "ON".
6. Push START 2 to reset high score.
7. Push COIN to coin game.
8. Push START to start game.
9. Push SL-5 to fire gun.
   Turn LLP to aim gun.