



Operation, Maintenance  
and Service Manual


**CENTIPED**™

**Cocktail**

Complete with Illustrated Parts Lists

## GAME SERIAL NUMBER LOCATION

Your game's serial number is stamped on a silver identification label, located on the outside of the game. The same number is also stamped on the chassis of the monitor, Regulator/Audio II PCB, the power supply, and Centipede™ Game PCB. Please mention this number whenever calling your distributor for service.

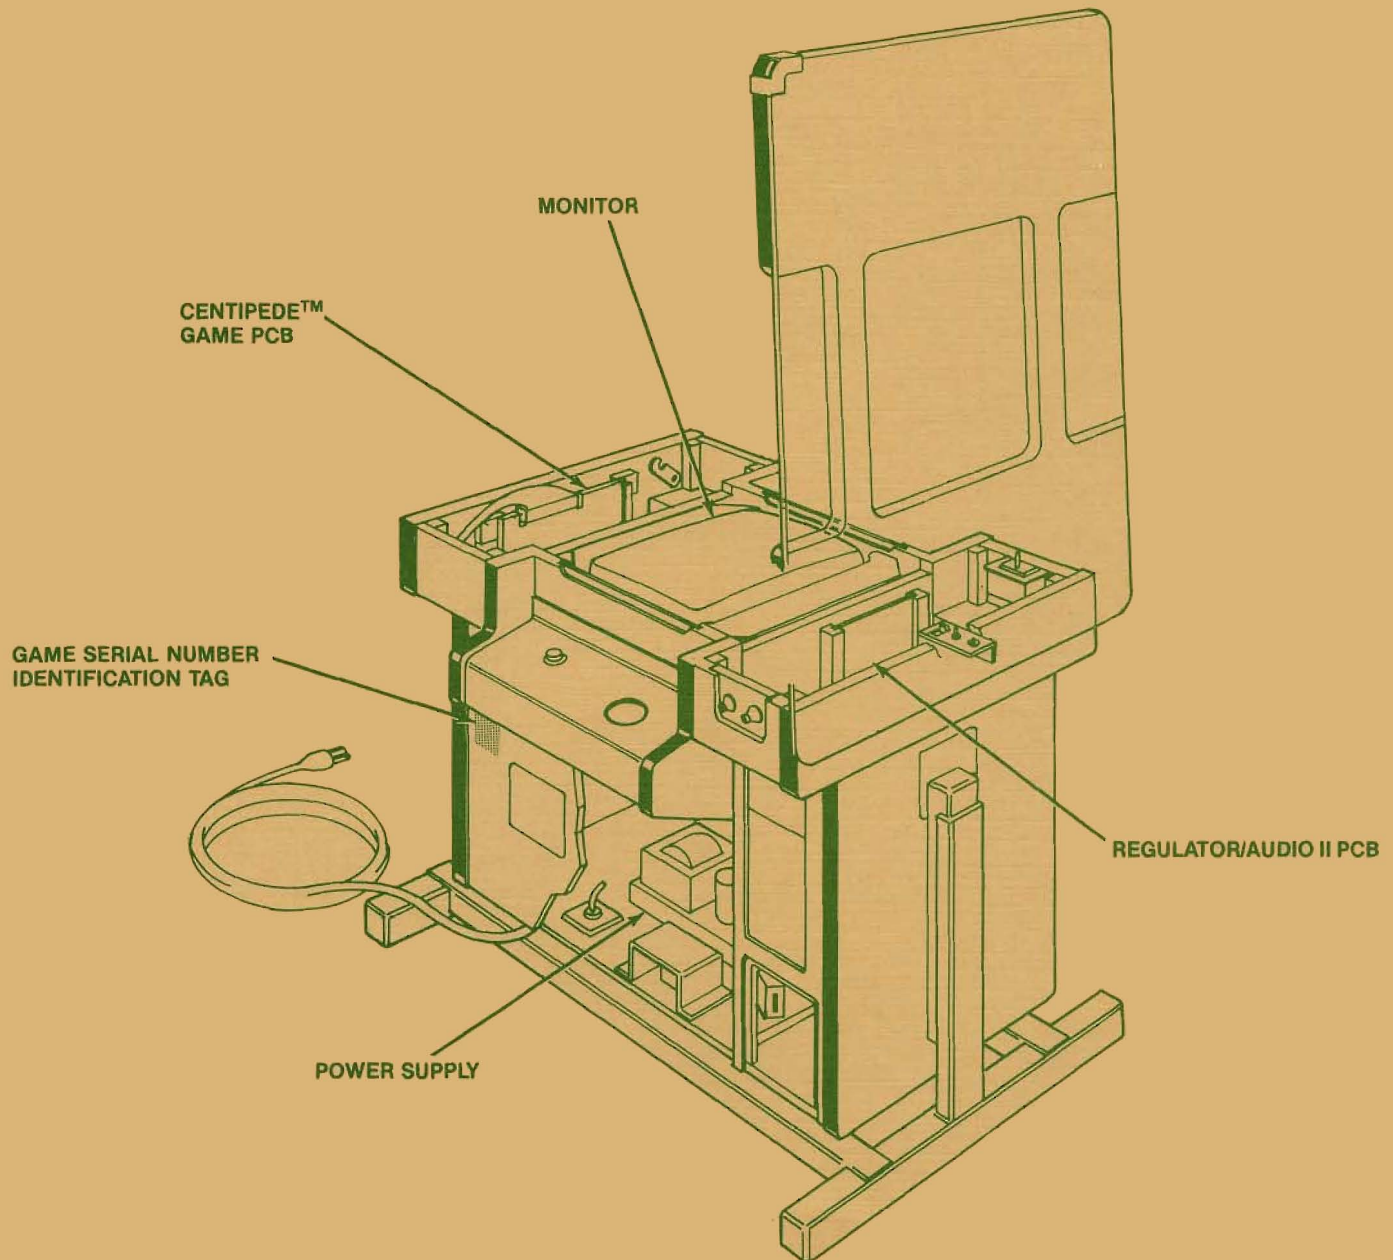




MONITOR NOTE:  
AUTO SHUT DOWN



B+ → 0000000  
HORIZ HOLD

TO MEASURE B+ AND ADJUST  
FUSE #2 THE SHORT FUSE  
TO GROUND REF. AND ADJUST  
TO 120 V.  
R505 HORIZ. HOLD WILL ALSO  
EFFECT B+

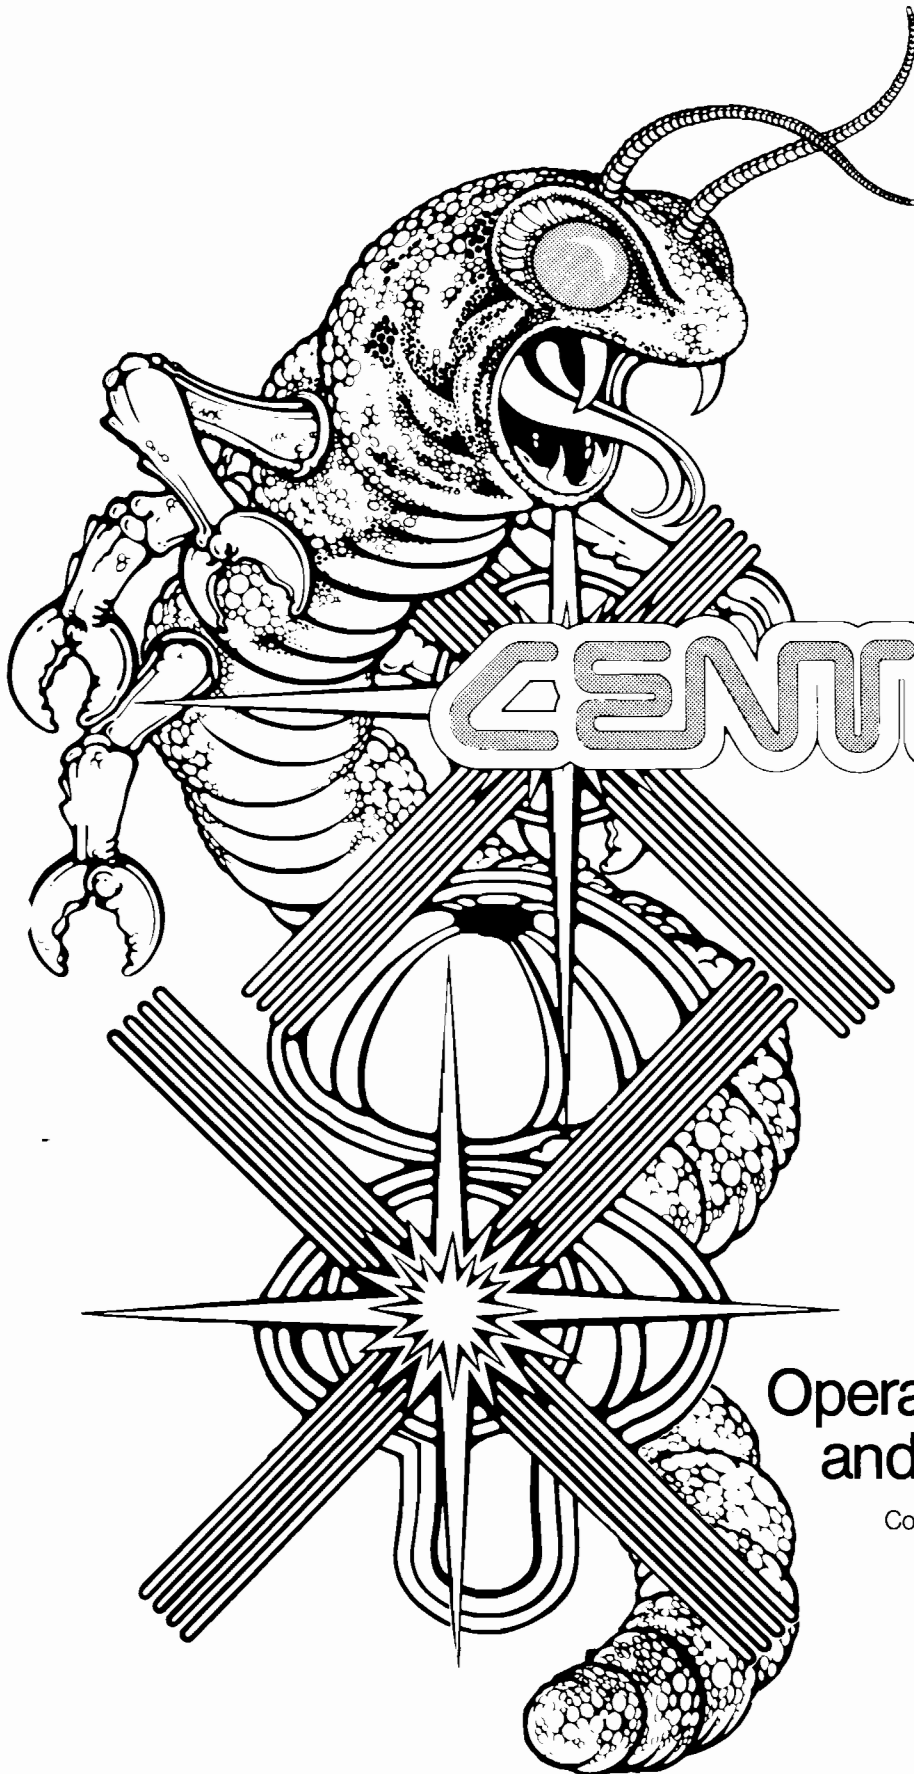

# CENTIPED<sup>TM</sup>

## Cocktail

### Operation, Maintenance and Service Manual

Complete with Illustrated Parts Lists

**Copyright © 1981 by Atari, Inc. All rights reserved.**

No part of this publication may be reproduced by any mechanical, photographic, or electronic process, or in the form of a phonographic recording, nor may it be stored in a retrieval system, transmitted, or otherwise copied for public or private use, without permission from the publisher.

Published by:

**ATARI INC.**

1265 Borregas Avenue

P.O. Box 427

Sunnyvale, California 94086

Lithographed in the U.S.A. **7K**

## Notice Regarding Non-Atari Parts



Atari, Inc.'s warranty (printed on the inside back cover of this manual) may be voided, if you do any of the following:

- 1.) you substitute non-Atari parts in your coin-operated game, or
- 2.) you modify or alter any circuits in your Atari game by using kits or parts **not** supplied by Atari.

Not only may the use of any non-Atari parts void your warranty, but any such alteration may also adversely affect the safety of your game, and may cause injury to you and your players.

# Table of Contents

## 1 Set-Up Procedures

|                                                  |    |
|--------------------------------------------------|----|
| A. New Features . . . . .                        | 1  |
| B. Opening the Game Cabinet . . . . .            | 3  |
| 1. Opening the Table Top . . . . .               | 3  |
| 2. Access Panel . . . . .                        | 3  |
| 3. Closing the Table Top . . . . .               | 3  |
| C. Game Inspection . . . . .                     | 3  |
| D. Game Installation . . . . .                   | 4  |
| 1. Voltage Plug Selection . . . . .              | 4  |
| 2. Interlock and Power On/Off Switches . . . . . | 4  |
| E. Adjusting the Table Legs . . . . .            | 6  |
| F. Self-Test Procedure . . . . .                 | 7  |
| G. Option Switch Settings . . . . .              | 10 |
| 1. Bonus Play Feature . . . . .                  | 10 |
| 2. Coin Mechanism Multipliers . . . . .          | 10 |
| 3. Examples of Game Price Settings . . . . .     | 10 |
| H. Game Play . . . . .                           | 14 |
| 1. Attract Mode . . . . .                        | 15 |
| 2. Ready-to-Play Mode . . . . .                  | 16 |
| 3. Play Mode . . . . .                           | 16 |
| 4. High Score Initial Mode . . . . .             | 17 |

## 2 Maintenance and Repair

|                                                     |    |
|-----------------------------------------------------|----|
| A. Cleaning . . . . .                               | 20 |
| B. Fuse Replacement . . . . .                       | 20 |
| C. The Control Panel . . . . .                      | 20 |
| 1. LED Start-Switch Replacement . . . . .           | 21 |
| 2. Leaf Switch Replacement . . . . .                | 21 |
| 3. Mini-Trak Ball™ Maintenance and Repair . . . . . | 22 |
| D. Monitor Removal . . . . .                        | 24 |
| E. Printed-Circuit Board Removal . . . . .          | 25 |
| 1. Game PCB Removal . . . . .                       | 25 |
| 2. Regulator/Audio II PCB Removal . . . . .         | 25 |
| F. Speaker Replacement . . . . .                    | 26 |
| G. Game Operation . . . . .                         | 27 |

## 3 Illustrated Parts Lists

|                                                       |    |
|-------------------------------------------------------|----|
| Illustrations and parts lists begin on page . . . . . | 31 |
|-------------------------------------------------------|----|

# List of Illustrations

|                                 |                                                                  |    |
|---------------------------------|------------------------------------------------------------------|----|
| Figure 1                        | Overview of Game                                                 | 2  |
| Figure 2                        | Installation Requirements                                        | 4  |
| Figure 3                        | Voltage Plug Selection                                           | 4  |
| Figure 4                        | Interlock and Power On/Off Switches                              | 5  |
| Figure 5                        | Adjusting the Table Legs                                         | 6  |
| Figure 6                        | Location of Self-Test Switch, Volume Control and Option Switches | 7  |
| Figure 7                        | Self-Test Procedure                                              | 8  |
| Figure 8                        | Game Option Settings                                             | 11 |
| Figure 9                        | Game Price Settings                                              | 12 |
| Figure 10                       | Coin Counter Option Settings                                     | 14 |
| Figure 11                       | Opening the Control Panel and Replacing Switches                 | 20 |
| Figure 12                       | Control Panel Wiring                                             | 21 |
| Figure 13                       | Mini-Trak Ball™ Maintenance and Repair                           | 23 |
| Figure 14                       | Monitor Removal                                                  | 24 |
| Figure 15                       | Printed-Circuit Board Removal                                    | 25 |
| Figure 16                       | Speaker Replacement                                              | 26 |
| Figure 17                       | Power Distribution                                               | 28 |
| Figure 18                       | Signal Distribution                                              | 29 |
| <i>Illustrated Parts Lists:</i> |                                                                  |    |
| Figure 19                       | Cabinet-Mounted Assemblies                                       | 32 |
| Figure 20                       | Control Panel Assembly                                           | 36 |
| Figure 21                       | Mini-Trak Ball Assembly                                          | 38 |
| Figure 22                       | Centipede™ Game PCB Assembly                                     | 40 |
| Figure 23                       | Regulator/Audio II PCB Assembly                                  | 44 |
| Figure 24                       | Power Supply Assembly for Color Raster-Scan Games                | 46 |
| Figure 25                       | Double Coin Acceptor/Mount Assembly                              | 48 |

## NOTE

If reading through this manual does not lead to solving a certain maintenance problem, call Tele-Help® at the Atari Customer Service office in your geographical area, as shown below.


### WEST and CENTRAL U.S.A.

Parts for all Atari customers in the U.S.A. Game sales and service

Atari, Inc.  
California Customer Service Office  
1105 N. Fair Oaks Avenue  
P. O. Box 427, Sunnyvale, CA 94086  
Telex 17-1103  
(Monday-Friday, 7:30-4:00 pm Pacific Time)

☎ From California, Alaska or Hawaii  
(408) 745-2900

☎ From anywhere else in this area  
toll-free (800) 538-1611

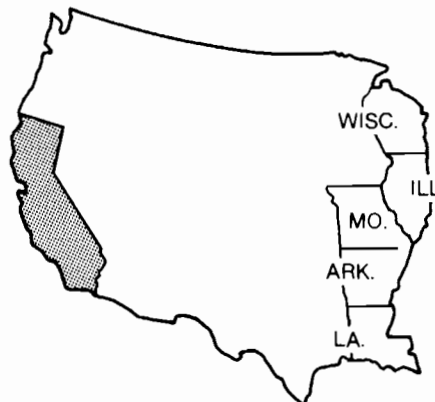

### EAST U.S.A.

Game sales and service only

Atari, Inc.  
New Jersey Customer Service Office  
Cottontail Lane, Somerset, NJ 08873  
Telex 37-9347  
(Monday-Friday, 7:30-4:00 pm Eastern time)

☎ From New Jersey  
(201) 469-5993

☎ From anywhere else in this area  
toll-free (800) 526-3849




### EUROPE

Parts for all Atari customers in Western Europe.

Game sales and service


Atari Ireland Limited  
European Customer Service Office  
Tipperary Town, Ireland  
Telex 28165  
(Monday-Friday, 9:00-6:00 pm GMT)

☎ 062-52155

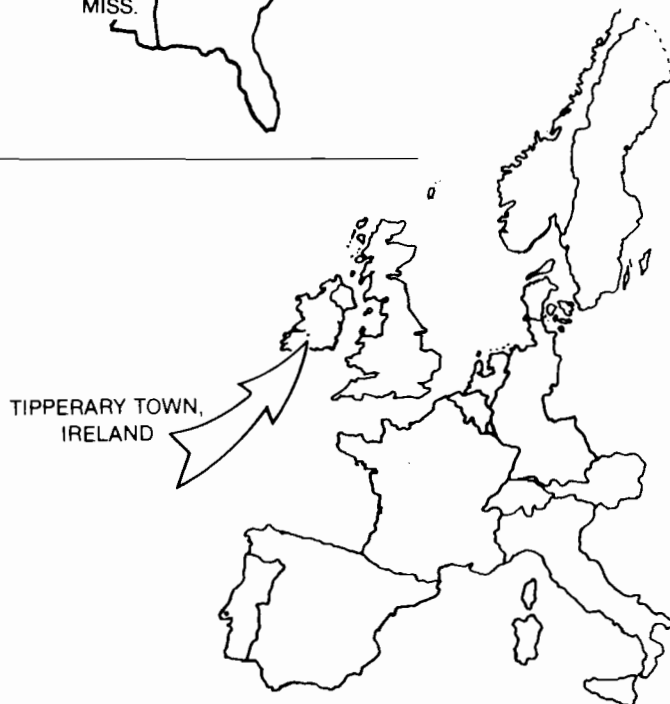



# Set-Up Procedures

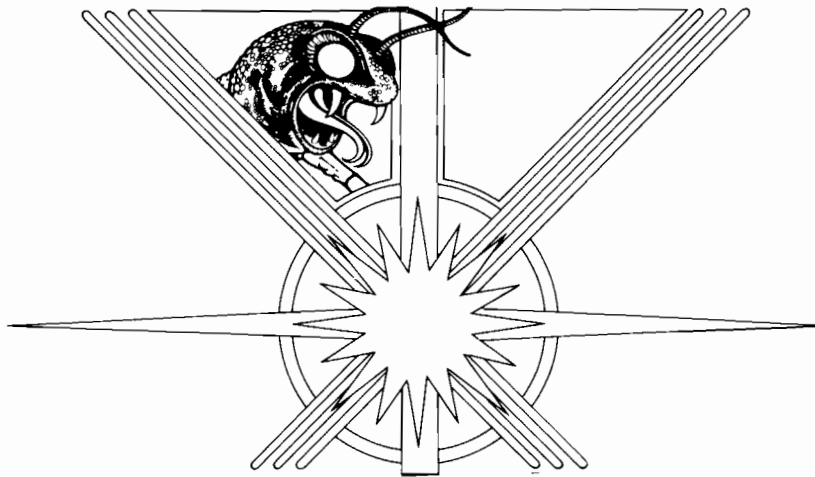


## A. New Features

The Centipede™ game has four new features. Even if you are familiar with Atari games, you should note these important differences. The new features are:

- **Mini-Trak Ball™.** The widely used Trak Ball assembly has been redesigned. The basis for this compact, simplified design is a two-part molded plastic frame. Fewer parts in this control make servicing easier, and its very smooth action is designed for greater player accuracy.
- The circuitry has **non-volatile memory** for part of the high score table. This means that even if power is removed from the game, the three highest scores will permanently stay in memory. To erase these scores follow the instructions in Figure 7, Self-Test Procedure.

- **New-Style Cocktail-Table Cabinet.** This cabinet design eliminates the side door and provides a new location for the game printed-circuit boards (PCBs). The table top is end-hinged for easy access to the PCBs and control panels. The coin box is accessible only from the outside of the cabinet.
- The newly-designed **adjustable table legs** provide improved cabinet stability while allowing two cocktail-table height settings: 27 $\frac{7}{8}$  and 30 inches. A third "upright" setting is 39 $\frac{3}{4}$  inches high, and allows the game to be placed in locations with other upright games.

These new parts, as well as all other major parts in the game, are illustrated in Figure 1. Throughout this manual, wherever one of these new parts is mentioned, you will see this symbol:

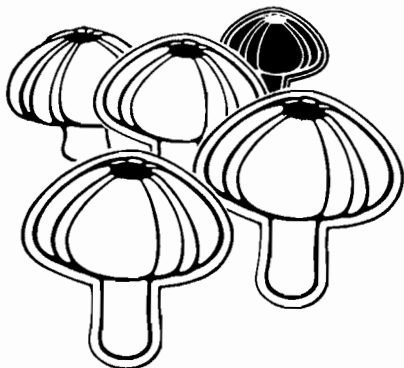

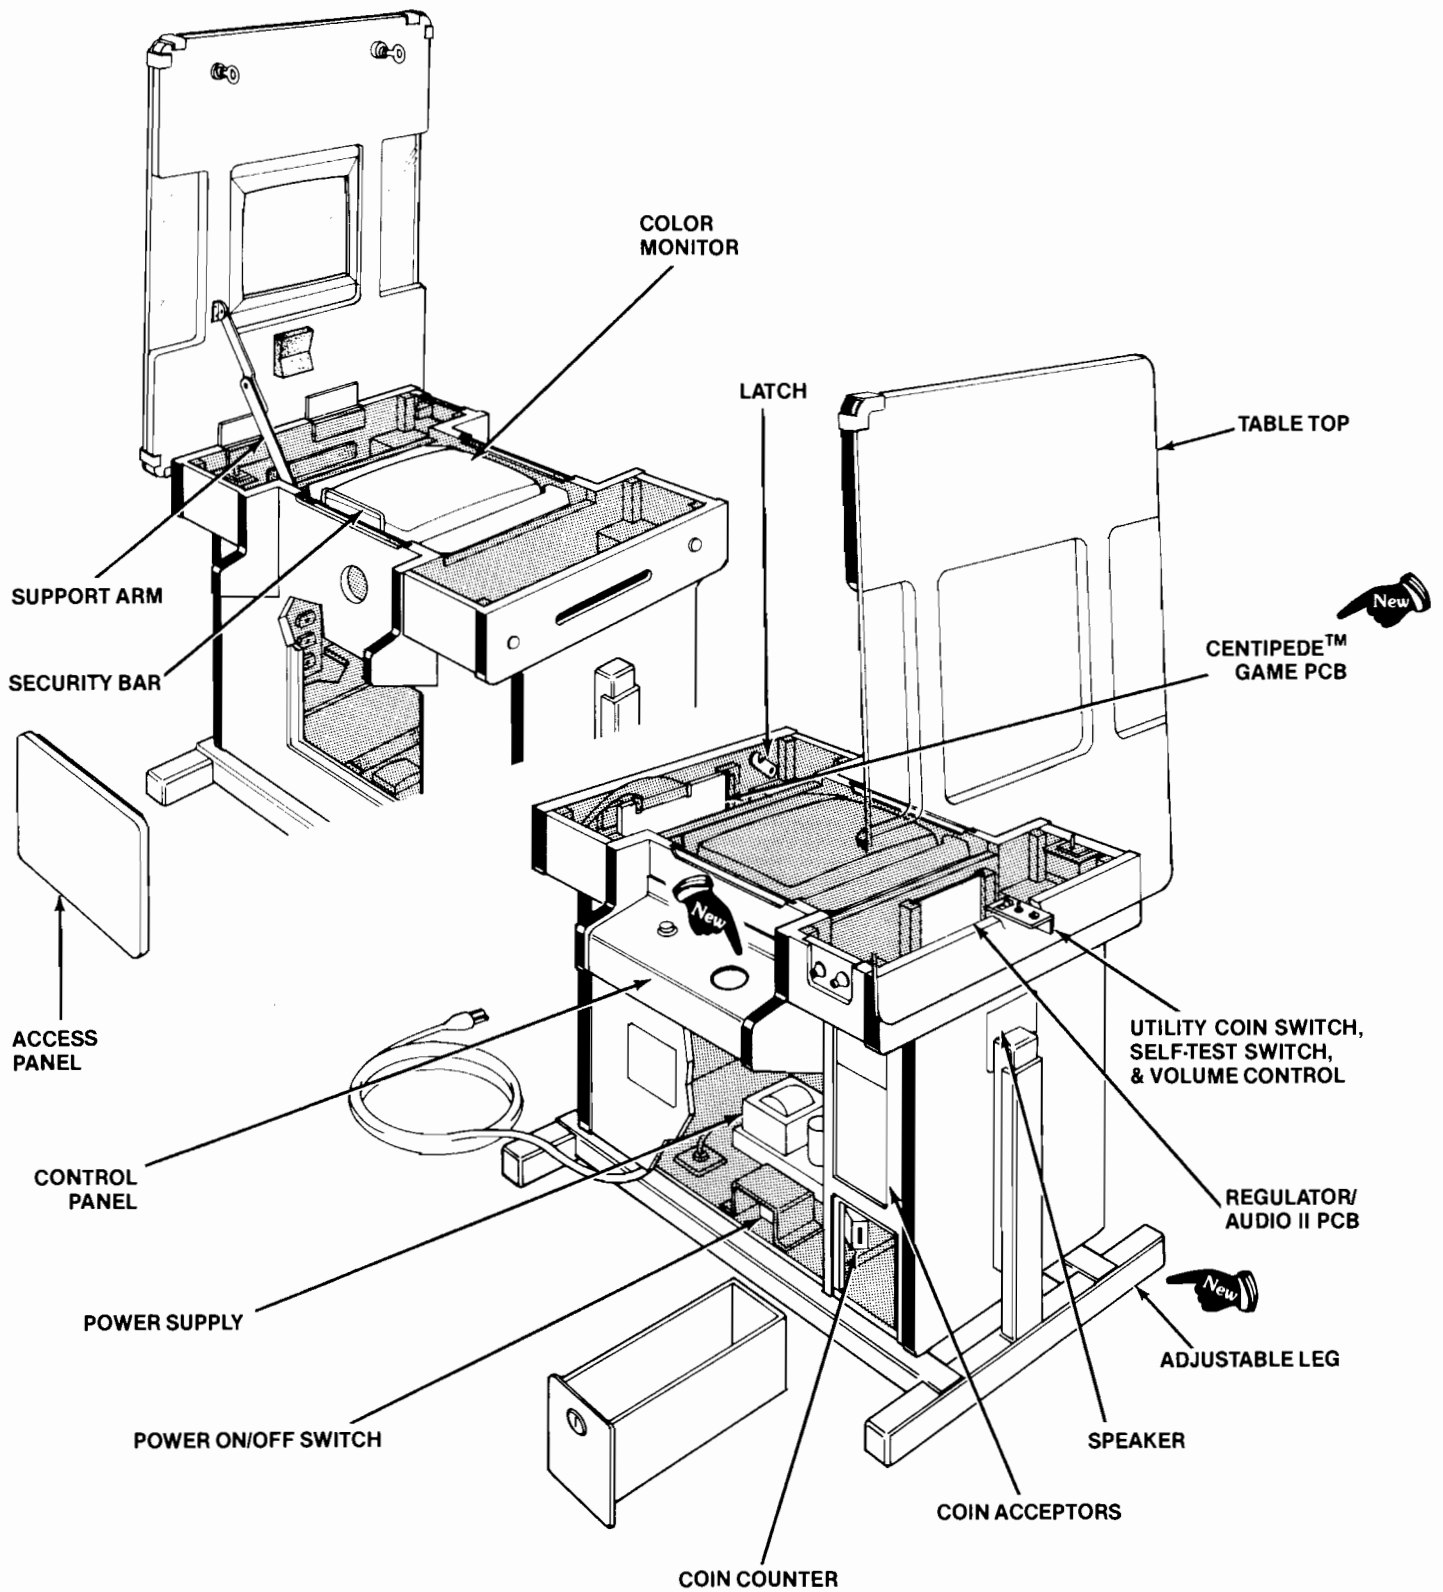


Figure 1 Overview of Game

## ! WARNING: ! SHOCK HAZARD

Connect this game only to a grounded 3-wire outlet. If you have only a 2-wire outlet, we recommend you hire a licensed electrician to install a grounded outlet. **Players may receive an electric shock if this game is not properly grounded!**

## B. Opening the Game Cabinet

### 1. Opening the Table Top

- To open the game cabinet, unlock and open the two locks at one end of the game, located immediately below the table top (see Figure 1).
- Carefully lift the table top until the support arm locks into place. **Do not jam the table top at the end of its upward swing.**

### 2. Access Panel

- To open the access panel, lift up the “U”-shaped steel security bar inside the cabinet wall.
- The access panel near the bottom of the cabinet will then come out. This small panel was designed with a bar instead of the usual lock to reduce the number of keys required for this game.

### 3. Closing the Table Top



- To close the cabinet, stand on the start-switch side of the cabinet and grasp the table top with your right hand.
- With your left hand, press the button at the middle of the support arm and push the support arm down towards the right.
- **Gently** lower the table top to the closed position.
- Lock the two latches on the left end of the cabinet, located just underneath the table top.

## C. Game Inspection

This new game is ready to play upon removal from the shipping carton. However, your careful inspection is needed to supply the final touch of quality

control. Please follow these steps to help us insure that your new game was delivered to you in good condition.

## NOTE

Do not plug the game in yet!

1. Examine the exterior of the game cabinet for dents, chips, or broken parts.
2. Unlock the table top and open the access panel of the cabinet; inspect the interior of the game as follows:
  - Check that all plug-in connectors (on the game harness) are firmly seated. Replug any connectors found unplugged. **Don't force connectors together.** The connectors are keyed so they only go on in the proper orientation. **A reversed edge connector will damage a PCB** and will void your warranty.
  - Check that all plug-in integrated circuits on the game PCB are firmly seated in their sockets.

## ! WARNING !

To avoid possible unpleasant electrical shock, do not touch internal parts of the monitor with your hands or with metal objects held in your hands!

- Note the location of the game's serial number—it is printed on the special label on the outside of the game cabinet. Verify that the serial numbers also stamped on the Centipede™ Game PCB, Regulator/Audio II PCB, power supply, and monitor are all identical. A drawing of the serial-numbered components is on the inside front cover of this manual. Please mention this number whenever you call your distributor for service.
- Check all major subassemblies such as the power supply, control panel and monitor for secure mounting.



## D. Game Installation

### Figure 2 Installation Requirements

|                |                               |
|----------------|-------------------------------|
| Power          | 135 watts                     |
| Temperature    | 0 to 38°C (32 to 100°F)       |
| Humidity       | Not over 95% relative         |
| Space Required | 62¼ × 82½ cm (24½ × 32½ in.)  |
| Game Height    | 65 to 101 cm (25¾ to 39¾ in.) |

### 1. Voltage Selection

This power supply has four colored voltage-selection plugs and operates on the line voltage of almost any country in the world.


Before plugging in your game, check your power supply. Make sure that the voltage selection plug on it is correct for your location's line voltage. Check the wire color on the plug and see if it is correct per Figure 3.

### 2. Interlock and Power On/Off Switches

To minimize the hazard of electrical shock while working on the inside of the game cabinet, an interlock switch has been installed under the table top (see Figure 4). This switch removes all AC line power from the game circuitry when the table top is opened.

Check for proper operation of the interlock switch by performing the following steps:

- Be sure the table top is closed.
- Plug the AC line power cord into an AC outlet.
- Set the power on/off switch to the "on" position. Within 30 seconds the monitor should display a picture.
- Slowly open the table top. The monitor picture should disappear when the top is lifted approximately 2½ cm (1 inch).
- If the results of the preceding step are satisfactory, the interlock switch is operating properly. If the monitor doesn't go off as described, check to see if the interlock switch is broken from its mounting or stuck in the "on" position.

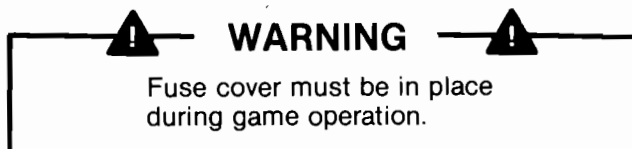

| Line Voltage Range |
|--------------------|
| 90-110 VAC (100)   |
| 105-135 VAC (120)  |
| 200-240 VAC (220)  |
| 220-260 VAC (240)  |

| Voltage Selection Plug Color |
|------------------------------|
| Violet                       |
| Yellow                       |
| Blue                         |
| Brown                        |


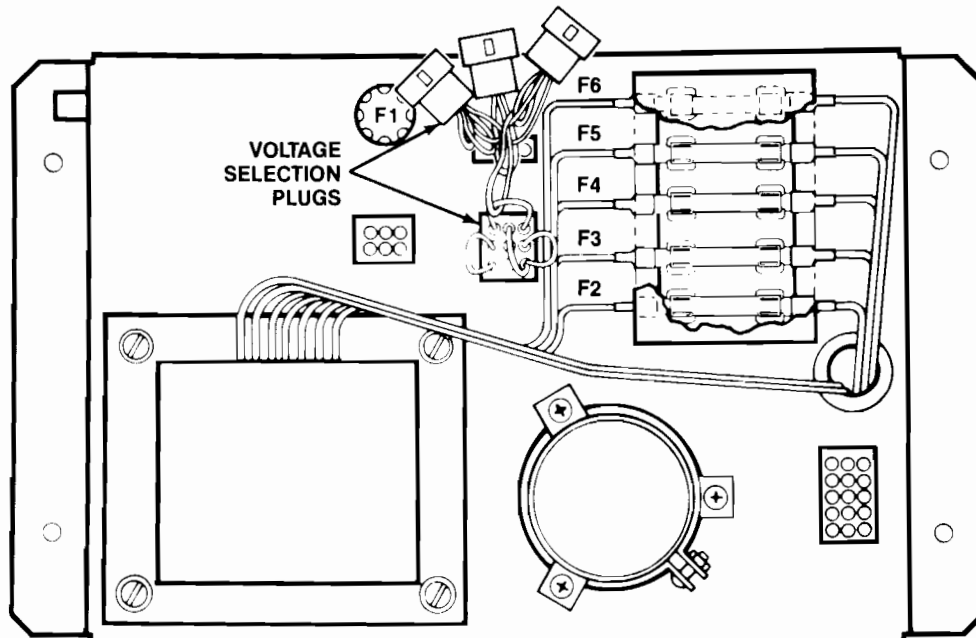


Figure 3 Voltage Plug Selection

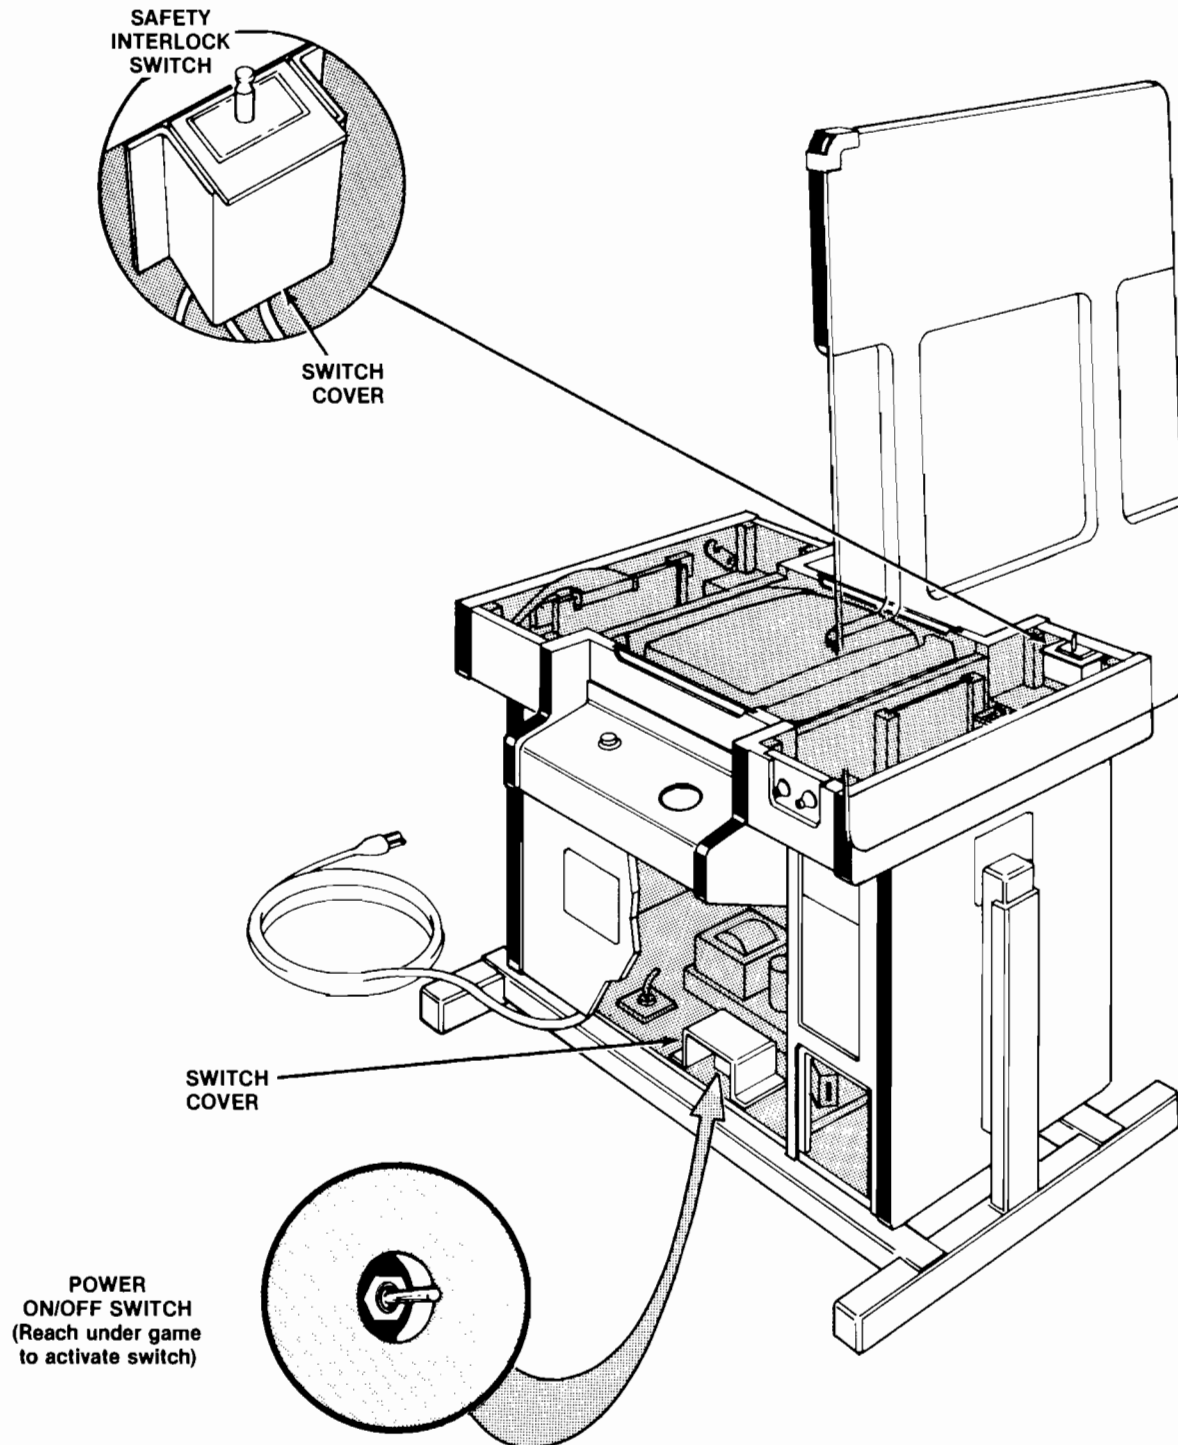

**Figure 4 Interlock and Power On/Off Switches**

- Remove or empty the coin box. Loose coins may slide out of the coin box and into the game cabinet.
- Lay the table on its side. Place a support (the coin box, books or tool box) under the recessed side of the cabinet.
- Loosen the two Allen-head screws on each leg. Grasp the legs and slide them into the desired position. Then tighten the screws.

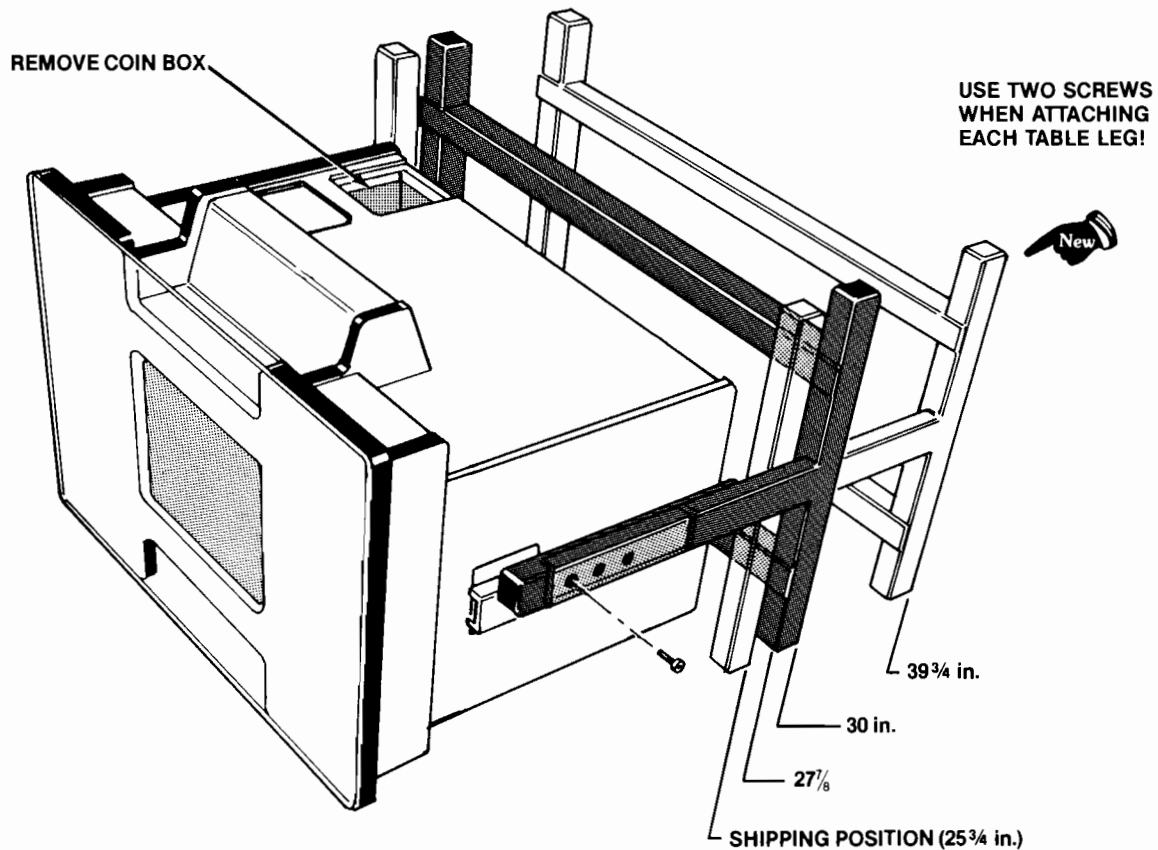


Figure 5 Adjusting the Table Legs

## E. Adjusting the Table Legs



This cocktail-table game is designed for four adjustable heights—65, 70, 76 or 101 cm (25 <sup>3</sup>/<sub>4</sub>, 27 <sup>7</sup>/<sub>8</sub>, 30 or 39 <sup>3</sup>/<sub>4</sub> inches). To adjust the table height, refer to Figure 5.

### NOTE

To ensure cabinet strength, you **must** use two screws when attaching each table leg. Using only one screw may result in damage to the cabinet wall when you move the cabinet across the floor.




## F. Self-Test Procedure

This game will test itself and provide data to demonstrate that the game's circuitry and controls are operating properly. The data is provided on the monitor, light-emitting-diode switches, and game speaker; no additional equipment is necessary.

Part of the self-test procedure includes a display of the operator-selectable game options. Therefore, we suggest you run the self-test procedure anytime you need to change the game's options.

To run the self-test, follow the instructions outlined in Figure 7.

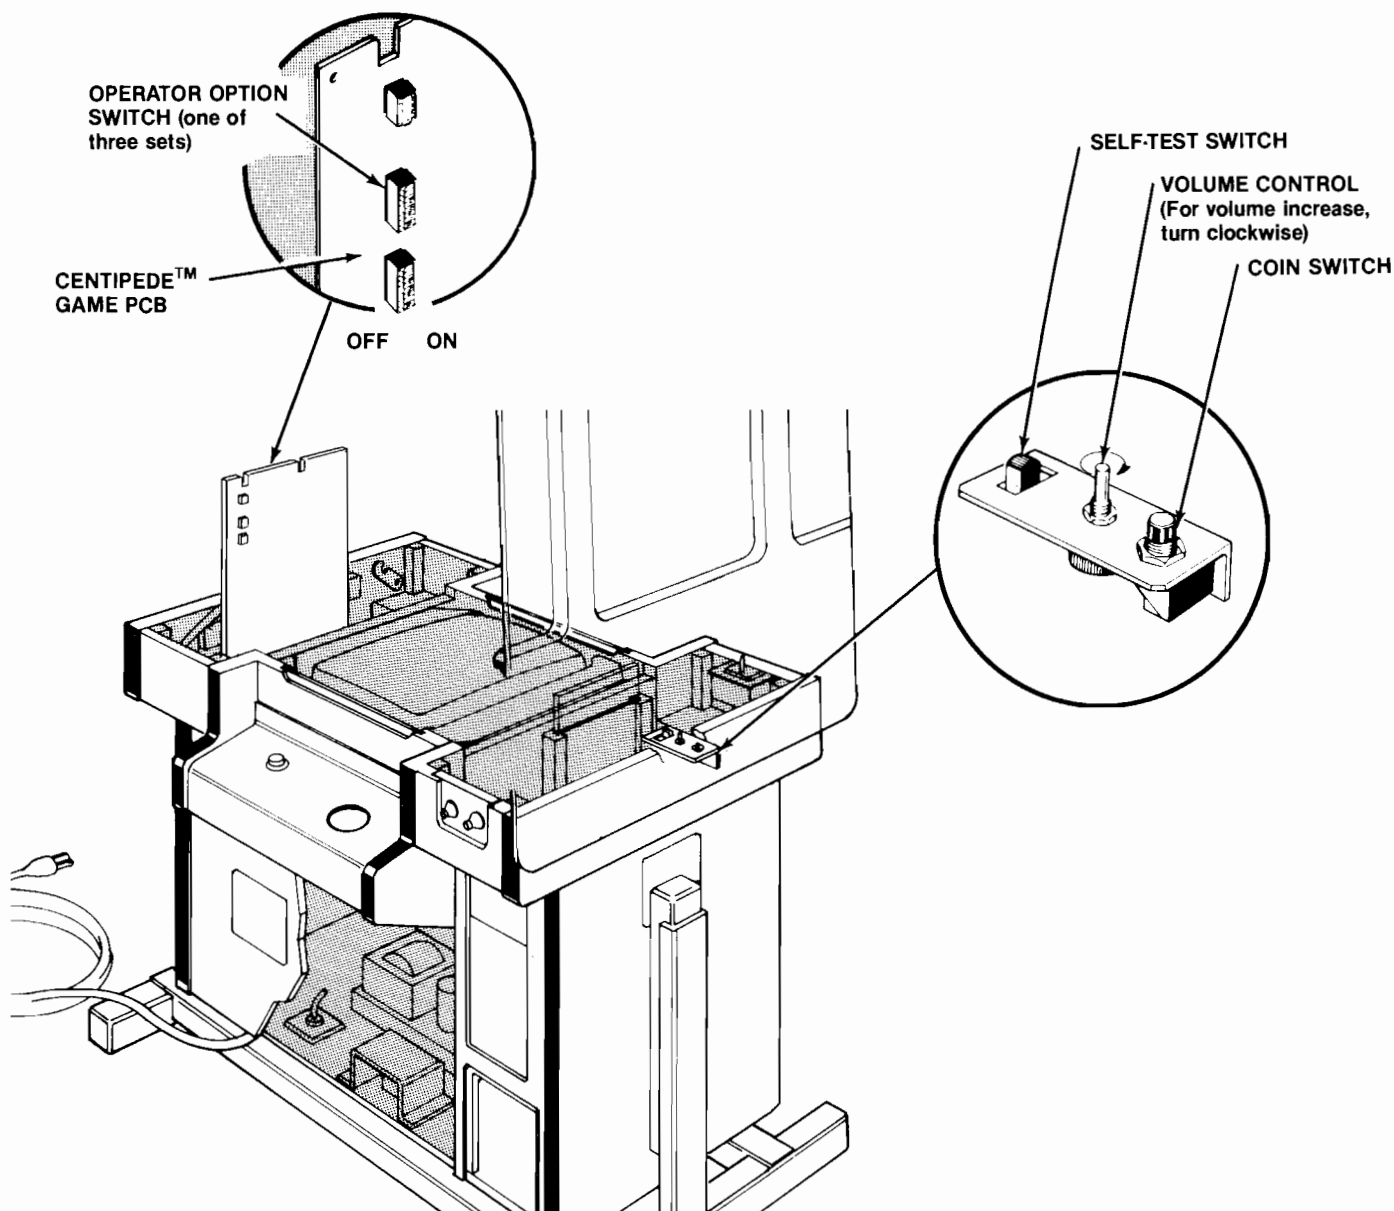


**Figure 6 Location of Self-Test Switch, Volume Control and Option Switches**

## Figure 7 Self-Test Procedure

| Instruction                                                                                                                                                                                                                                                                                                                                                                                                             | Results if Test Passes (if results are <i>not</i> as indicated, see list of failures that follows)                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1. Begin:</b><br>Set self-test switch to <b>on</b> position (see Figure 6).                                                                                                                                                                                                                                                                                                                                          | The monitor displays the picture below. The game produces no sound at all. The two start-switch LEDs will stay on throughout self-test.                                                |
| <b>2. Trak Ball Test:</b><br>Roll the Trak Ball controls in all directions.                                                                                                                                                                                                                                                                                                                                             | The centipede head moves around on the screen in directions corresponding to Trak Ball control.                                                                                        |
| <b>3. Switch Test:</b><br>One after another, activate and release all control-panel switches, the slam switch, and coin switches.*                                                                                                                                                                                                                                                                                      | As long as you activate (close) each switch, you'll hear a high beep.                                                                                                                  |
| <b>4. Audio I/O Chip Test:</b><br>One after another, press and hold 2 of the control-panel switches and at least one of the coin switches.                                                                                                                                                                                                                                                                              | Volume increases and pitch decreases with each additional switch that is activated.                                                                                                    |
| <b>5. Audio I/O Channel Test:</b><br>Press 1-player start button four times.                                                                                                                                                                                                                                                                                                                                            | You'll hear a high beep for each press of the button.                                                                                                                                  |
| <b>6. Background Color Test:</b><br>Press 1-player start button at least 16 times.                                                                                                                                                                                                                                                                                                                                      | Background color changes with each press of the 1-player start button.                                                                                                                 |
| <b>7. Object Color Test:</b><br>Press 2-player start button at least 16 times.                                                                                                                                                                                                                                                                                                                                          | Objects on playfield change color.                                                                                                                                                     |
| <b>8. Moving Object Test:</b><br>Watch the screen, and move the Trak Ball around. Place the moving object in an open area of the screen. Press fire button several times.                                                                                                                                                                                                                                               | Each press of the fire button changes the moving object to another moving object. At certain points in the series, the object will disappear. This is <b>not</b> a failure indication. |
| <b>9. Erasing the High Score Table (optional)</b><br>The current three highest scores are held in permanent memory, even if the game is unplugged. If you want to erase these scores, simultaneously press either fire and two start buttons. The <b>4 FF</b> message in the upper left corner of the screen will then be displayed. The average game time data will also be erased, but still displayed on the screen. |                                                                                                                                                                                        |
| <b>10. End:</b><br>When satisfied with test, set self-test switch to <b>off</b> position.                                                                                                                                                                                                                                                                                                                               |                                                                                                                                                                                        |

\* Activate coin switches by inserting at least one coin in each coin slot. You will not trip the coin counters as long as you stay in self-test.

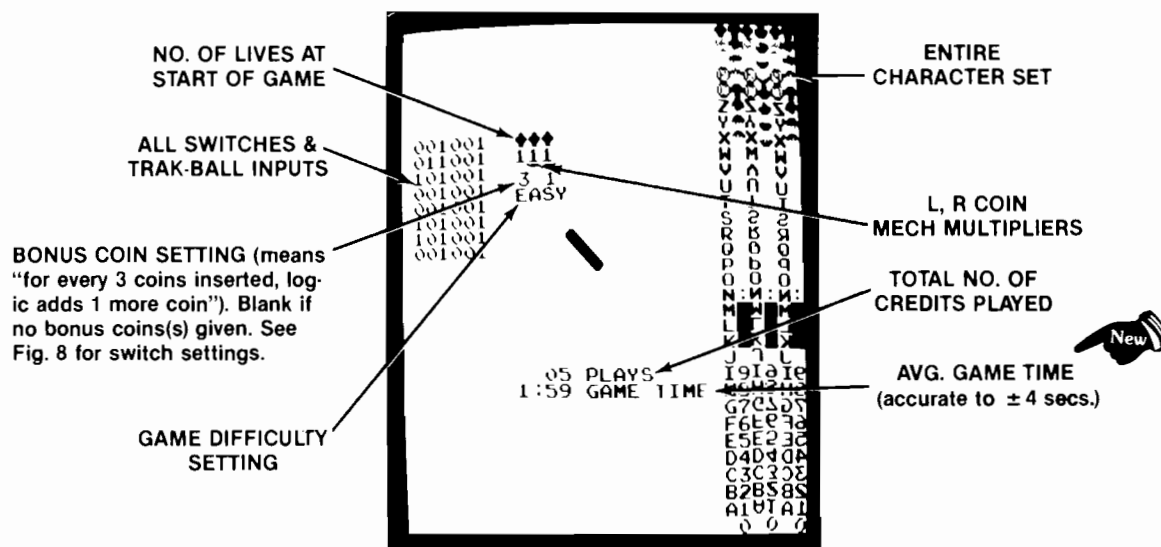

## Figure 7 Self-Test Procedure, continued

### Results if Test Fails

#### 1. Begin:

**RAM FAILURE** is indicated by one to 10 beeps. Note the number of beeps and determine which RAM may be bad. To restart the test, press the reset pushbutton on the game PCB, or set the self-test switch to off, then again to the on position.

| Number of Beeps Given | Possible Bad RAM Chip Location |
|-----------------------|--------------------------------|
| 1                     | H2                             |
| 2                     | F2                             |
| 3                     | K7                             |
| 4                     | K5                             |
| 5                     | L7                             |
| 6                     | L5                             |
| 7                     | M7                             |
| 8                     | M5                             |
| 9                     | N7                             |
| 10                    | N5                             |

Any bad RAM must be replaced before the computer can check the other RAMs, as well as continue with the self-test.

**ROM/PROM FAILURE** is indicated by two groups of numbers in the upper left corner of the screen. The number at the far left indicates the location of the failing PROM/ROM(s). Identify the bad ROM/PROM with the table below. If the screen displays "garbage," or the logic produces strange audio or randomly activates the coin counters, the chip at location J1 is probably bad.

Ignore the hexadecimal numbers just to the right of the chip-location number.

| Displayed Number | Failing ROM/PROM Chip Location |
|------------------|--------------------------------|
| 0                | D1                             |
| 1                | E1                             |
| 2                | F/H1                           |
| 3 or "garbage"   | J1                             |
| 4*               | E5*                            |
| 5                | B/C/D3                         |

\*If you replace or erase this ROM, the number 4 FF will be displayed throughout the self-test. The next time you enter self-test, the 4 disappears after a game is played. Otherwise the self-test will continue to display the numbers 4 FF.

#### 2. Trak Ball Test:

The character doesn't move in same direction as ball, jumps rather than moves smoothly, or doesn't move at all. One of the Coupler PCBs in either Trak Ball control may be bad, harness wires or connector may be loose, Trak Ball reading circuitry on Game PCB may be bad, or Trak Ball bearings may need oiling.

#### 3. Switch Test:

Sound is constantly on, even though you are not activating any switch. Or, no beep is given for any switch, or LED is dark. Indicates a bad switch, loose harness wires, bad LED-driving circuitry, volume turned all the way down, or loose connector.

#### 4. Audio I/O Chip Test:

No increase in volume or decrease in pitch indicates bad custom audio I/O chip at location B/C/D3.

#### 5. Audio I/O Channel Test:

On one out of the four activations, no audio is produced. Indicates one channel is bad in the custom I/O audio chip at location B/C/D3 (replace entire chip).

#### 6. Background Color Test:


Background doesn't change color, or doesn't display all 16 colors. Indicates bad color RAM chip. (RAM failure would have been indicated earlier with from 3 through 10 beeps.)

#### 7. Object Color Test:

Objects don't change color, or don't display all 16 colors. RAM failure.

#### 8. Moving Object Test:

Object doesn't change to another object. ROM/RAM failure.

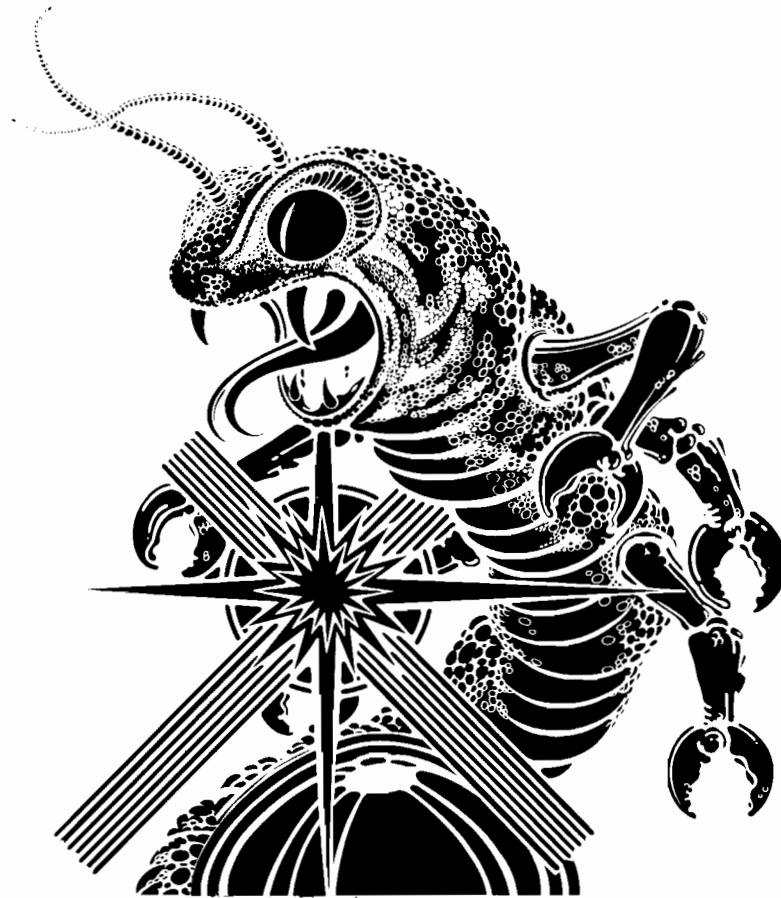

## G. Option Switch Settings

### 1. Bonus Play Feature

Centipede™ offers a bonus play for certain combinations of coins inserted. This bonus feature is operator-selectable, meaning you may choose to offer it or not.

With your game set at 25¢ per play, players who deposit four successive quarters or a \$1.00 coin, then press the start button, can receive a bonus coin. Therefore, players can receive 5 plays for \$1.00.

This bonus feature encourages players to insert more money than just the minimum 25¢ you could require for one game. Various other bonuses are also available (see Figure 9).

### 2. Coin Mechanism Multipliers

The Atari coin acceptor mount for this game is available with about a dozen different mechanisms. You may have both mechanisms accept the same or different denominations.

Regardless of the type of mechanism you install, you must correctly set the mech “multipliers” on the game PCB. The multipliers determine how much each mechanism will be worth to the game’s logic.

The basic unit of measurement is 25¢, which equals a multiplier of  $\times 1$ . Therefore, if you have a 25¢/\$1 coin acceptors, you will probably want to set the left and right option-switch multipliers at  $\times 1 / \times 4$ .

You can set these multipliers with toggles 3 thru 5 on the Centipede PCB switch assembly at location N8. For exact settings of these toggles, refer to Figure 9.

### 3. Examples of Game Price Settings

Figure 9 explains the options, giving twelve examples of the most common U.S. situations. The toggles mentioned are all in the switch at location N8; they **only** relate to game price, coin mechanism multipliers, and bonus “coins” for inserting multiple quarters or the \$1.00 coin. You should set the toggles relating to other functions as you see fit, although Figures 8, 9, and 10 provide “\$” symbols indicating Atari’s recommendations.

## Figure 8 Game Option Settings

To change toggle positions on the switch assemblies, you need not remove the game PCB. The switches, usually colored blue, are easily accessible when the Centipede Game PCB is mounted in place.

When changing the options, verify proper results on the monitor display **by performing the self-test**. Note that changing an option on any of the following eight toggles will **not** cause an immediate change on the monitor screen during the attract mode.


| Toggle Settings of 8-Toggle Switch on Centipede Game PCB (at N9)<br>(CENTER switch assembly when PCB is in game) |     |     |     |     |     |     |     | Option                       |
|------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|-----|-----|-----|------------------------------|
| 8                                                                                                                | 7   | 6   | 5   | 4   | 3   | 2   | 1   |                              |
|                                                                                                                  |     |     |     |     |     | On  | On  | English \$                   |
|                                                                                                                  |     |     |     |     |     | On  | Off | German                       |
|                                                                                                                  |     |     |     |     |     | Off | On  | French                       |
|                                                                                                                  |     |     |     |     |     | Off | Off | Spanish                      |
|                                                                                                                  |     |     |     | On  | On  |     |     | 2 lives per game             |
|                                                                                                                  |     |     |     | On  | Off |     |     | 3 lives per game \$          |
|                                                                                                                  |     |     |     | Off | On  |     |     | 4 lives per game             |
|                                                                                                                  |     |     |     | Off | Off |     |     | 5 lives per game             |
|                                                                                                                  |     | On  | On  |     |     |     |     | Bonus life granted at every: |
|                                                                                                                  |     | On  | Off |     |     |     |     | 10,000 points                |
|                                                                                                                  |     | Off | On  |     |     |     |     | 12,000 points \$             |
|                                                                                                                  |     | Off | Off |     |     |     |     | 15,000 points                |
|                                                                                                                  |     |     |     |     |     |     |     | 20,000 points                |
|                                                                                                                  | On  |     |     |     |     |     |     | Hard game difficulty*        |
|                                                                                                                  | Off |     |     |     |     |     |     | Easy game difficulty* \$     |
| On                                                                                                               |     |     |     |     |     |     |     | 1-credit minimum \$          |
| Off                                                                                                              |     |     |     |     |     |     |     | 2-credit minimum             |

\$ Manufacturer's suggested settings

\*Refer to Section **F. Game Play**, in this manual for information on game difficulty.

For pricing for "credits," see Figure 9.

Changing toggles 3-7 erases the high score table.

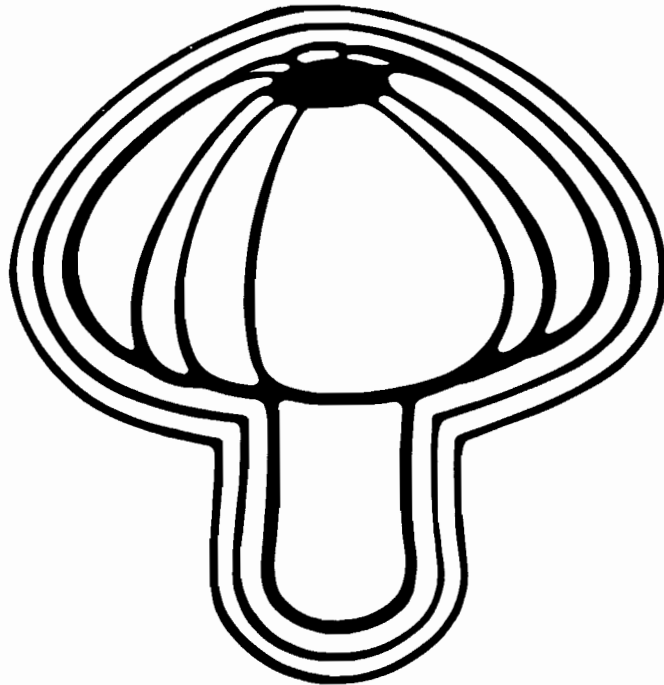

## Figure 9 Game Price Settings

The white block below contains Atari's suggested settings. All numbers 1 thru 8 are toggle settings on the 8-toggle switch at location N8, on the Centipede™ game PCB (the **LEFT** switch assembly).

Circled numbers refer to game pricing labels you should use with each situation (labels are on the following page). Use the label no. 6 (indicated with ⑥) only if you set toggle 8 at PCB switch assembly N9 of **off**.

### 50¢ PER CREDIT:

|                          | No bonus                                                                                                                                                                                                                                 | Bonus<br>\$1.00 = 3 plays | Bonus<br>\$.75 = 2 plays<br>\$1.00 = 3 plays |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|----------------------------------------------|---|---|-----|-----|-----|-----|---|---|---|---|-----|-----|----|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|-----|----|----|-----|---|---|---|---|-----|-----|----|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|-----|-----|----|-----|---|---|---|---|-----|-----|----|----|
| 25¢/25¢<br>Mechanisms    | ① <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>Off</td><td>Off</td></tr> <tr><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>On</td></tr> </table> | 8                         | 7                                            | 6 | 5 | Off | Off | Off | Off | 4 | 3 | 2 | 1 | Off | Off | On | On | ③ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>Off</td></tr> <tr><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>On</td></tr> </table> | 8 | 7 | 6 | 5 | Off | On | On | Off | 4 | 3 | 2 | 1 | Off | Off | On | On | ④ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> <tr><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>On</td></tr> </table> | 8 | 7 | 6 | 5 | Off | Off | On | Off | 4 | 3 | 2 | 1 | Off | Off | On | On |
| 8                        | 7                                                                                                                                                                                                                                        | 6                         | 5                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | Off                       | Off                                          |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 4                        | 3                                                                                                                                                                                                                                        | 2                         | 1                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | On                        | On                                           |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 8                        | 7                                                                                                                                                                                                                                        | 6                         | 5                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | On                                                                                                                                                                                                                                       | On                        | Off                                          |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 4                        | 3                                                                                                                                                                                                                                        | 2                         | 1                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | On                        | On                                           |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 8                        | 7                                                                                                                                                                                                                                        | 6                         | 5                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | On                        | Off                                          |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 4                        | 3                                                                                                                                                                                                                                        | 2                         | 1                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | On                        | On                                           |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 25¢/\$1.00<br>Mechanisms | ① <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>Off</td><td>Off</td></tr> <tr><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>On</td></tr> </table>  | 8                         | 7                                            | 6 | 5 | Off | Off | Off | Off | 4 | 3 | 2 | 1 | Off | On  | On | On | ③ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>Off</td></tr> <tr><td>⑤</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>On</td></tr> </table>  | 8 | 7 | 6 | 5 | Off | On | On | Off | ⑤ | 4 | 3 | 2 | Off | On  | On | On | ④ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> <tr><td>⑤</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>On</td></tr> </table>  | 8 | 7 | 6 | 5 | Off | Off | On | Off | ⑤ | 4 | 3 | 2 | Off | On  | On | On |
| 8                        | 7                                                                                                                                                                                                                                        | 6                         | 5                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | Off                       | Off                                          |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 4                        | 3                                                                                                                                                                                                                                        | 2                         | 1                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | On                                                                                                                                                                                                                                       | On                        | On                                           |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 8                        | 7                                                                                                                                                                                                                                        | 6                         | 5                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | On                                                                                                                                                                                                                                       | On                        | Off                                          |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| ⑤                        | 4                                                                                                                                                                                                                                        | 3                         | 2                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | On                                                                                                                                                                                                                                       | On                        | On                                           |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| 8                        | 7                                                                                                                                                                                                                                        | 6                         | 5                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | Off                                                                                                                                                                                                                                      | On                        | Off                                          |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| ⑤                        | 4                                                                                                                                                                                                                                        | 3                         | 2                                            |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |
| Off                      | On                                                                                                                                                                                                                                       | On                        | On                                           |   |   |     |     |     |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                        |   |   |   |   |     |    |    |     |   |   |   |   |     |     |    |    |                                                                                                                                                                                                                                         |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |    |

### 25¢ PER CREDIT:

|                          | No bonus                                                                                                                                                                                                                                  | Bonus<br>\$.50 = 3 plays | Bonus<br>\$1.00 = 5 plays |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|---------------------------|---|---|-----|-----|-----|-----|---|---|---|---|-----|-----|----|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|-----|-----|----|-----|---|---|---|---|-----|-----|----|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|-----|----|-----|-----|---|---|---|---|-----|-----|----|-----|
| 25¢/25¢<br>Mechanisms    | ② <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>Off</td><td>Off</td></tr> <tr><td>⑥</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> </table> | 8                        | 7                         | 6 | 5 | Off | Off | Off | Off | ⑥ | 4 | 3 | 2 | Off | Off | On | Off | ⑥ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> <tr><td>⑦</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> </table> | 8 | 7 | 6 | 5 | Off | Off | On | Off | ⑦ | 4 | 3 | 2 | Off | Off | On | Off | ⑥ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>On</td><td>Off</td><td>Off</td></tr> <tr><td>⑦</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> </table> | 8 | 7 | 6 | 5 | Off | On | Off | Off | ⑦ | 4 | 3 | 2 | Off | Off | On | Off |
| 8                        | 7                                                                                                                                                                                                                                         | 6                        | 5                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | Off                      | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| ⑥                        | 4                                                                                                                                                                                                                                         | 3                        | 2                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| 8                        | 7                                                                                                                                                                                                                                         | 6                        | 5                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| ⑦                        | 4                                                                                                                                                                                                                                         | 3                        | 2                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| 8                        | 7                                                                                                                                                                                                                                         | 6                        | 5                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | On                                                                                                                                                                                                                                        | Off                      | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| ⑦                        | 4                                                                                                                                                                                                                                         | 3                        | 2                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| 25¢/\$1.00<br>Mechanisms | ② <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>Off</td><td>Off</td></tr> <tr><td>⑥</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>Off</td></tr> </table>  | 8                        | 7                         | 6 | 5 | Off | Off | Off | Off | ⑥ | 4 | 3 | 2 | Off | On  | On | Off | ⑥ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>Off</td><td>On</td><td>Off</td></tr> <tr><td>⑦</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>Off</td></tr> </table>  | 8 | 7 | 6 | 5 | Off | Off | On | Off | ⑦ | 4 | 3 | 2 | Off | On  | On | Off | ⑥ <table> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> <tr><td>Off</td><td>On</td><td>Off</td><td>Off</td></tr> <tr><td>⑦</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>Off</td><td>On</td><td>On</td><td>Off</td></tr> </table>  | 8 | 7 | 6 | 5 | Off | On | Off | Off | ⑦ | 4 | 3 | 2 | Off | On  | On | Off |
| 8                        | 7                                                                                                                                                                                                                                         | 6                        | 5                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | Off                      | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| ⑥                        | 4                                                                                                                                                                                                                                         | 3                        | 2                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | On                                                                                                                                                                                                                                        | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| 8                        | 7                                                                                                                                                                                                                                         | 6                        | 5                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | Off                                                                                                                                                                                                                                       | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| ⑦                        | 4                                                                                                                                                                                                                                         | 3                        | 2                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | On                                                                                                                                                                                                                                        | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| 8                        | 7                                                                                                                                                                                                                                         | 6                        | 5                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | On                                                                                                                                                                                                                                        | Off                      | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| ⑦                        | 4                                                                                                                                                                                                                                         | 3                        | 2                         |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |
| Off                      | On                                                                                                                                                                                                                                        | On                       | Off                       |   |   |     |     |     |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |     |    |     |   |   |   |   |     |     |    |     |                                                                                                                                                                                                                                          |   |   |   |   |     |    |     |     |   |   |   |   |     |     |    |     |

## Figure 9 Game Price Settings, continued

For your information, we have defined below the switch settings for those options relating to game price, coin mechanism multipliers, and bonus play. This information is useful in case you need to temporarily set the Centipede™ game on free play, or if you have German coin mechanisms in your door.

To achieve bonus plays, all coins must be inserted before pressing the start button. The label no. 6 shown below should be used **only** if you set toggle 8 at PCB switch assembly N9 to **off**.




| Toggle Settings of 8-Toggle Switch on Centipede PCB (at N8—LEFT switch when PCB is in game) |     |     |     |     |     |     |     | Option                                                     |
|---------------------------------------------------------------------------------------------|-----|-----|-----|-----|-----|-----|-----|------------------------------------------------------------|
| 8                                                                                           | 7   | 6   | 5   | 4   | 3   | 2   | 1   |                                                            |
|                                                                                             |     |     |     |     |     | On  | On  | Free play                                                  |
|                                                                                             |     |     |     |     |     | On  | Off | 1 coin* for 2 credits                                      |
|                                                                                             |     |     |     |     |     | Off | On  | 1 coin* for 1 credit \$                                    |
|                                                                                             |     |     |     |     |     | Off | Off | 2 coins* for 1 credit                                      |
|                                                                                             |     |     |     | On  | On  |     |     | Right coin mech × 1 \$                                     |
|                                                                                             |     |     |     | On  | Off |     |     | Right coin mech × 4                                        |
|                                                                                             |     |     |     | Off | On  |     |     | Right coin mech × 5                                        |
|                                                                                             |     |     |     | Off | Off |     |     | Right coin mech × 6                                        |
|                                                                                             |     |     | On  |     |     |     |     | Left coin mech × 1 \$                                      |
|                                                                                             |     |     | Off |     |     |     |     | Left coin mech × 2                                         |
| On                                                                                          | On  | On  |     |     |     |     |     | No bonus coins \$                                          |
| On                                                                                          | On  | Off |     |     |     |     |     | For every 2 coins* inserted, game logic adds 1 more coin*  |
| On                                                                                          | Off | On  |     |     |     |     |     | For every 4 coins* inserted, game logic adds 1 more coin*  |
| On                                                                                          | Off | Off |     |     |     |     |     | For every 4 coins* inserted, game logic adds 2 more coins* |
| Off                                                                                         | On  | On  |     |     |     |     |     | For every 5 coins* inserted, game logic adds 1 more coin*  |
| Off                                                                                         | On  | Off |     |     |     |     |     | For every 3 coins* inserted, game logic adds 1 more coin*  |

\*In the U.S., a "coin" is defined as 25¢. In Germany a "coin" is 1 DM.

\$ Manufacturer's suggested settings

To achieve bonus plays, all coins must be inserted before pressing start button.

### Game Pricing Labels:

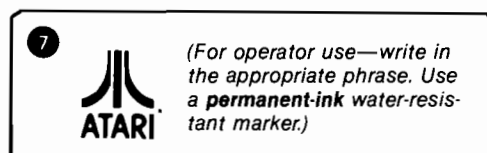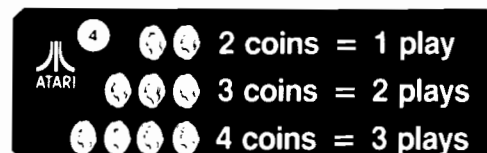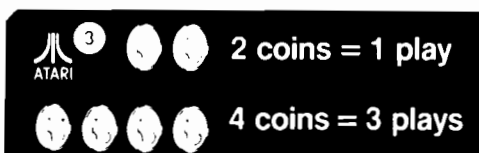



## Figure 10 Coin Counter Option Settings

[These toggles determine which coin mechanisms activate which counters]

| Toggle Settings of 4-Toggle Switch on Game PCB (N11) |          |     |     | Two coin acceptors in the coin door:                      | Two coin acceptors and a push-button utility coin switch in the game:                                                                                   | Three coin acceptors in the coin door:                                                                                                                     |
|------------------------------------------------------|----------|-----|-----|-----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4                                                    | 3        | 2   | 1   |                                                           |                                                                                                                                                         |                                                                                                                                                            |
| Not Used                                             | Not Used | On  | On  | Both acceptors activate all coin counters simultaneously. | <i>Do not use this setting.</i>                                                                                                                         | All 3 are same denomination and they activate all coin counters simultaneously.                                                                            |
|                                                      |          | On  | Off | Both acceptors activate 2 counters separately.            | <i>Do not use this setting.</i>                                                                                                                         | Left and center acceptor activate one coin counter; right acceptor activates another coin counter.                                                         |
|                                                      |          | Off | On  | Both acceptors activate all coin counters simultaneously. | Utility coin switch will not activate a coin counter, if you do not hook it up. Both acceptors activate all coin counters simultaneously.               | Left acceptor activates one coin counter; center and right acceptor activate another coin counter. <i>Not for any currently designed 3-mech coin door.</i> |
|                                                      |          | Off | Off | Both acceptors activate 2 counters separately.            | Utility coin switch will not activate a coin counter, if you do not hook it up. Left and right acceptors activate 2 coin counters separately. <b>\$</b> | Left, center and right acceptors activate 3 coin counters separately.                                                                                      |


**\$** Manufacturer's suggested settings

## H. Game Play

Atari's Centipede™ is a one- or two-player game with a color raster-scan monitor. The fast-moving action includes a variety of creatures dropping down from the top of the screen or flying in from its sides, most of them to attack the player. The player's shooter is represented on the screen by a somewhat humanoid head.

The player's goal is to shoot at and destroy as many of these creatures and mushrooms as possible for a high point score, before the player's lives are used up. Players can maneuver their Trak Ball™ control anywhere within approximately the bottom fifth of the screen. However, they must move around mushrooms, since these are fixed, not "transparent", objects. A fire button shoots individual shots upwards, or fires a hail of shots if pressed constantly. (Only one shot appears on the screen at a time.)

The game has five possible modes of operation: attract, ready-to-play, play, high score initial, and self-test. Self-test is a special mode for checking the game switches and computer functions. You may enter this mode at any time. When entered, all game credits are cancelled. *Wait at least eight seconds after a game has been played before entering self-test or turning off the power.* Otherwise, you may erase the high score table.

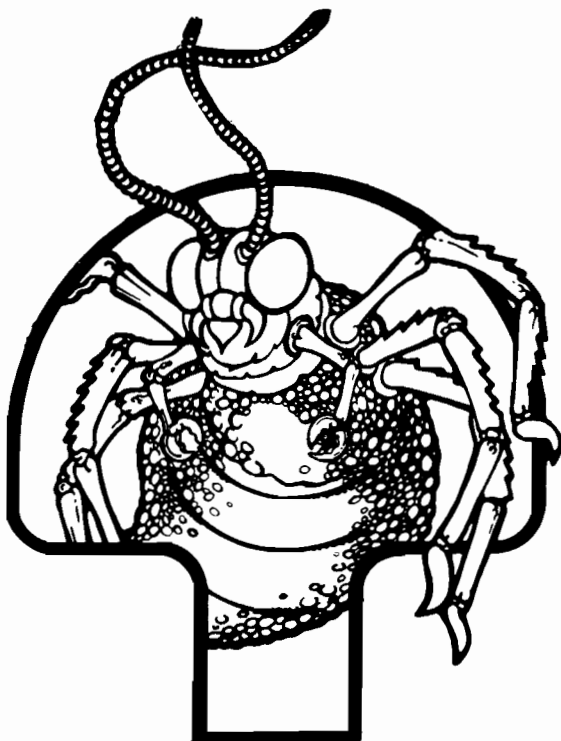

## 1. Attract Mode

The attract mode begins when power is applied to the game, after a play or high score initial mode, or after self-test. This mode is continuous and is only interrupted when a game is paid for and accepted or when in self-test. In this mode, the monitor displays two pictures simultaneously.

One of the pictures is operator-selectable for one of four languages. Placed in the center of the screen, the picture shows the high score table, game price, and the bonus-life achievement level. If the operator sets the Centipede game for free play, the game will not display a game price message.



The high score table shows the eight highest scores and their matching initials. If you erase the special "permanent" memory (see Figure 6, Self-Test Procedure), then this table will contain fictitious scores and initials. The table is redeveloped from subsequent games with scores of more than 12,102 points. Subsection 4, *High Score Initial Mode*, explains this table in more detail.

Operators may choose one- or two-credit maximums by selecting one of the option switch settings on the game PCB (see Figure 7, Game Option Settings).

If the game is set for a 2-credit minimum, that message will be displayed on the screen. (No special message appears if Centipede is set to the opposite setting, namely 1-credit minimum.)


The other picture surrounds the high score table, game price and bonus-life achievement level messages. That picture displays a typical game-play sequence, with a field of colorful mushrooms through which a centipede crawls. The spiders bounce in from the sides of the screen, and fleas occasionally drop down from the top. In addition, scorpions will cross the screen at almost any point.


In this mode, the action exactly duplicates a typical game played by a moderately skilled player: the player's shooter moves freely within the limits of motion, shooting at spiders, centipedes, fleas and scorpions. Periodically the player is "destroyed" when a flea, spider or centipede head or body collides with the player's shooter.

All the colors on the screen change with each wave. A new wave occurs when the player shoots all centipede parts remaining on the screen. At this point, a new centipede starts snaking its way down from the top of the screen.

The attract mode differs from real game play in that no head figures are shown at the top of the screen to represent the number of lives remaining, no sounds are produced, no scores are incremented, and none of the player controls work.

At any time when the game is powered up, if the slam switch is closed, you will hear a special alarm sound. This sound alerts location personnel that the game has been abused.

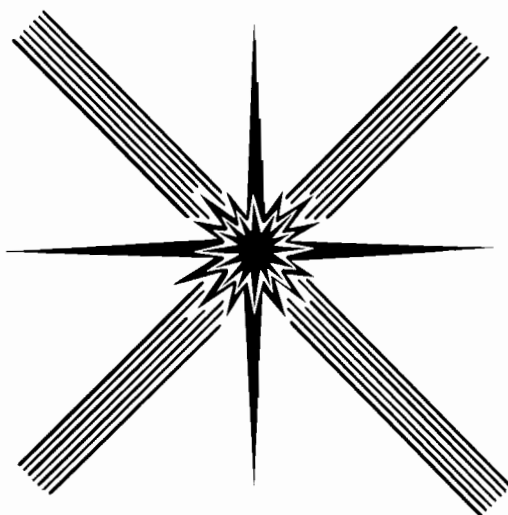

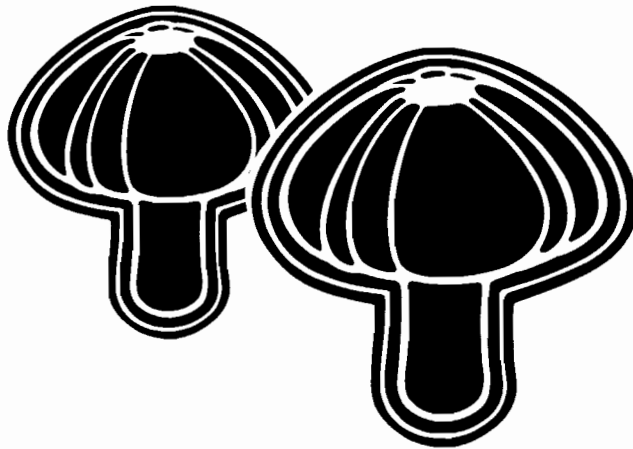

## 2. Ready-to-Play Mode

This mode begins when sufficient coins are accepted for a one- or two-player game. It ends when the 1-player start or 2-player start pushbutton is pressed. When this mode begins, the message *CREDITS* \_\_ is displayed in the middle of the screen. The pictures are otherwise the same as those shown in the attract mode.

If you select the two-credit minimum and a player inserts enough money for only one credit, the message *2 CREDITS MINIMUM* flashes on the screen until enough coins for the second credit are inserted.

In addition, *CREDITS 0½* is displayed if you have selected the option of two coins per credit, and the player has inserted only one coin. A "credit" is defined as the cost for each player to play one game. In other words, two credits will pay for:

- one player playing two games, or
- two players playing one game.

## 3. Play Mode

The play mode begins when any flashing start pushbutton is pressed. The mode ends when the player's last life is lost.

If a two-player game is being played on a cocktail-table game, the screen image will invert 180 degrees with each new life. This places the shooter immediately in front of the players.

A player's shooter is enabled at the beginning of the play mode, and the audio starts. The appropriate LED start switch will then stay lighted until the end of the game. At this point it will flash if any credit remains.

The game begins with a playfield of randomly placed mushrooms. A centipede starts snaking its way across from the center top of the screen. The centipede changes direction when it runs into a mushroom or either the left or right boundaries of the playfield.

When a centipede is shot, it breaks into two smaller ones, each with a head. Also the part of the centipede that was shot leaves a mushroom in its place on the screen. When any centipedes reach the bottom of the screen, they start back up, but remain within the area of the player's shooter (the bottom fifth of the screen).

When a large centipede (that hasn't been shot yet) reaches the bottom, it releases its tail, and this part changes into a new head. Also to provide player challenge, if a centipede is still alive when it reaches the bottom, new heads will enter the screen almost at the bottom of the sides. More of these heads will appear as time progresses.

The randomly moving spiders also appear in the first wave. The spiders can destroy a player, as well as any mushrooms they move over. This eliminates many mushroom targets for a player.

The player's shooter is moved by rotating the Mini-Trak Ball™ control. The shooter can be moved in all directions, but only within the bottom fifth of the screen. Pressing the fire button causes the shooter to fire shots upwards, either singly or in rapid-fire mode, if held down constantly.

Mushrooms count 1 point when shot, and a player must fire four shots into a mushroom before it is destroyed and disappears. Centipede body parts count 10 points each, and the elusive heads (represented with small eyes on them) are worth 100 points each. Spiders are worth 300, 600 or 900 points, depending on how close they are to the player when shot.



A bombardment of fleas starts in the second wave; as the fleas descend, they leave a trail of new mushrooms behind them.

In the second wave, the fleas appear when a certain number of mushrooms remains at the bottom of the screen. This number increases as the game progresses, meaning fleas appear more often later on in the game.

Fleas have a value of 200 points when shot, and players must hit them twice to destroy them (the first shot just speeds them up).

The scorpion enters from either side starting in the fourth wave; it moves at a relatively slow speed. Later it increases its speed. When shot, a scorpion counts 1000 points—the highest-value target of all.

As it travels across the screen, it “poisons” the mushrooms that it moves over and changes their colors. These mushrooms cause any centipedes that would collide with them to head straight towards the bottom of the screen, rather than continue snaking around. Players can stop a poisoned centipede by shooting its head.

In addition, these poisoned mushrooms as well as any partially shot mushrooms add 5 points to the player's score at the end of each life when the screen is resetting.

If the players are very skilled and earn at least 60,000 points, two things happen to increase player challenge: the fleas descend at a faster speed and the spiders restrict their movement to a smaller area at the bottom of the screen.



An important new feature of this game is the operator option for easy/hard game difficulty. In the easy game, the spider moves slowly up to a 5,000-point score, and then bounces at a higher speed. It also changes direction less often throughout the game than at the hard setting.

In the *hard* setting, the spider moves slowly only for the first 1,000 points, and then speeds up. It also changes direction more often throughout the game. In either setting, the spider always moves at a 45-degree angle or straight up and down.

Another operator option is the number of lives per game, ranging from 2 to 5 (see Figure 7 for switch settings). This number is displayed as small shooters at the top of the screen. The number is decreased by one each time a player is destroyed. The number is increased by one each time the player scores multiples of 10, 12, 15 or 20 thousand points, depending on the operator selection.

#### 4. High Score Initial Mode


If a player's score exceeds the minimum on the high score initial list, he or she may put up to three initials on this list at the end of the game. At the beginning of this mode, the characters A \_ \_ appear on the screen. The logic will also display the messages *GREAT SCORE* and *ENTER YOUR INITIALS*.

Players enter initials one character at a time, choosing from the characters A thru Z and a blank space. Pressing the first button selects the letter, and rolling the Mini-Trak Ball™ control changes the letters on the screen.

After the fire button is pressed the third time, the initials and score are transferred to the table. This table contains eight scores and appears during the attract and ready-to-play mode.


All but the highest three scores are erased whenever you enter the self-test, or press the RESET button on the game PCB, or turn off the power. The resetting replaces the lowest five scores with fictitious scores and initials.

If you erase the special “permanent” memory, the high score table is replaced with eight fictitious scores and initials. In other words, the table will always be displayed on the screen, possibly consisting of one or more realistic scores and players' initials.

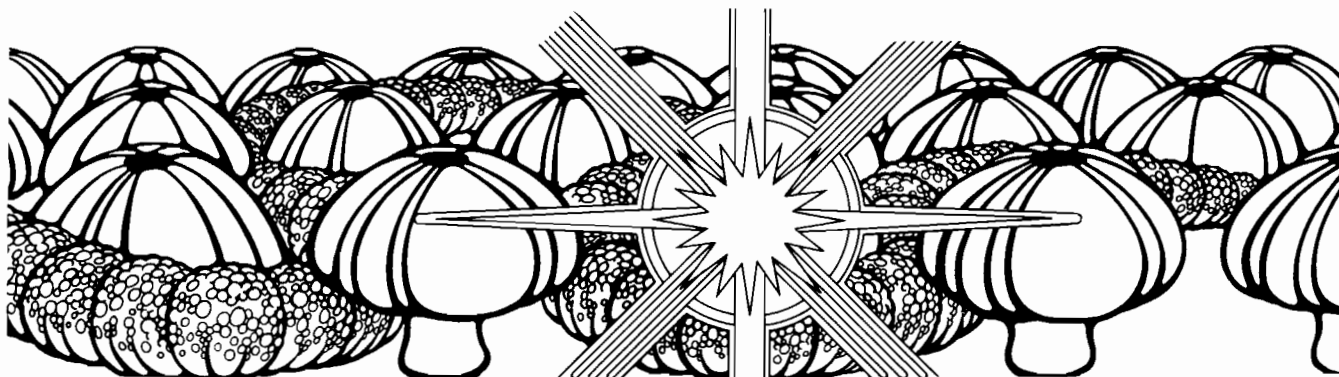



# Maintenance and Repair

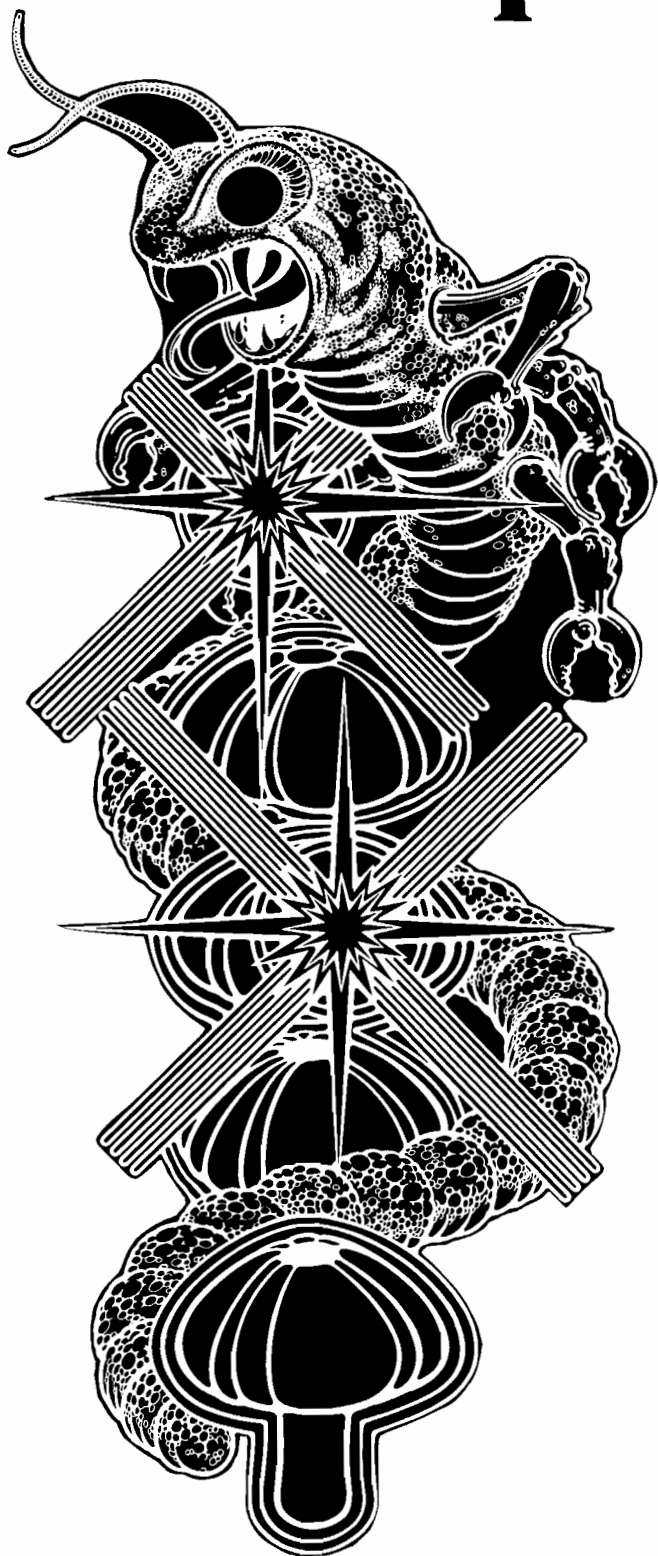


All games require certain maintenance to keep them in good working order. Clean, properly maintained games will attract players and earn more profits.

The most important maintenance item is running the self-test every time you collect money from the coin box. Just looking at a game will not tell you if Mini-Trak Ball™ controls, light-emitting-diode switches or leaf switches are broken, or if LEDs have burned out. The self-test will inform you of any of these possible problems.

Second, you should regularly clean the outside of the game and the coin mechanisms. In addition, you will need to regularly clean the leaf switch contacts and lubricate the Trak Ball control: for details see this chapter.



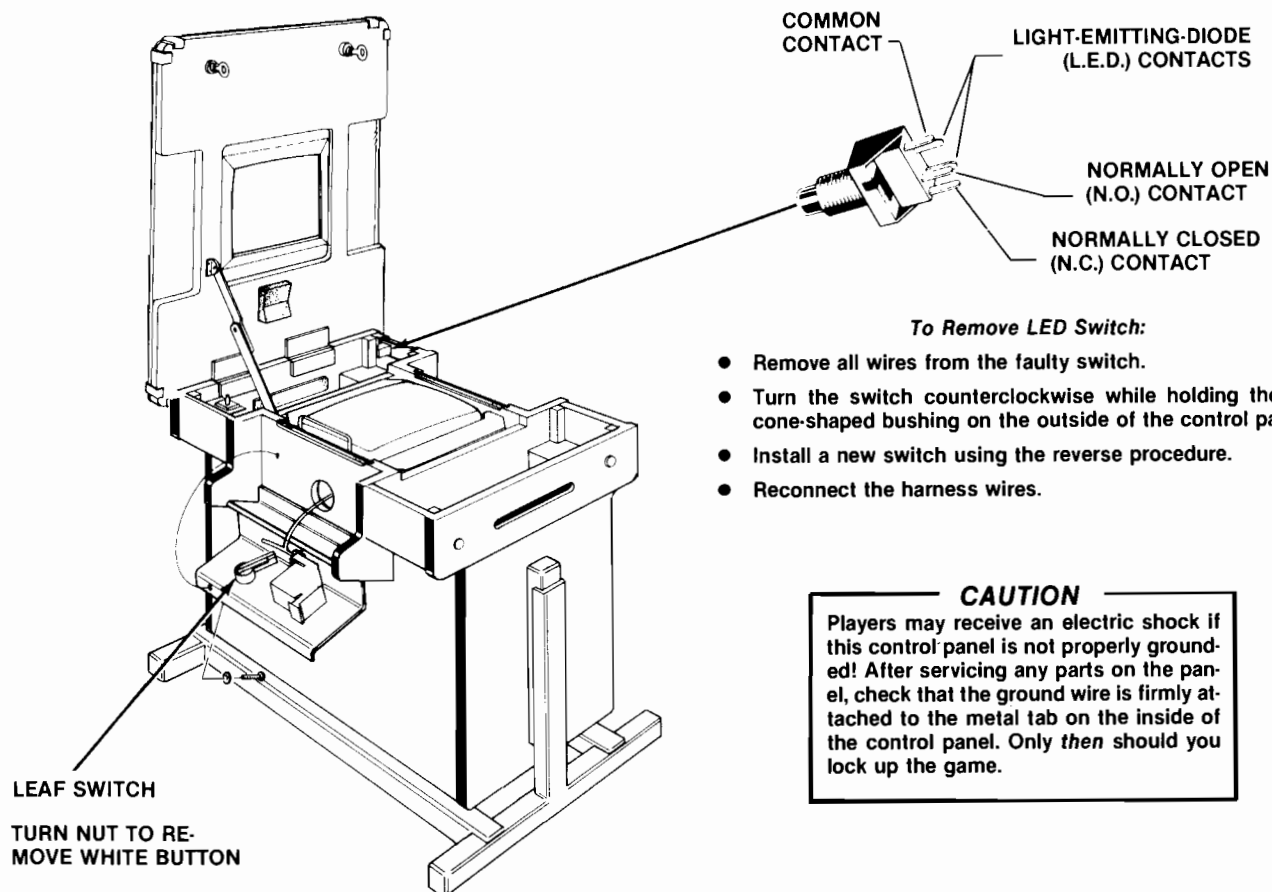

**Figure 11 Opening the Control Panel and Replacing Switches**

## A. Cleaning

The exterior of the game cabinet and the metal, glass, and plastic surfaces may be cleaned with any non-abrasive household cleaner. If desired, special coin machine cleaners that leave no residue can be obtained from your distributor.

The large table top is made of tempered glass and should be scratch-resistant. If cleaned without abrasive substances, you should hardly ever have to replace them.

## B. Fuse Replacement

This game contains six fuses—all on the power supply assembly (not including the monitor fuses). Replace fuses only with the same type as listed in Figure 24 of this manual. See the Matsushita monitor manual, TM-153, for the monitor fuse data.

## C. The Control Panel

Prior to repairing or replacing any switch or the Mini-Trak Ball™ on the control panel, unplug the game. Next, open the game top as described in *Chapter 1, Section B, Opening the Game Cabinet*.



Finally, remove the two sets of button-head screws and lock washers at the top edge of the control panel. Once this hardware is removed, the control panel will tilt toward you.

After servicing the start switches or any components on the control panels, **be sure you reconnect the harness wires to the proper termination points**, as shown in Figure 12. Otherwise the controls may not work properly—causing frustration in players and possibly reduced income from the game.

## 1. LED Start-Switch Replacement

The light-emitting diode (LED) switches near the control panel have a very low failure rate. In case a switch should ever be suspect, first test it per the description that follows. To replace the switch, refer to Figure 11.

- Remove the wires from the suspected switch.
- Set multimeter to ohms scale. Set ohms scale to  $R \times 1$ , then zero the meter.
- Connect multimeter leads to appropriate LED switch contacts (see Figure 11 for designation of switch contacts and meter lead placement).
- Check contacts (push and release the switch button) for closed and open continuity.
- If the contacts do not operate sharply or always remain closed or open, then replace the LED switch as outlined in the figure.

## 2. Leaf Switch Replacement

### NOTE

Adjust switches for a narrow gap. When a switch button is depressed, the resulting wiping action of the contacts provides a self-cleaning feature.

All five of these leaf switches operate on 5 volts at a very low current. Therefore, pitting of these switches would be extremely rare. Probably the only reason that pitting would occur is that the game is in a very high-humidity location.

**Don't burnish the switches.** Burnishing them removes their plating, thus increasing the corrosion of the contacts. **The best method of cleaning the switch contacts is to wipe them with a non-abrasive surface.** A business card works very well.

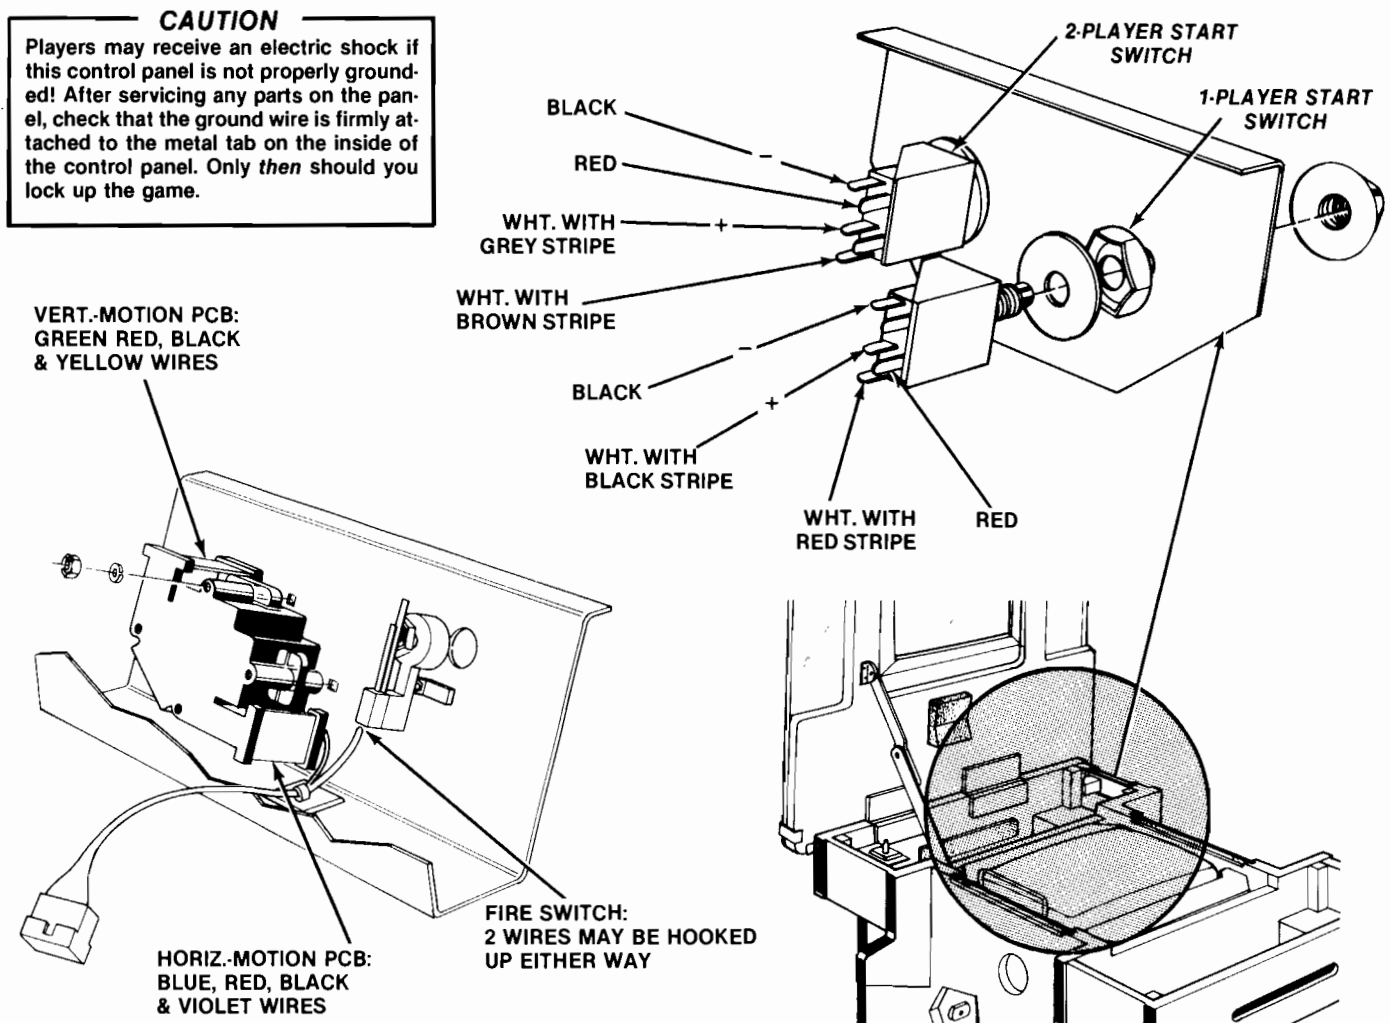


Figure 12 Control Panel Wiring



To replace any switch, remove both of its screws with a Phillips-head screwdriver—see Figure 11.

If the white button itself needs to be replaced, turn the stamped nut with a wrench in a counter-clockwise direction, as seen from the inside of the control panel. The white ring on the outside of the control panel should not spin, due to its design.


### 3. Mini-Trak Ball™ Maintenance and Repair




The Mini-Trak Ball™ control requires lubrication of its bearings approximately every 6,000 credits or every 3 months. To lubricate or repair the control, remove the control from the control panel and disassemble it as illustrated in Figure 11.

Use **only 2 drops** of 3-in-One® oil in each of six ball bearings of the Mini-Trak Ball control.

For further instructions on how to replace the ball, either coupler PCB or either encoding wheel, see Figure 11.

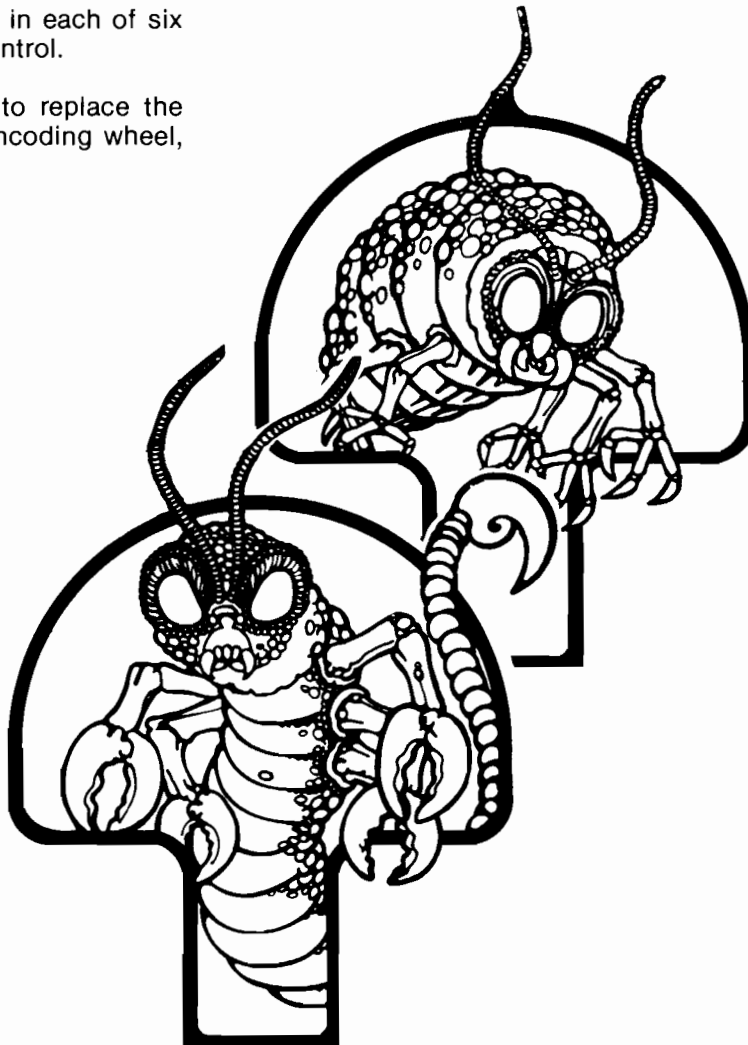

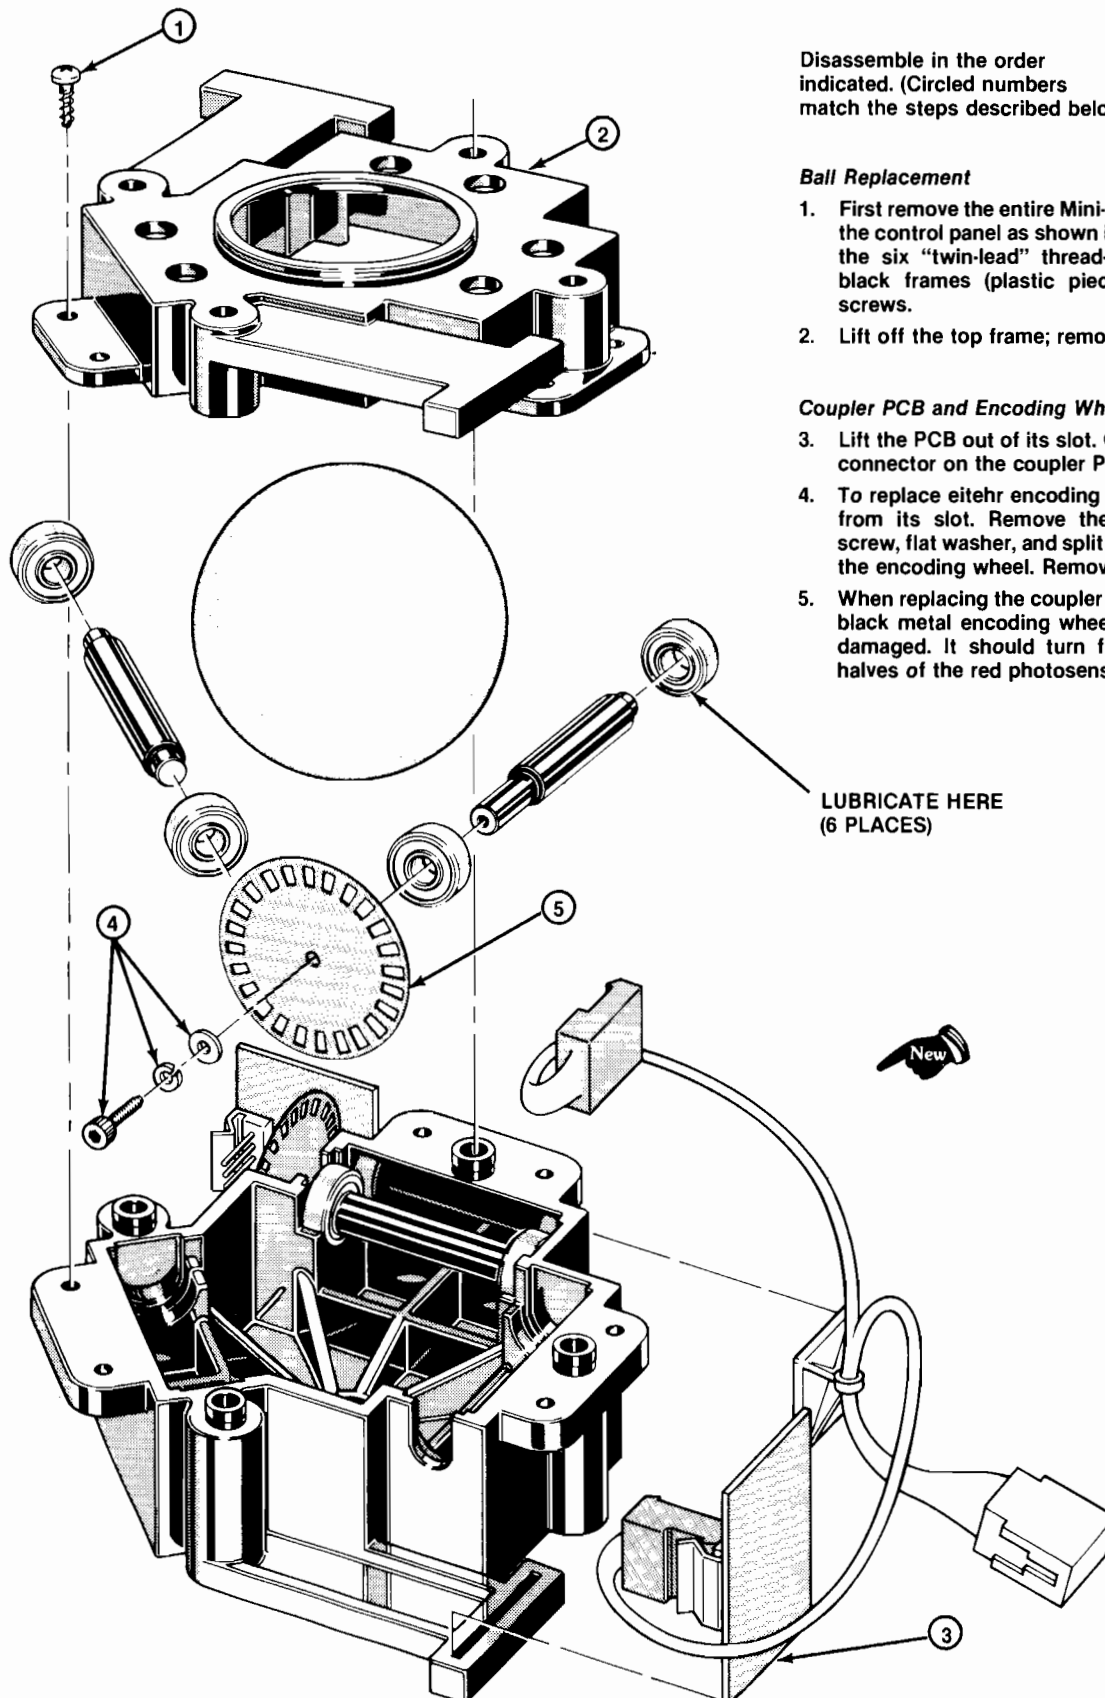

**Figure 13 Mini-Trak Ball™ Maintenance and Repair**

## D. Monitor Removal

### ⚠ WARNING ⚠

#### **Shock Hazard**

High voltages may exist in any television or monitor, even with power disconnected. Use extreme caution and do not touch electrical parts of the yoke area with your hands or with metal objects in your hands!


#### **Implosion Hazard**

If you drop the monitor and the picture tube breaks, **it will implode!** Shattered glass and the yoke can fly 6 feet or more from the implosion. Use care when replacing any monitor.

If you should need to remove the color monitor, follow steps 1 thru 5 as listed on this page. Refer also to Figure 14.

1. **Be sure the game is unplugged from its wall outlet!** Unlock and open the table top.
2. Lift up the "U"-shaped security bar, located along the inside wall of the cabinet. Remove the bar entirely from the cabinet. Remove the access panel from the side of the game.
3. Locate the 6-pin monitor and 3-pin power connectors underneath the monitor, just above the power-supply transformer. Unplug these connectors.
4. Remove the four Phillips-head screws and flat washers (one set at each corner of the monitor screen). These attach the large monitor brackets to the cabinet.
5. Carefully lift the monitor assembly up and out the cabinet.


Disassemble in the order indicated. (Circled numbers match the steps above.)

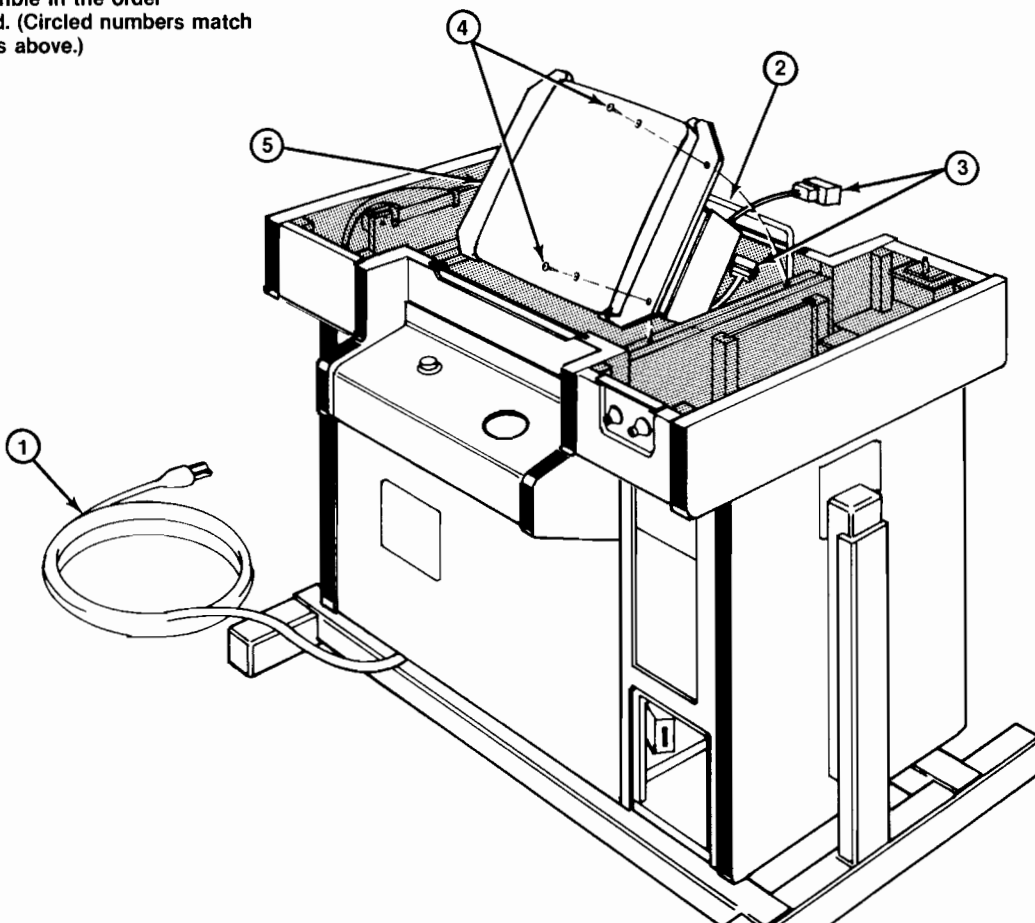

**Figure 14 Monitor Removal**

**CAUTION**

Be sure to let the game cool down (with power turned off and the table top open) for at least 10 minutes. The large black heat sink on the Regulator/Audio II PCB gets fairly hot. You could burn yourself on this heat sink while removing the PCB.

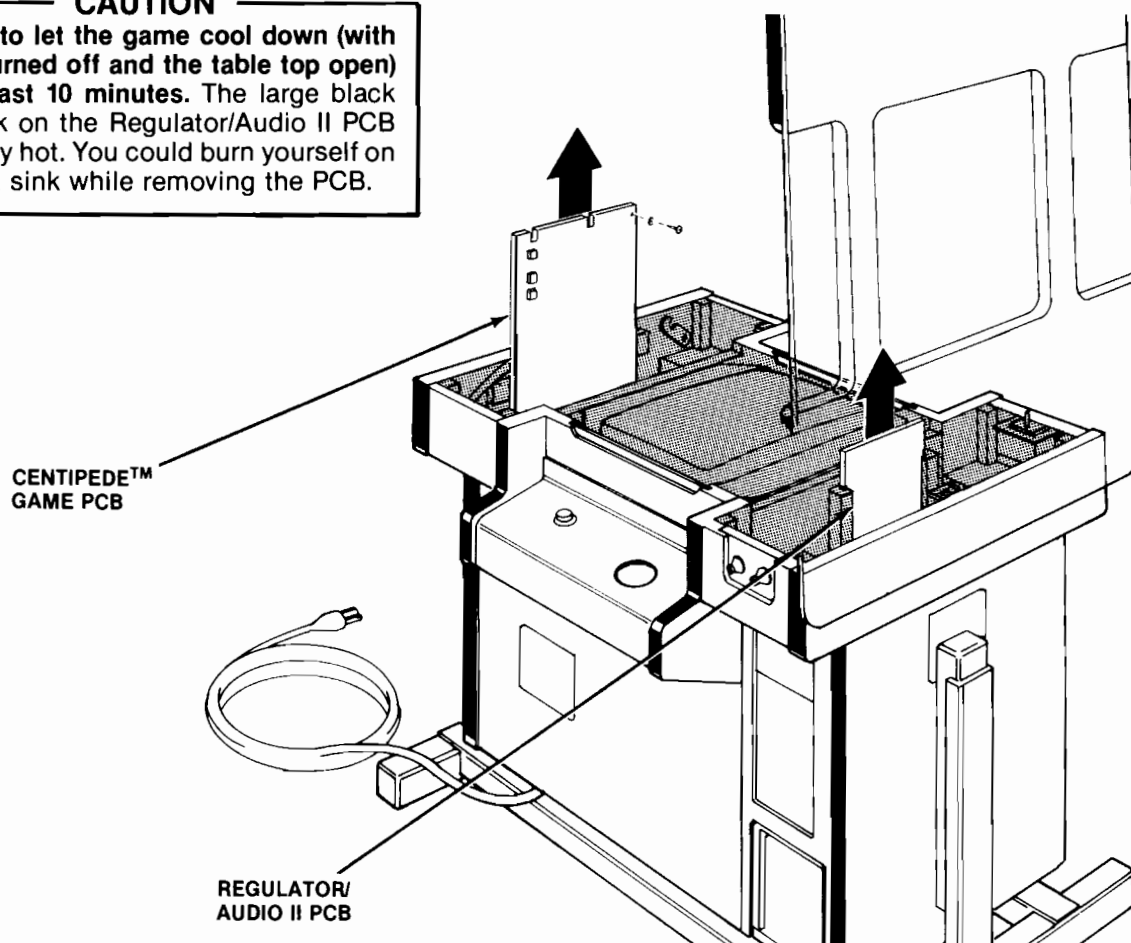

**Figure 15 Printed-Circuit Board Removal**

## E. Printed-Circuit Board Removal

You may wish to remove the game printed-circuit board (PCB) or the Regulator/Audio II PCB for service or inspection. To do this, refer to Figure 15 and proceed as follows:

### 1. Game PCB Removal

- Unlock and open the table top.
- Remove the four beaded nylon tie-wraps from the top side of the game PCB. Then remove the two edge connectors.
- Locate the Phillips-head screws that extend through the PCB and into the two wood blocks near the top of the game. Remove and save these screws and the associated fiber washers.
- Remove the PCB from the game by carefully sliding it straight up out of the plastic PCB retainers. Be careful not to twist the board, as this

may loosen connections or components. Replace or repair as required.

- After servicing it, reinstall the PCB, making sure that the edge connectors are properly plugged in. Note that the connectors are keyed to fit on only one way, so if they don't slip on easily, don't force them! **A reversed connector will probably damage your game** and will void the warranty.
- Check that the operation of the game is correct by **performing the self-test**. This is especially important with any game when you replace a PCB.

### 2. Regulator/Audio II PCB Removal

- Unlock and open the table top.
- Remove the five plug-in connectors on the Regulator/Audio II PCB. Note that all of these connectors are keyed for proper orientation.
- Remove the PCB from the inside wall of the cabinet by pulling it up and out of the wood retainers.

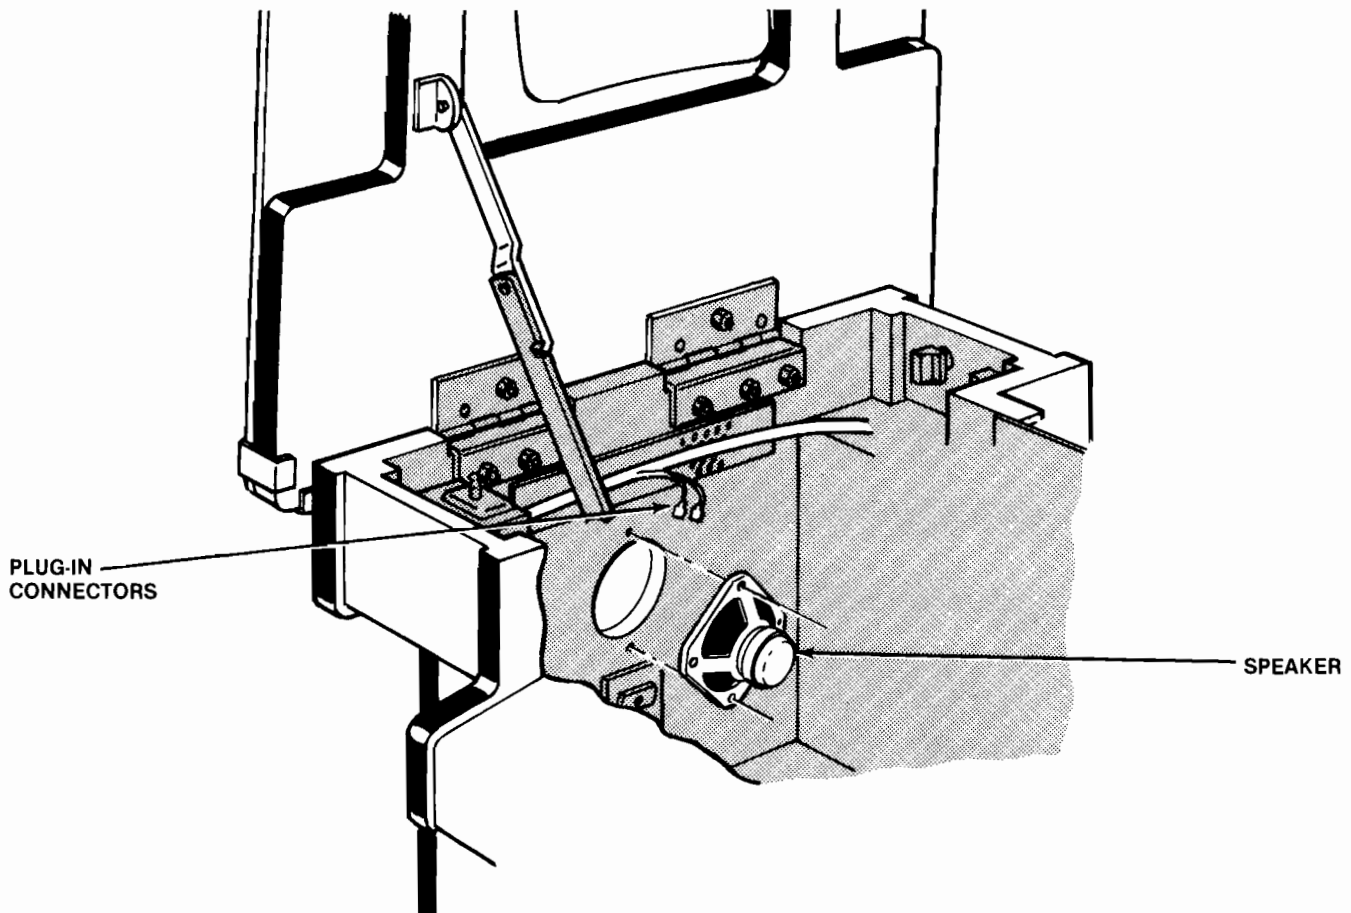


Figure 16 Speaker Replacement

## F. Speaker Replacement

### CAUTION

Be sure to let the game cool down (with power turned off and the table top open) for at least 10 minutes. The large black heat sink on the Regulator/Audio I PCB gets fairly hot, and you could burn yourself on this heat sink while removing the PCB.

If the loudspeaker should ever need to be replaced, follow these instructions and refer to Figure 16. Probably the only cause of speaker failure is an open voice coil or a ruptured cone, but both of these failures are highly unlikely.

Open the table top. Unplug both speaker-wire connectors. Use a very short-handled Phillips screwdriver to remove the two screws. For greater ease in reaching these screws, and to prevent slipping and damaging the Regulator/Audio II PCB, remove this PCB first.

## G. Game Operation

With this manual you received two large sheets that contain the wiring and schematic diagrams for the Centipede™/Cocktail game. Sheet 1, Side A, includes a "table of contents" that shows the arrangement of these diagrams. They explain the functions of the circuits; the diagrams also define inputs and outputs.





Atari's Centipede™ is a microprocessor-controlled game. The microprocessor is mounted on the game PCB. The game PCB receives switch inputs from the control panels and coin acceptors. These inputs are processed by the game PCB and output to the monitor, Regulator/Audio II PCB, loudspeaker and control panel.

The Regulator/Audio II PCB performs two functions: 1) it regulates the +10 VDC from the power supply to +5 VDC, and 2) it amplifies the audio output from the game PCB. The +5 VDC from the Regulator/Audio II PCB provides most logic power to the game PCB. The audio output from the Regulator/Audio II PCB directly drives the game speaker and is controlled by the volume control, mounted on a bracket inside the game cabinet.


The power supply is the source of all voltages in the game. These voltages are protected by three fuses (F3, F4 and F5) on the power supply chassis. The primary winding of the power-supply transformer is protected by the fuses F1 and F2 on the power-supply chassis.

Figure 17 illustrates the distribution of power in this game. Figure 18 illustrates the distribution of signals.

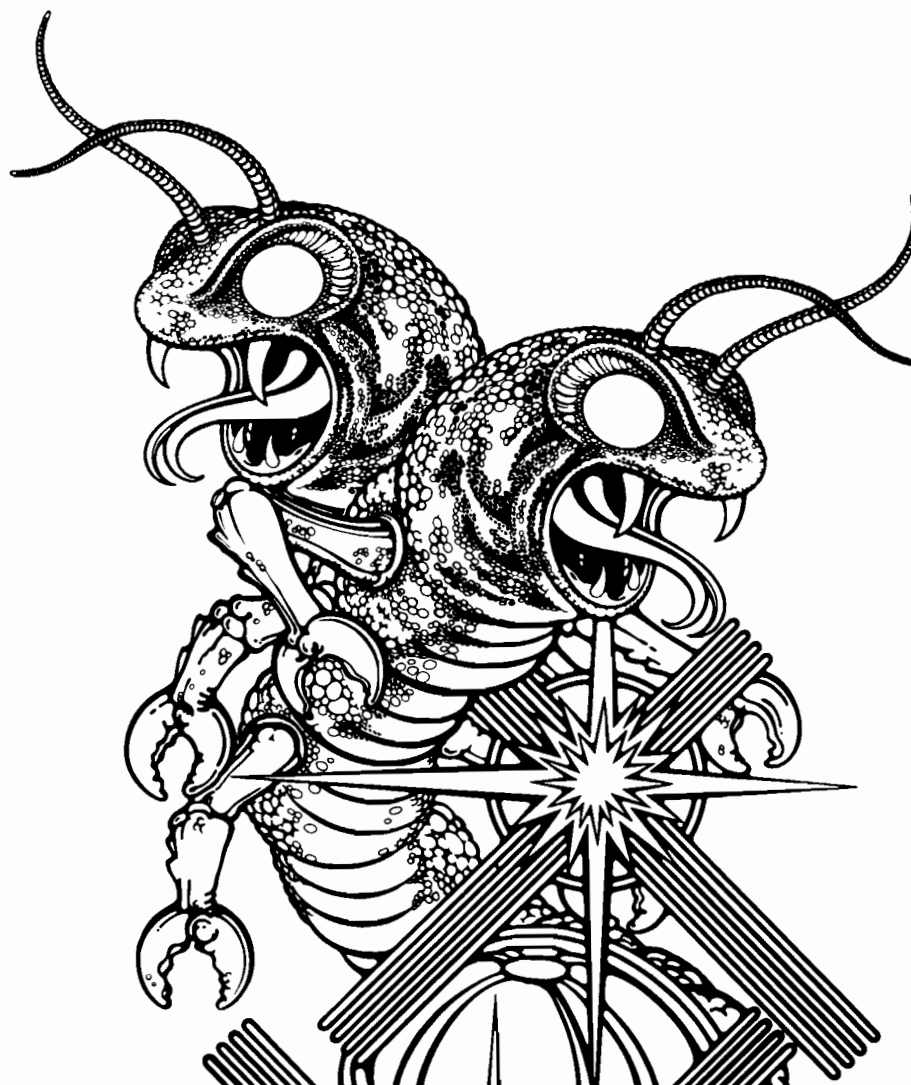

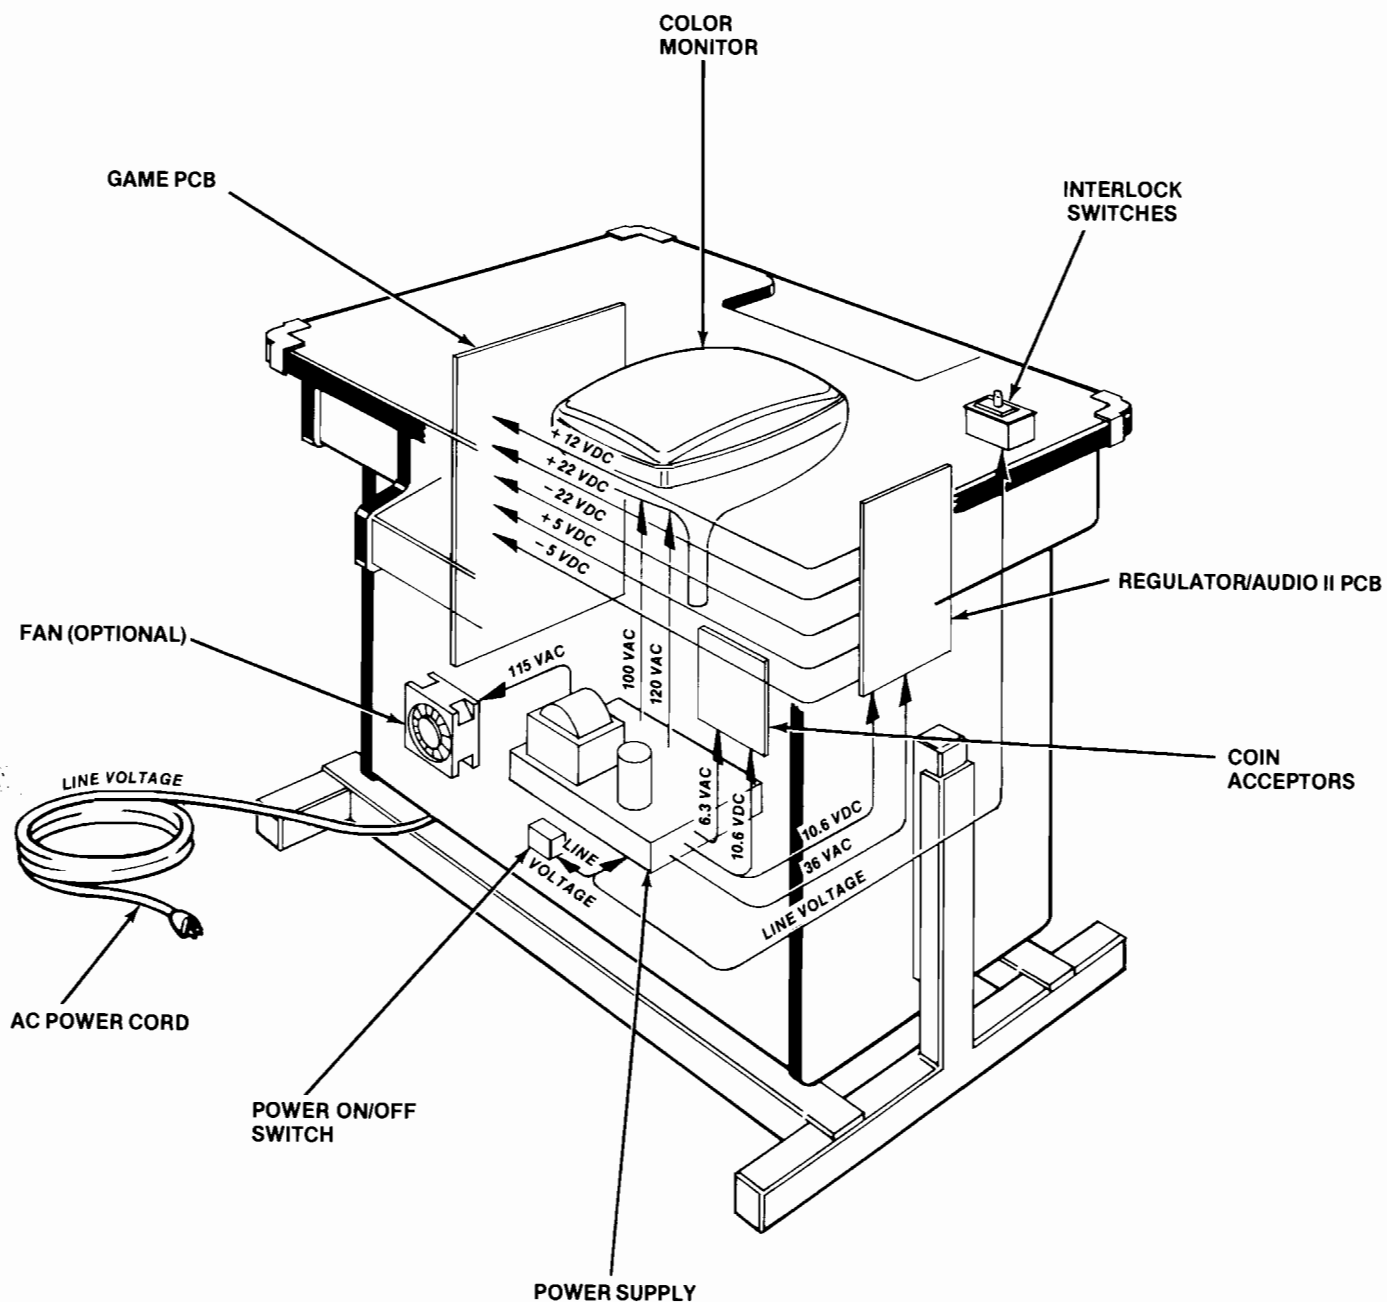

**Figure 17 Power Distribution**

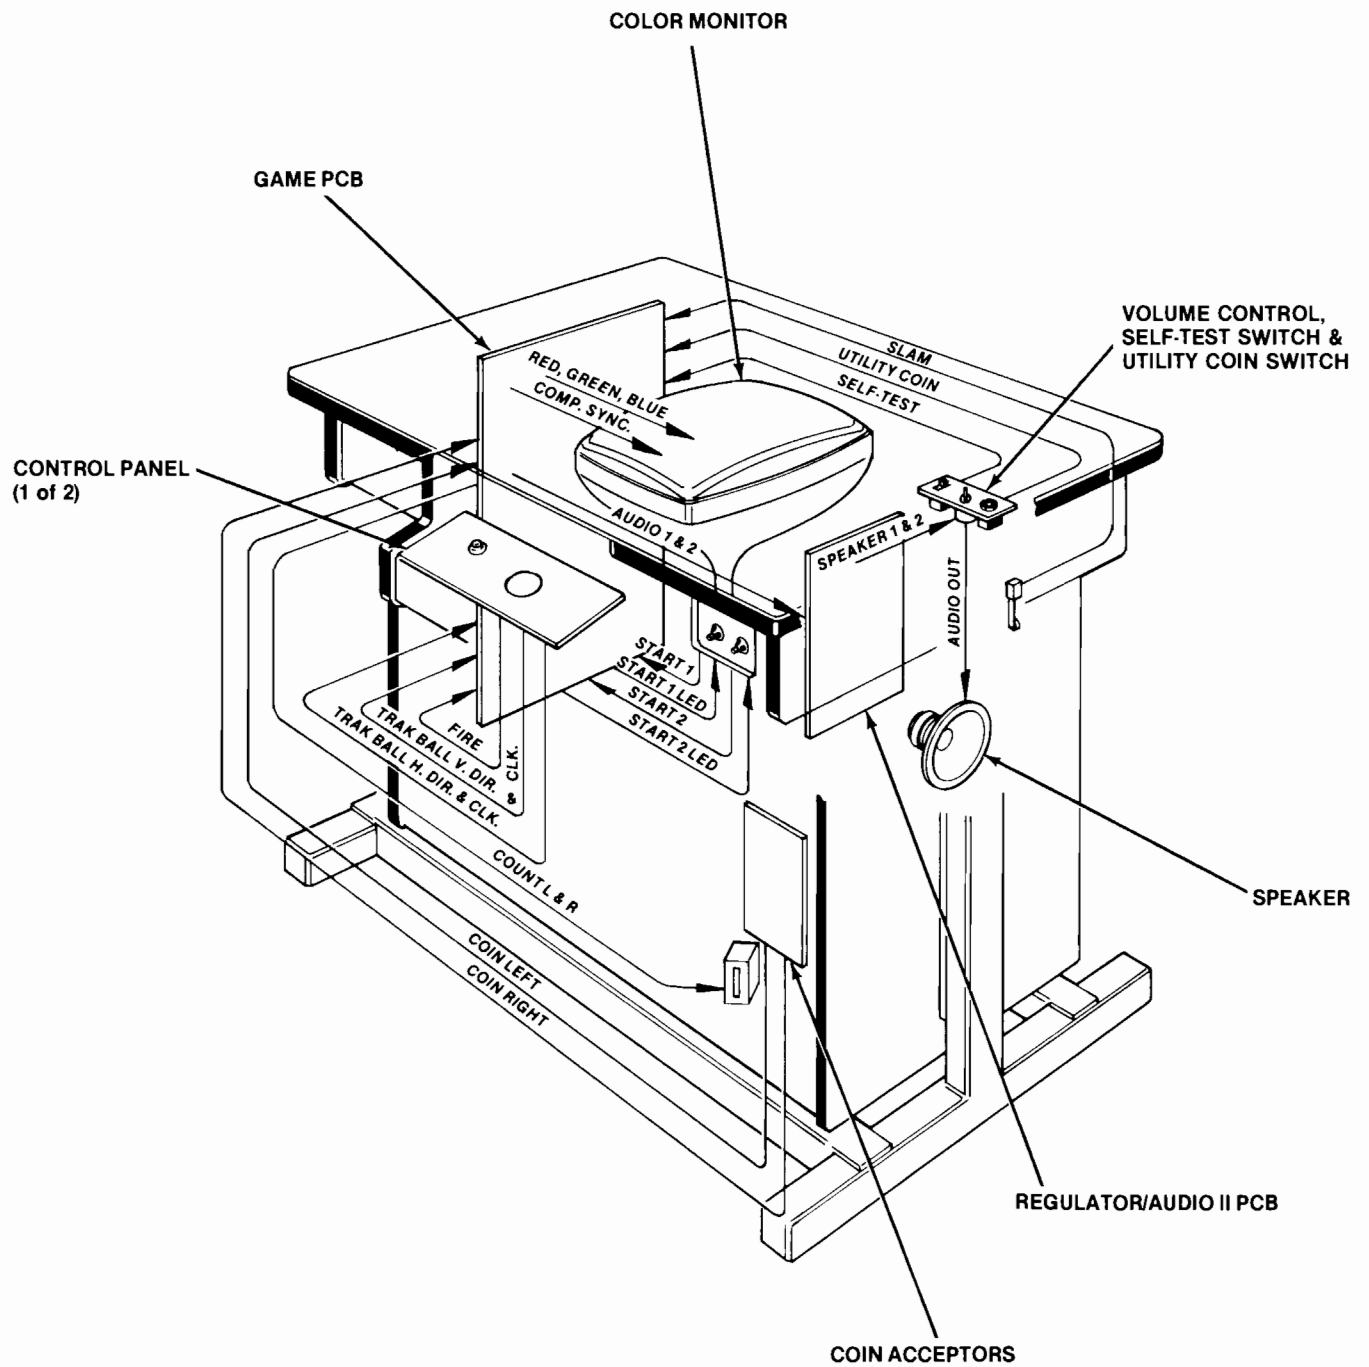


**Figure 18 Signal Distribution**





# Illustrated Parts Lists

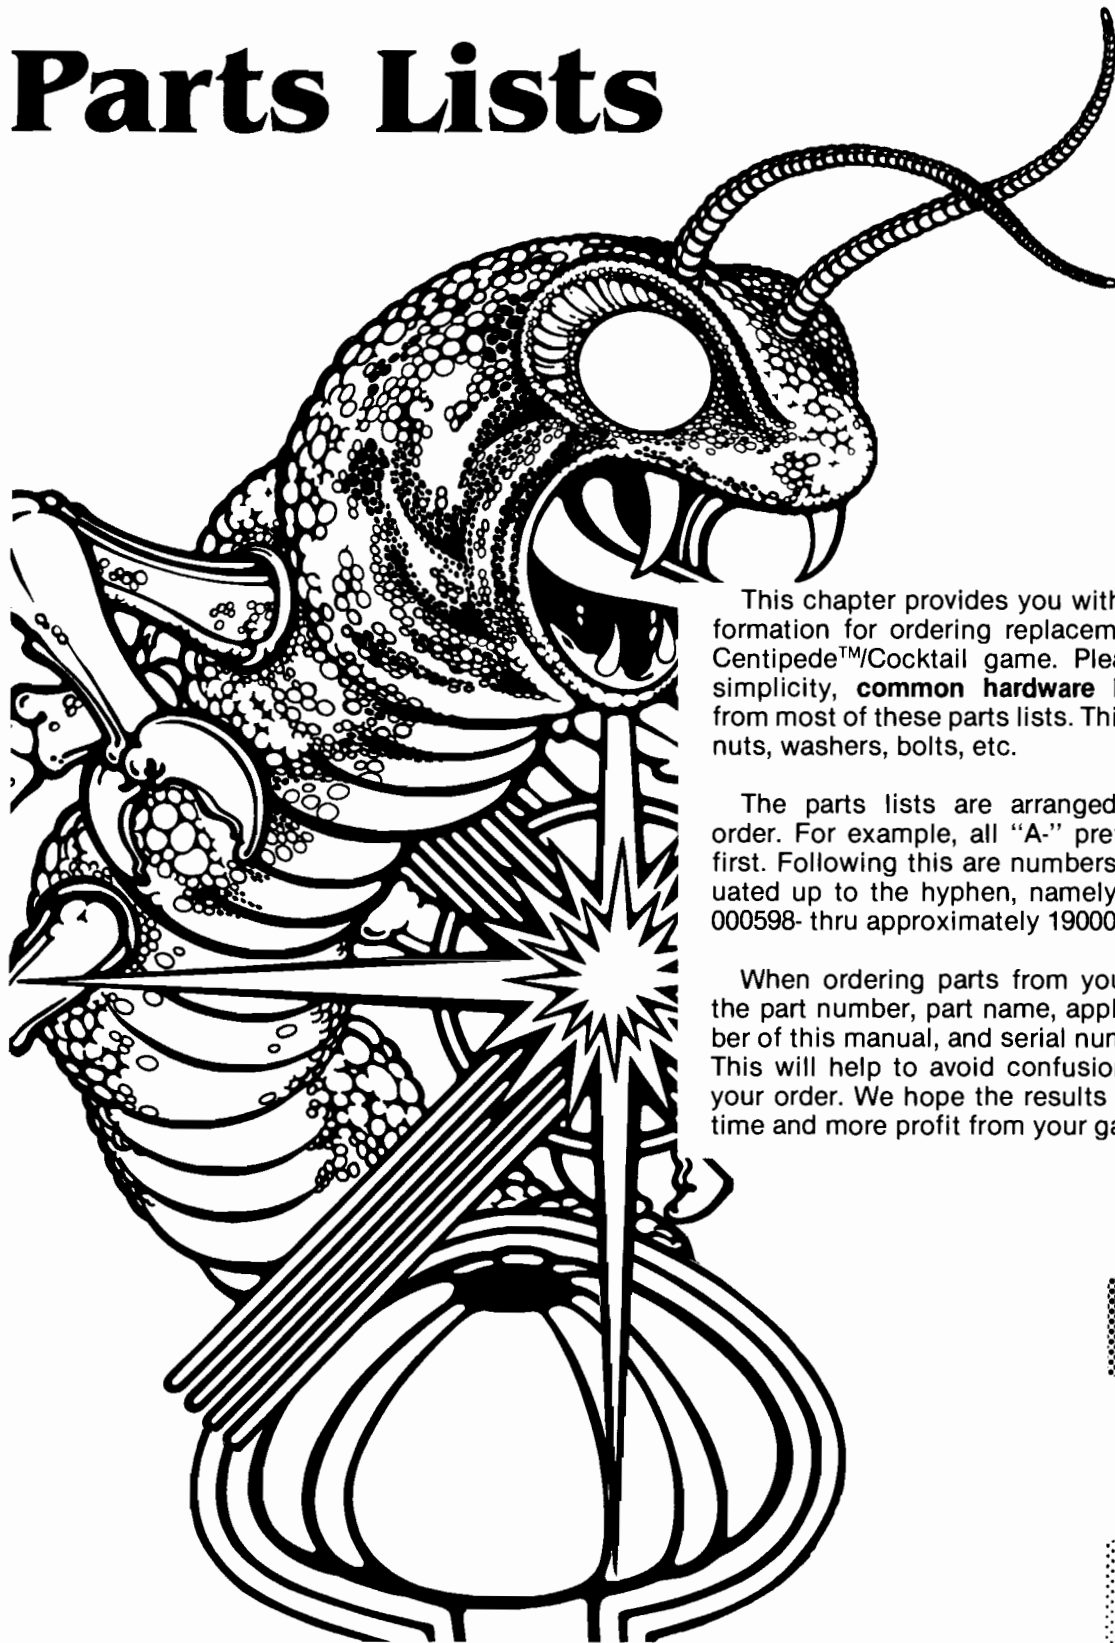


This chapter provides you with the necessary information for ordering replacement parts for your Centipede™/Cocktail game. Please note that, for simplicity, **common hardware has been deleted** from most of these parts lists. This includes screws, nuts, washers, bolts, etc.

The parts lists are arranged in alphanumeric order. For example, all "A-" prefix numbers come first. Following this are numbers in sequence evaluated up to the hyphen, namely 00- thru 99-, then 000598- thru approximately 190000-.

When ordering parts from your distributor, give the part number, part name, applicable figure number of this manual, and serial number of your game. This will help to avoid confusion and mistakes in your order. We hope the results will be less downtime and more profit from your game.

# 3


**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL:** Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by vendors of Atari, Inc., and for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

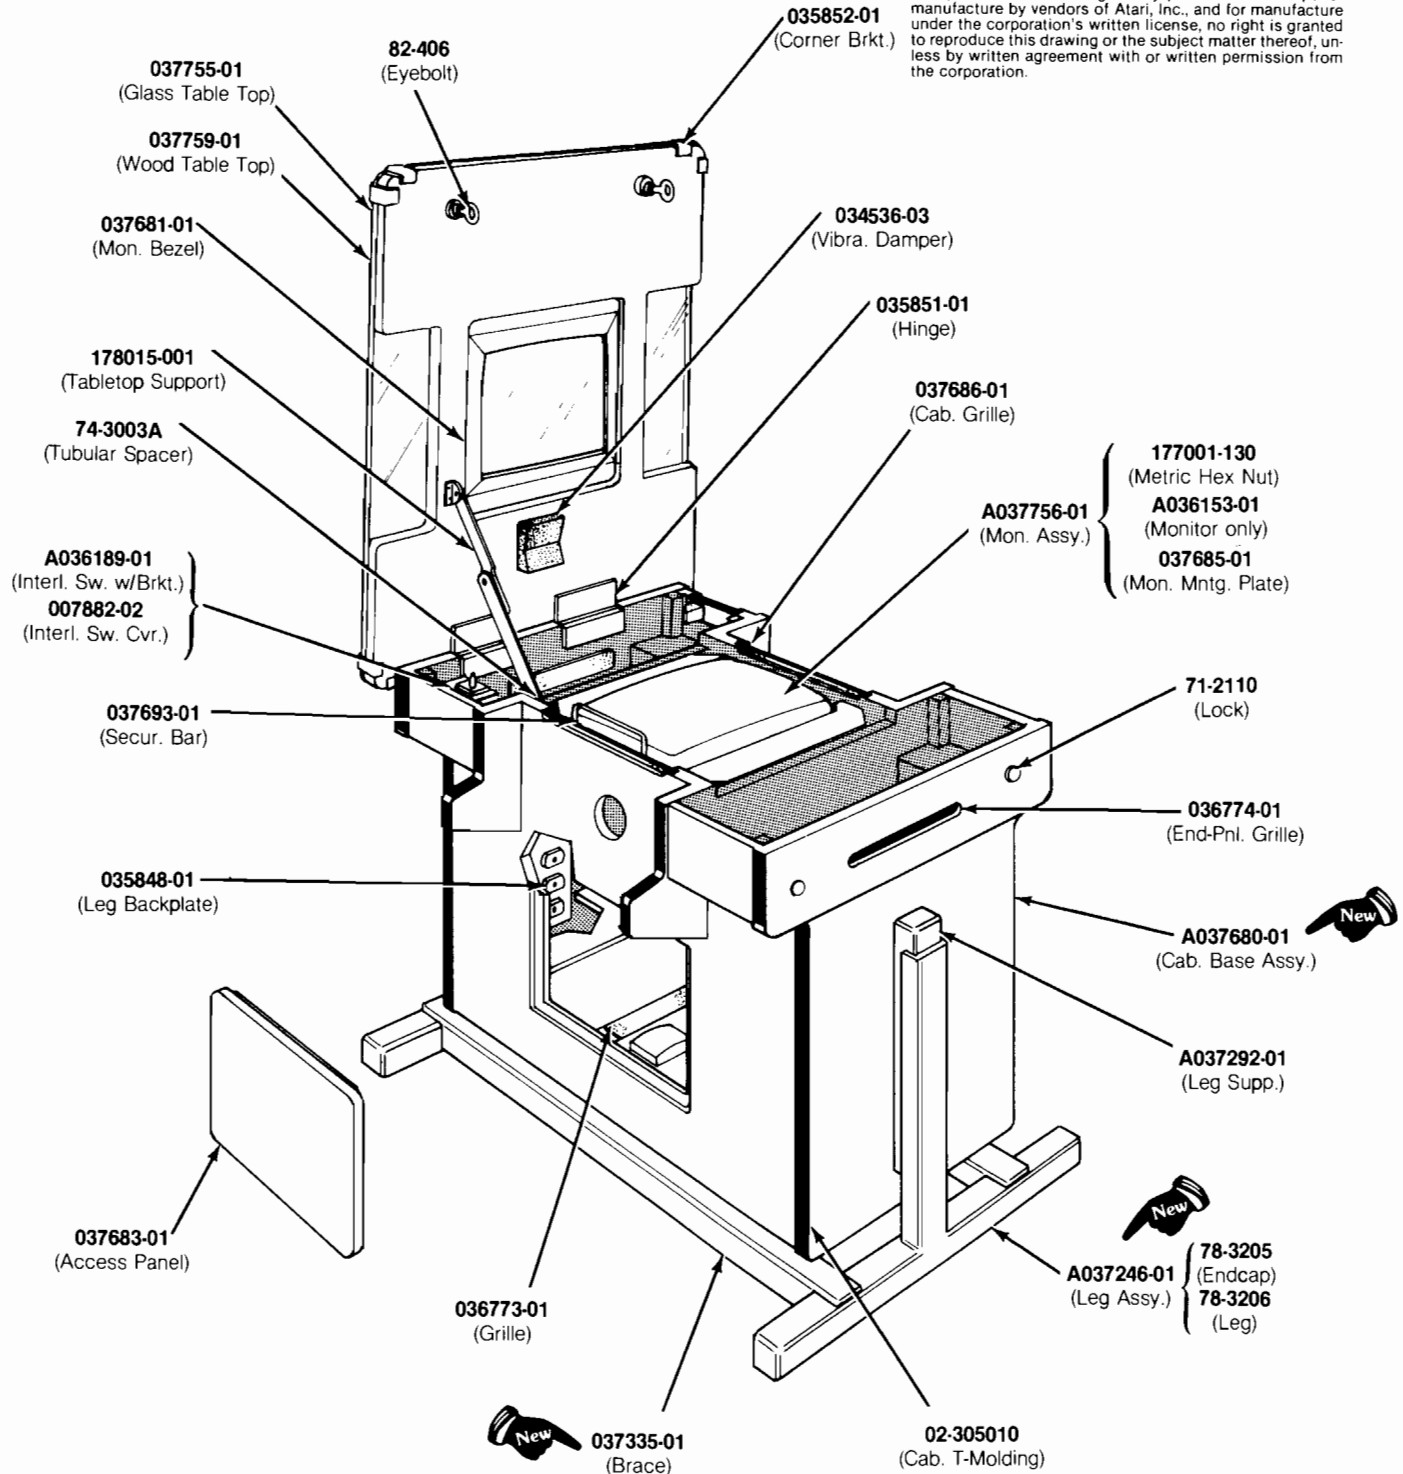

**Figure 19 Cabinet-Mounted Assemblies**  
**A037760-xx B**

Schematics, Self-Test Label & Manuals—  
see parts list on following page

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by vendors of Atari, Inc., and for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

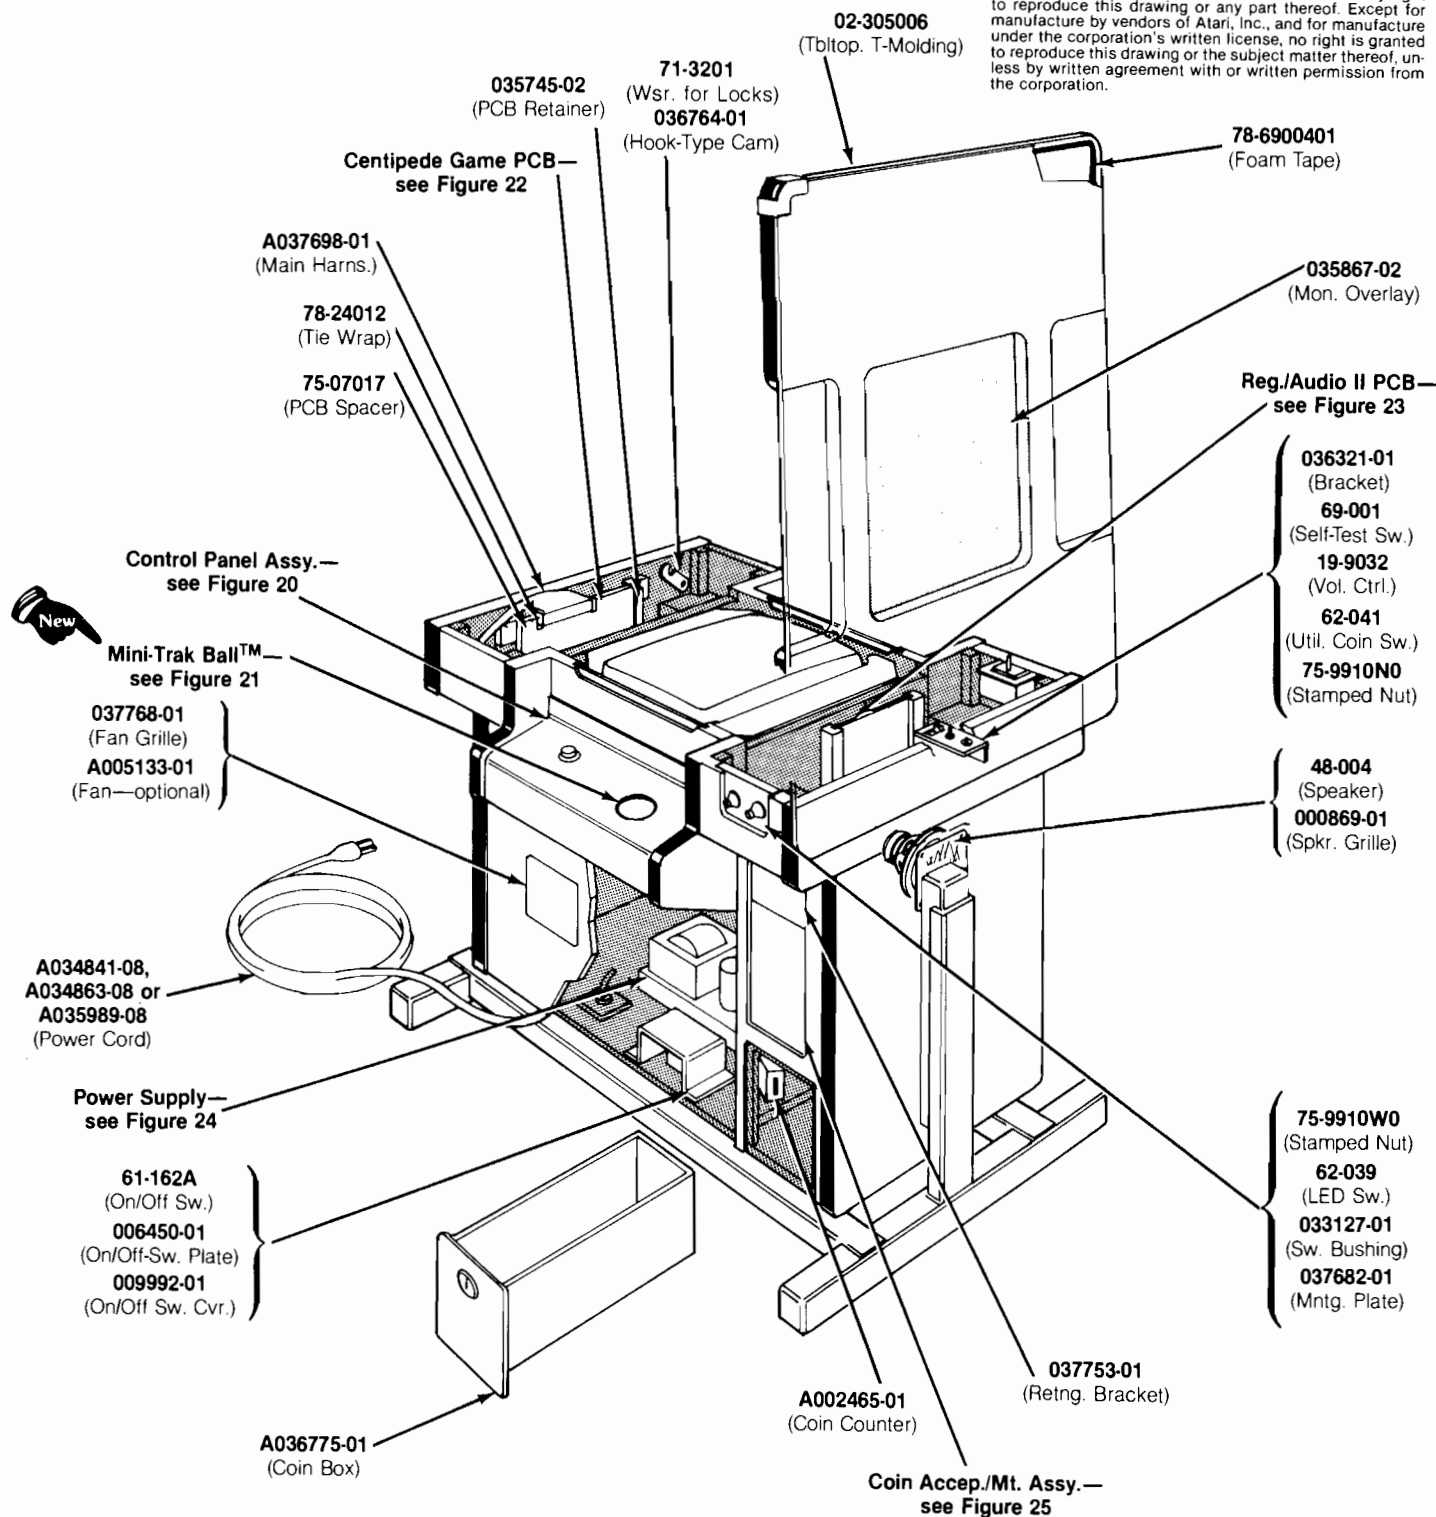

**Figure 19 Cabinet-Mounted Assemblies**  
**A037760-xx B**

## Figure 19 Cabinet-Mounted Assemblies, continued Parts List

| <i>Part No.</i>                                                                         | <i>Description</i>                                                                                                                                                           |
|-----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A002465-01                                                                              | Coin Counter                                                                                                                                                                 |
| A005133-01                                                                              | Cooling Fan <i>(optional equipment)</i>                                                                                                                                      |
| A034841-08                                                                              | Strain-Relief Power Cord <i>(U.S.)</i>                                                                                                                                       |
| A034863-08                                                                              | Strain-Relief Power Cord <i>(Austria, Belgium, Chile, Denmark, Finland, France, Germany, Greece, Indonesia, Italy, Netherlands, Norway, Spain, Sweden, and Uruguay)</i>      |
| A035989-08                                                                              | Strain-Relief Power Cord <i>(Australia and New Zealand)</i>                                                                                                                  |
| A036153-01                                                                              | 14-Inch Matsushita Monitor only                                                                                                                                              |
| A036189-01                                                                              | Interlock Switch with Bracket <i>(modified for safety)</i>                                                                                                                   |
| A036775-01                                                                              | Coin Box Assembly <i>(includes lock)</i>                                                                                                                                     |
| A037246-01                                                                              | Leg Assembly <i>(includes leg, 2 adjustable feet and 2 endcaps)</i>                       |
| A037292-01                                                                              | Leg Support Assembly <i>(includes 2 panel nuts and endcap)</i>                                                                                                               |
| A037680-01                                                                              | Cabinet Base Assembly <i>(includes grilles, PCB retainers, leg backplate and hinges)</i>  |
| A037698-01                                                                              | Main Harness Assembly                                                                                                                                                        |
| A037756-01                                                                              | 14-Inch Matsushita Monitor Assembly <i>(includes mounting plates and hardware)</i>                                                                                           |
| <i>The following five items are the technical information supplements to this game:</i> |                                                                                                                                                                              |
| DP-188-01                                                                               | Centipede™/Cocktail Schematic Drawings <i>(Sheet 1)</i>                                                                                                                      |
| DP-188-02                                                                               | Centipede/Cocktail Schematic Drawings <i>(Sheet 2)</i>                                                                                                                       |
| ST-188                                                                                  | Centipede/Cocktail Label with Self-Test Procedure and Option Switch Settings                                                                                                 |
| TM-153                                                                                  | Service Manual for 14-Inch Matsushita Color Monitor                                                                                                                          |
| TM-188                                                                                  | Centipede/Cocktail Operation, Maintenance and Service Manual                                                                                                                 |
| 02-305006                                                                               | $\frac{1}{16}$ -Inch Black Plastic T-Molding <i>(for table top)</i>                                                                                                          |
| 02-305010                                                                               | $\frac{3}{4}$ -Inch Black Plastic T-Molding <i>(for cabinet base)</i>                                                                                                        |
| 19-9032                                                                                 | 50-Ohm, 12½-Watt Wire-Wound Rheostat <i>(for volume control)</i>                                                                                                             |
| 48-004                                                                                  | 5-Inch, 8-Ohm, 5-Watt, Round High-Fidelity Speaker                                                                                                                           |
| 61-162A                                                                                 | DPST Power On/Off Toggle Switch                                                                                                                                              |
| 62-039                                                                                  | Momentary-Contact SPDT Light-Emitting-Diode Switch with Red Cap                                                                                                              |
| 62-041                                                                                  | SPDT Momentary-Contact Pushbutton Utility Coin Switch with Black Cap                                                                                                         |
| 69-001                                                                                  | DPDT Self-Test Switch                                                                                                                                                        |
| 71-2110                                                                                 | Panel Cartridge Lock Mechanism <i>(for table top)</i>                                                                                                                        |
| 71-3201                                                                                 | Anchor Washer for Table Top Locks                                                                                                                                            |
| 74-3003A                                                                                | #10 × $\frac{3}{16}$ -Inch-Long Aluminum Tubular Spacer <i>(for table top support)</i>                                                                                       |
| 75-07017                                                                                | Spacer for Mounting Printed Circuit Boards                                                                                                                                   |
| 75-9910N0                                                                               | # $\frac{5}{8}$ -11 Steel Stamped Nut <i>(for utility coin switch)</i>                                                                                                       |
| 75-9910W0                                                                               | # $\frac{15}{32}$ -32 Steel Stamped Nut <i>(for start switches)</i>                                                                                                          |
| 78-24012                                                                                | 5-Inch Beaded Nylon Tie Wrap <i>(for game PCB edge connectors)</i>                                                                                                           |
| 78-3205                                                                                 | Square Black Endcap for Leg Assembly                                                                                                                                         |
| 78-3206                                                                                 | Cabinet-Leveling Leg                                                                                                                                                         |
| 78-6900401                                                                              | Vinyl Foam Single-Coated-Adhesive Tape, ¼-Inch Wide × $\frac{1}{16}$ -Inch Thick <i>(10½ feet req'd.)</i>                                                                    |
| 82-406                                                                                  | #¼-20 × 2-Inch-Long Eyebolt, with ¾-Inch Threads                                                                                                                             |
| 000869-01                                                                               | Speaker Grille                                                                                                                                                               |
| 006450-01                                                                               | On/Off Switch Mounting Plate                                                                                                                                                 |
| 007882-02                                                                               | Interlock Switch Cover                                                                                                                                                       |
| 009992-01                                                                               | On/Off Switch Cover                                                                                                                                                          |
| 033127-01                                                                               | Black Molded Switch Bushing                                                                                                                                                  |
| 034536-03                                                                               | Foam Vibration Damper                                                                                                                                                        |
| 035745-02                                                                               | 18-Inch-Long Plastic PCB Retainer                                                                                                                                            |
| 035848-01                                                                               | Backplate for Attaching Leg                                                                                                                                                  |
| 035851-01                                                                               | Table Top Hinge                                                                                                                                                              |


*[Continued on next page]*

## Figure 19 Cabinet-Mounted Assemblies, continued Parts List

| <i>Part No.</i> | <i>Description</i>                                                          |
|-----------------|-----------------------------------------------------------------------------|
| 035852-01       | Corner Bracket for Table Top                                                |
| 035867-02       | Smoke-Color Acrylic Monitor Overlay                                         |
| 036321-01       | Bracket for Volume Control, Self-Test and Utility Coin Switches             |
| 036764-01       | Hook-Type Cam for Lock                                                      |
| 036773-01       | Grille in Cabinet Base                                                      |
| 036774-01       | Upper End-Panel Grille                                                      |
| 037335-01       | Leg Brace                                                                   |
| 037681-01       | Cardboard Monitor Bezel                                                     |
| 037682-01       | Mounting Plate for Start Switches                                           |
| 037683-01       | Access Panel                                                                |
| 037685-01       | Monitor Mounting Plate                                                      |
| 037686-01       | Slip-In Cabinet Grille <i>(above control panel)</i>                         |
| 037693-01       | "U"-Shaped Security Bar                                                     |
| 037753-01       | Coin Acceptor Retaining Bracket                                             |
| 037755-01       | Tempered-Glass Table Top with Graphics                                      |
| 037759-01       | Wood Table Top only                                                         |
| 037768-01       | Fan Grille <i>(fan is optional—see part no. A005133-01)</i>                 |
| 177001-130      | Metric M5-0.8 Zinc-Plated Steel Hex Nut <i>(for monitor mounting plate)</i> |
| 178015-001      | Hinged Table Top Support                                                    |

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL:** Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by vendors of Atari, Inc., and for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

**NOTE: Graphics decal is not field-replaceable.**

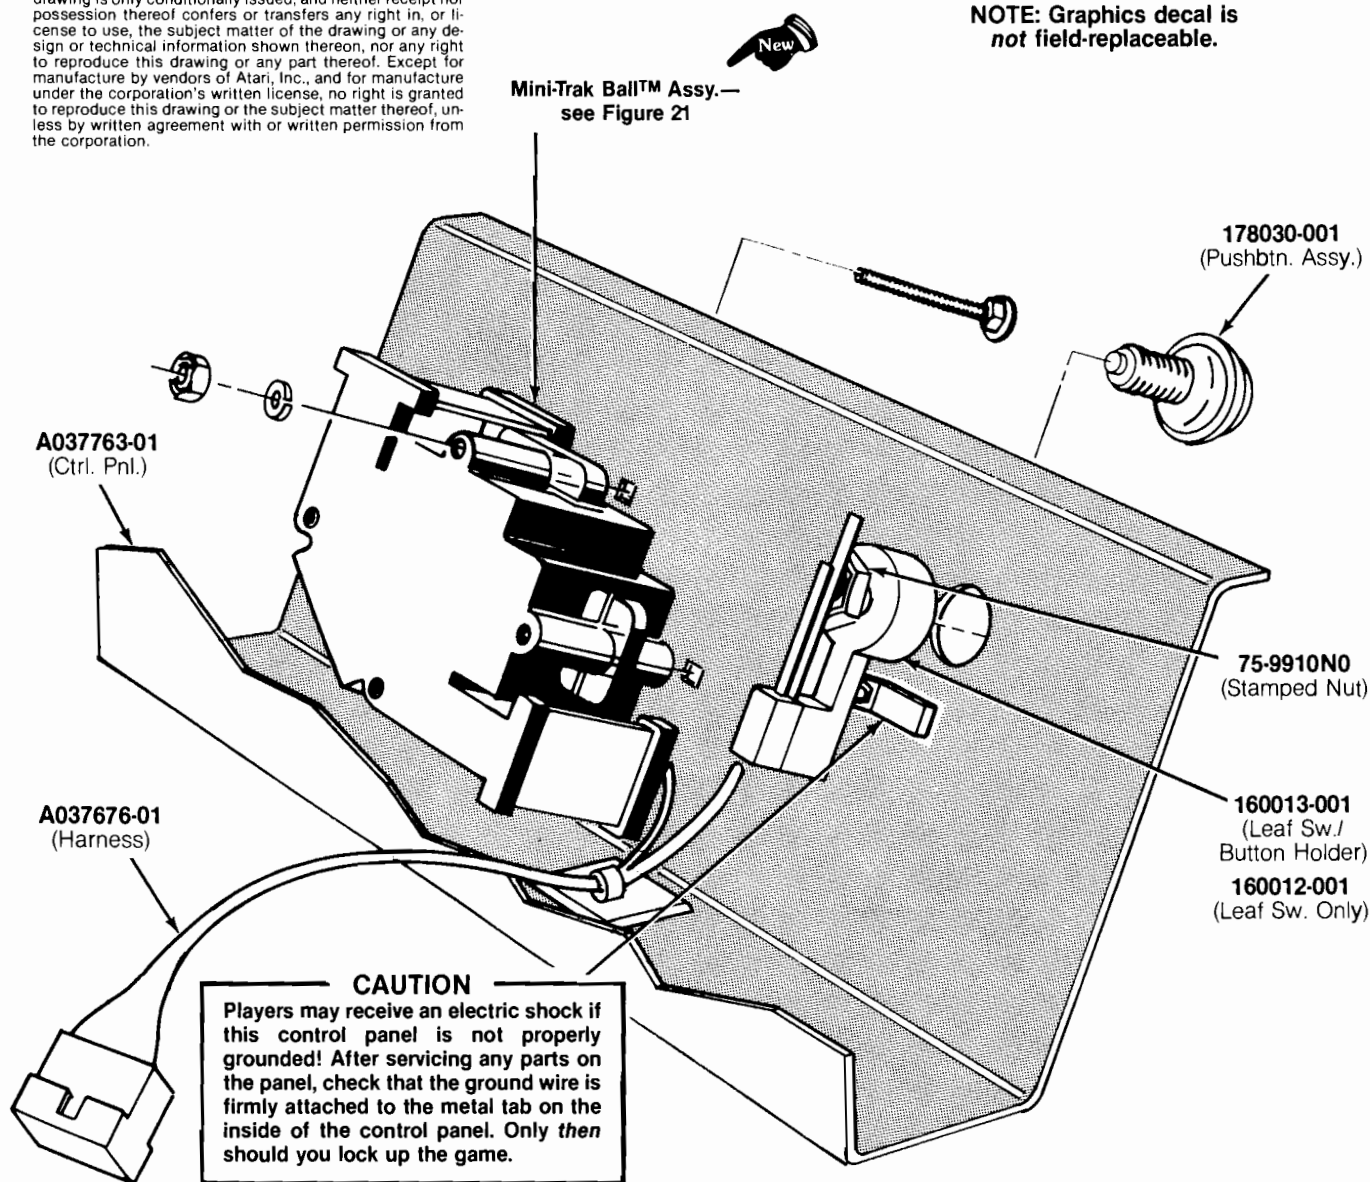

**Figure 20 Control Panel Assembly**  
**A037764-01 A**


### Parts List

| Part No.   | Description                                                                    |
|------------|--------------------------------------------------------------------------------|
| A037676-01 | Control-Panel Harness                                                          |
| A037763-01 | Control Panel with Graphics                                                    |
| 75-9910N0  | #5/16-11 Steel Stamped Nut                                                     |
| 160013-001 | Leaf Switch and Button Holder <i>(leaf switch only is part no. 160012-001)</i> |
| 178030-001 | Pushbutton Assembly                                                            |





**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL:** Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by vendors of Atari, Inc., and for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

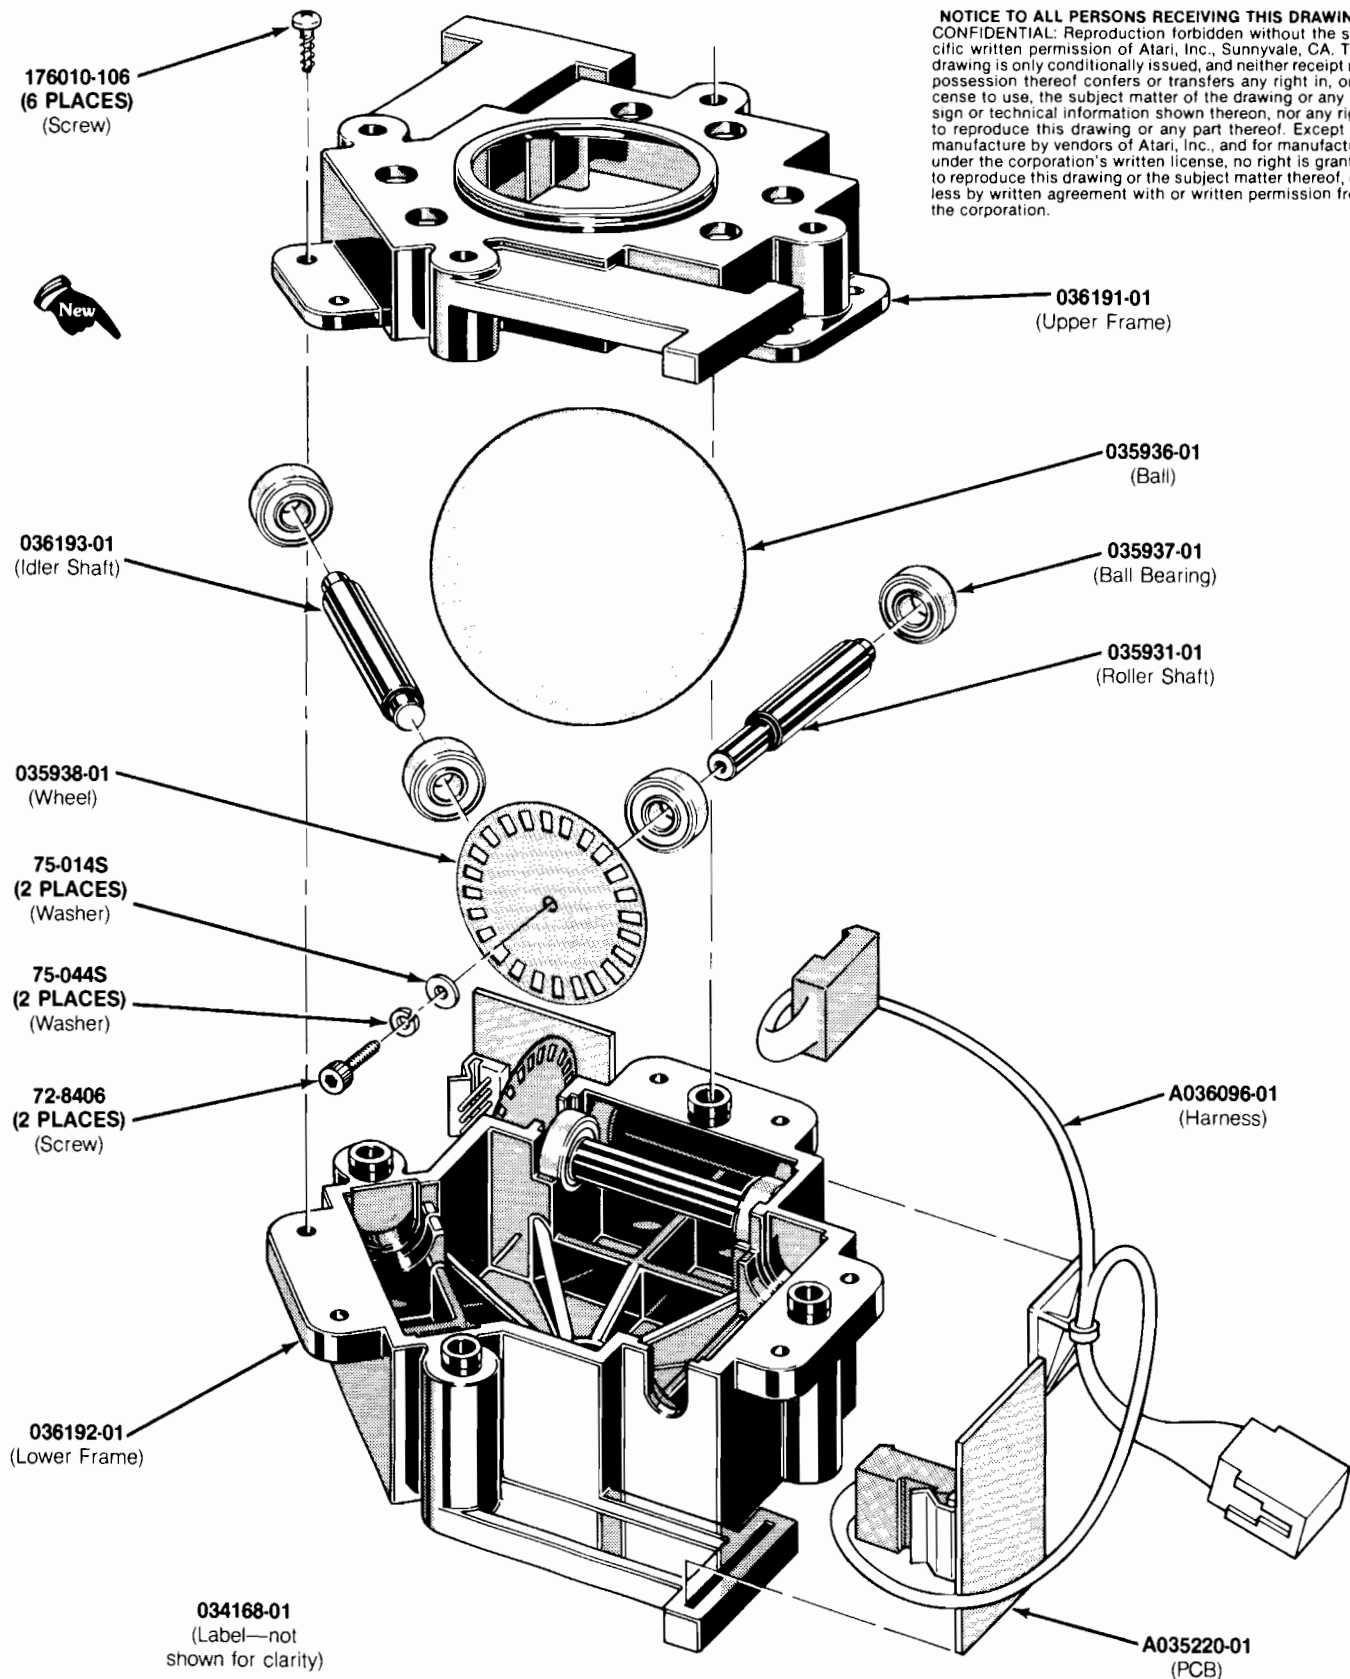

**Figure 21 Mini-Trak Ball™ Assembly**  
**A036190-01 A**

## Figure 21 Mini-Trak Ball™ Assembly Parts List



| <i>Part No.</i> | <i>Description</i>                                                                     |
|-----------------|----------------------------------------------------------------------------------------|
| A035220-01      | Coupler PCB Assembly                                                                   |
| A036096-01      | Harness Assembly                                                                       |
| 72-8406         | #4-40 x 3/8-Inch Hex Socket-Head Cap Alloy Steel Machine Screw                         |
| 75-014S         | #4 Flat Plain SAE-Standard Zinc-Plated Steel Washer                                    |
| 75-044S         | #4 Zinc-Plated Steel Split Lock Washer                                                 |
| 034168-01       | Label with Lubrication Instructions                                                    |
| 035931-01       | Roller Shaft (2 per assembly)                                                          |
| 035936-01       | Mini-Trak Ball™                                                                        |
| 035937-01       | Ball Bearing (6 per assembly)                                                          |
| 035938-01       | Etched Encoding Wheel                                                                  |
| 036191-01       | Upper Black Plastic Frame                                                              |
| 036192-01       | Lower Black Plastic Frame                                                              |
| 036193-01       | Idler Shaft (1 per assembly)                                                           |
| 176010-106      | #8 x 3/8-Inch Cross-Recessed Pan-Head Thread-Forming Twin-Lead Zinc-Plated Steel Screw |



**Figure 22 Centipede™ Game PCB Assembly, continued  
Parts List**

| <i>Part No.</i> | <i>Description (Reference Designations and Locations in Bold)</i>                           |
|-----------------|---------------------------------------------------------------------------------------------|
| C012294-01      | Audio I/O N-Channel MOS/LSI Custom Chip <b>(C3)</b>                                         |
| 24-250106       | 10 uf Aluminum Electrolytic Fixed Axial-Lead 25V Capacitor <b>(C83)</b>                     |
| 24-250107       | 100 uf Aluminum Electrolytic Fixed Axial-Lead 25V Capacitor <b>(C52, 78)</b>                |
| 24-500105       | 1 mf Aluminum Electrolytic Fixed Axial-Lead 50V Capacitor <b>(C79-82, 84, 86)</b>           |
| 24-500106       | 10 uf Aluminum Electrolytic Fixed Axial-Lead 50V Capacitor <b>(C85)</b>                     |
| 29-088          | .1 uf Ceramic-Disc 25V Radial-Lead Capacitor <b>(C3, 5-37, 40-51, 54-64, 66-77, 87, 88)</b> |
| 31-1N914        | 75V Type-1N914 Switching Diode <b>(CR1, 2)</b>                                              |
| 31-1N4001       | 75V Type-1N4001 Switching Diode <b>(CR4, 5)</b>                                             |
| 33-2N3906       | Type-2N3906 PNP Switching and Amplifying Transistor <b>(Q3)</b>                             |
| 34-2N3904       | Type-2N3904 NPN Silicon Transistor <b>(Q1, 2, 4, 5)</b>                                     |
| 34-2N6044       | Type-2N6044 Darlington NPN Transistor <b>(Q6-8)</b>                                         |
| 37-LM324        | Type-LM324 Integrated Circuit <b>(J10)</b>                                                  |
| 37-4584B        | Type-4584B Integrated Circuit <b>(F10, F11)</b>                                             |
| 37-555          | Type-555 Timer Integrated Circuit <b>(A11)</b>                                              |
| 37-74LS00       | Type-74LS00 Integrated Circuit <b>(L8)</b>                                                  |
| 37-74LS04       | Type-74LS04 Integrated Circuit <b>(K3)</b>                                                  |
| 37-74LS08       | Type-74LS08 Integrated Circuit <b>(B7, K4)</b>                                              |
| 37-74LS10       | Type-74LS10 Integrated Circuit <b>(L3, K2)</b>                                              |
| 37-74LS20       | Type-74LS20 Integrated Circuit <b>(A7)</b>                                                  |
| 37-74LS32       | Type-74LS32 Integrated Circuit <b>(A4, C5, E3, F3, J3)</b>                                  |
| 37-74LS42       | Type-74LS42 Integrated Circuit <b>(H3)</b>                                                  |
| 37-74LS74       | Type-74LS74 Integrated Circuit <b>(D4, D11, M3)</b>                                         |
| 37-74LS83       | Type-74LS83 Integrated Circuit <b>(F6, H6)</b>                                              |
| 37-74LS86       | Type-74LS86 Integrated Circuit <b>(E7)</b>                                                  |
| 37-74LS90       | Type-74LS90 Integrated Circuit <b>(L2)</b>                                                  |
| 37-74LS139      | Type-74LS139 Integrated Circuit <b>(C4, J2)</b>                                             |
| 37-74LS153      | Type-74LS153 Integrated Circuit <b>(C7, E8, K6, L6, M6, N6, P6)</b>                         |
| 37-74LS157      | Type-74LS157 Integrated Circuit <b>(D7, D8, E11, F8, H8, J8, K8, P5)</b>                    |
| 37-74LS163A     | Type-74LS163A Integrated Circuit <b>(A5, B5, M2, N2, N3, P2, P3)</b>                        |
| 37-74LS166      | Type-74LS166 Integrated Circuit <b>(H9, J9)</b>                                             |
| 37-74LS174      | Type-74LS174 Integrated Circuit <b>(C6, D6, E6, J4)</b>                                     |
| 37-74LS175      | Type-74LS175 Integrated Circuit <b>(A8, E4, M4, N4)</b>                                     |
| 37-74LS191      | Type-74LS191 Integrated Circuit <b>(B11, C11)</b>                                           |
| 37-74LS244      | Type-74LS244 Integrated Circuit <b>(B1, C1, H5)</b>                                         |
| 37-74LS245      | Type-74LS245 Integrated Circuit <b>(E2)</b>                                                 |
| 37-74LS257      | Type-74LS257 Integrated Circuit <b>(D9, E10, K9, L9, P7, M8, M9)</b>                        |
| 37-74LS259      | Type-74LS259 Integrated Circuit <b>(M10)</b>                                                |
| 37-74LS273      | Type-74LS273 Integrated Circuit <b>(B4, J6)</b>                                             |
| 37-74LS373      | Type-74LS373 Integrated Circuit <b>(J5)</b>                                                 |
| 37-74LS374      | Type-74LS374 Integrated Circuit <b>(H4)</b>                                                 |
| 37-74S04        | Type-74S04 Integrated Circuit <b>(N1)</b>                                                   |
| 37-74S74        | Type-74S74 Integrated Circuit <b>(E9, F9)</b>                                               |
| 37-7407         | Type-7407 Integrated Circuit <b>(A9, A/B10)</b>                                             |
| 37-7815         | + 15V Voltage Regulator <b>(VR2)</b>                                                        |
| 37-7915         | -15V Voltage Regulator <b>(VR1)</b>                                                         |
| 38-MV5053       | Type-MV5053 Light-Emitting Diode <b>(CR3)</b>                                               |

*[Continued on next page]*


## Figure 22 Centipede™ Game PCB Assembly, continued Parts List

| Part No.           | Description (Reference Designations and Locations in Bold)                                                                                                                                                |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 41-3003            | 100 $\mu$ H, $\pm 5\%$ , Hot-Molded Plastic Fixed R.F. Choke <b>(L1-3)</b>                                                                                                                                |
| 62-001             | SPST Momentary Pushbutton Switch <b>(Reset)</b>                                                                                                                                                           |
| 66-114P1T          | 4-Station, Single-Throw, Dual-Inline-Package Bit Switch <b>(N11)</b>                                                                                                                                      |
| 66-118P1T          | 8-Station, Single-Throw, Dual-Inline-Package Bit Switch <b>(N8, N9)</b>                                                                                                                                   |
| 79-42C16           | 16-Contact Medium-Insertion-Force Integrated Circuit Socket <b>(P4)</b>                                                                                                                                   |
| 79-42C22           | 22-Contact Medium-Insertion-Force Integrated Circuit Socket <b>(E5)</b>                                                                                                                                   |
| 79-42C24           | 24-Contact Medium-Insertion-Force Integrated Circuit Socket <b>(F7, H/J7, D1, E1, F/H1, J1)</b>                                                                                                           |
| 79-42C40           | 40-Contact Medium-Insertion-Force Integrated Circuit Socket <b>(C2, C3)</b>                                                                                                                               |
| 81-4302            | Nylon Snap-In Fastener                                                                                                                                                                                    |
| 90-102             | 12.096, $\pm .005\%$ , Crystal <b>(Y1)</b>                                                                                                                                                                |
| 90-6013            | Microprocessor <b>(C2)</b>                                                                                                                                                                                |
| 90-7005            | Random-Access Memory <b>(C8)</b>                                                                                                                                                                          |
| 90-7018            | Random-Access Memory <b>(K5, K7, L5, L7, M5, M7, N5, N7)</b>                                                                                                                                              |
| 90-7033            | Random-Access Memory <b>(F2, H2)</b>                                                                                                                                                                      |
| 020670-01          | Test Point                                                                                                                                                                                                |
| 110000-102         | 1K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R9-11, 13-16, 23-28, 31-38, 55-60, 67, 68, 77, 79, 80, 87-89, 94, 95, 99, 104, 109, 114-123, 134, 136-141)</b>                                           |
| 110000-103         | 10K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R1, 2, 6-8, 12, 17-22, 29, 30, 39-54, 70, 71)</b>                                                                                                       |
| 110000-104         | 110K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R81, 82, 105, 106)</b>                                                                                                                                 |
| 110000-105         | 100 MegOhm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R5)</b>                                                                                                                                              |
| 110000-152         | 1.5K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R108)</b>                                                                                                                                              |
| 110000-221         | 220 Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R3, 62, 64, 66, 72, 74-76, 78, 135)</b>                                                                                                                 |
| 110000-222         | 2.2K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R107)</b>                                                                                                                                              |
| 110000-331         | 330 Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R61, 63, 65, 73)</b>                                                                                                                                    |
| 110000-332         | 3.3K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R69, 83-86, 103, 130-133)</b>                                                                                                                          |
| 110000-471         | 470 Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R90-93, 96-98, 100, 110-113, 124-129, 142)</b>                                                                                                          |
| 110000-560         | 56 Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R101, 102)</b>                                                                                                                                           |
| 110000-563         | 56K Ohm, $\pm 5\%$ , $\frac{1}{4}$ W Resistor <b>(R4)</b>                                                                                                                                                 |
| 122002-102         | .001 $\mu$ f Ceramic-Disc 50V Radial-Lead Capacitor <b>(C4)</b>                                                                                                                                           |
| 122004-224         | .22 $\mu$ f Ceramic-Disc 25V Radial-Lead Capacitor <b>(C65)</b>                                                                                                                                           |
| 122005-103         | .01 $\mu$ f Ceramic-Disc 25V Radial-Lead Capacitor <b>(C53)</b>                                                                                                                                           |
| 128002-101         | 100 pf Radial-Lead Epoxy-Dipped 100V Mica Capacitor <b>(C1)</b>                                                                                                                                           |
| 128002-221         | 220 pf Radial-Lead Epoxy-Dipped 100V Mica Capacitor <b>(C38, 39)</b>                                                                                                                                      |
| 128002-390         | 39 pf Radial-Lead Epoxy-Dipped 100V Mica Capacitor <b>(C2)</b>                                                                                                                                            |
| 136001-201 or -211 | Read-Only Memory <b>(F7)</b>                                                                                                                                                                              |
| 136001-202 or -212 | Read-Only Memory <b>(H/J7)</b>                                                                                                                                                                            |
| 136001-203 or -207 | Read-Only Memory <b>(D1)</b>                                                                                                                                                                              |
| 136001-204 or -208 | Read-Only Memory <b>(E1)</b>                                                                                                                                                                              |
| 136001-205 or -209 | Read-Only Memory <b>(F/H1)</b>                                                                                                                                                                            |
| 136001-206 or -210 | Read-Only Memory <b>(J1)</b>                                                                                                                                                                              |
| 136001-213         | Programmable Read-Only Memory <b>(P4)</b>                                                                                                                                                                 |
| 137161-001         | Type-ER2055 Integrated Circuit <b>(E5)</b> <i>Note: If you replace this part, you must erase this ROM before locking up the game. See Figure 6, Self-Test Procedure, in this manual for instructions.</i> |
| 137169-001         | Type-74LS107 Integrated Circuit <b>(L4)</b>                                                                                                                                                               |
| 137170-001         | Random-Access Memory <b>(A6, B6)</b> <i>Acceptable substitute is part no. 90-7008 or 90-7035.</i>                                                                                                         |





**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL:** Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by vendors of Atari, Inc., and for manufacture under the corporation's written license, no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation.

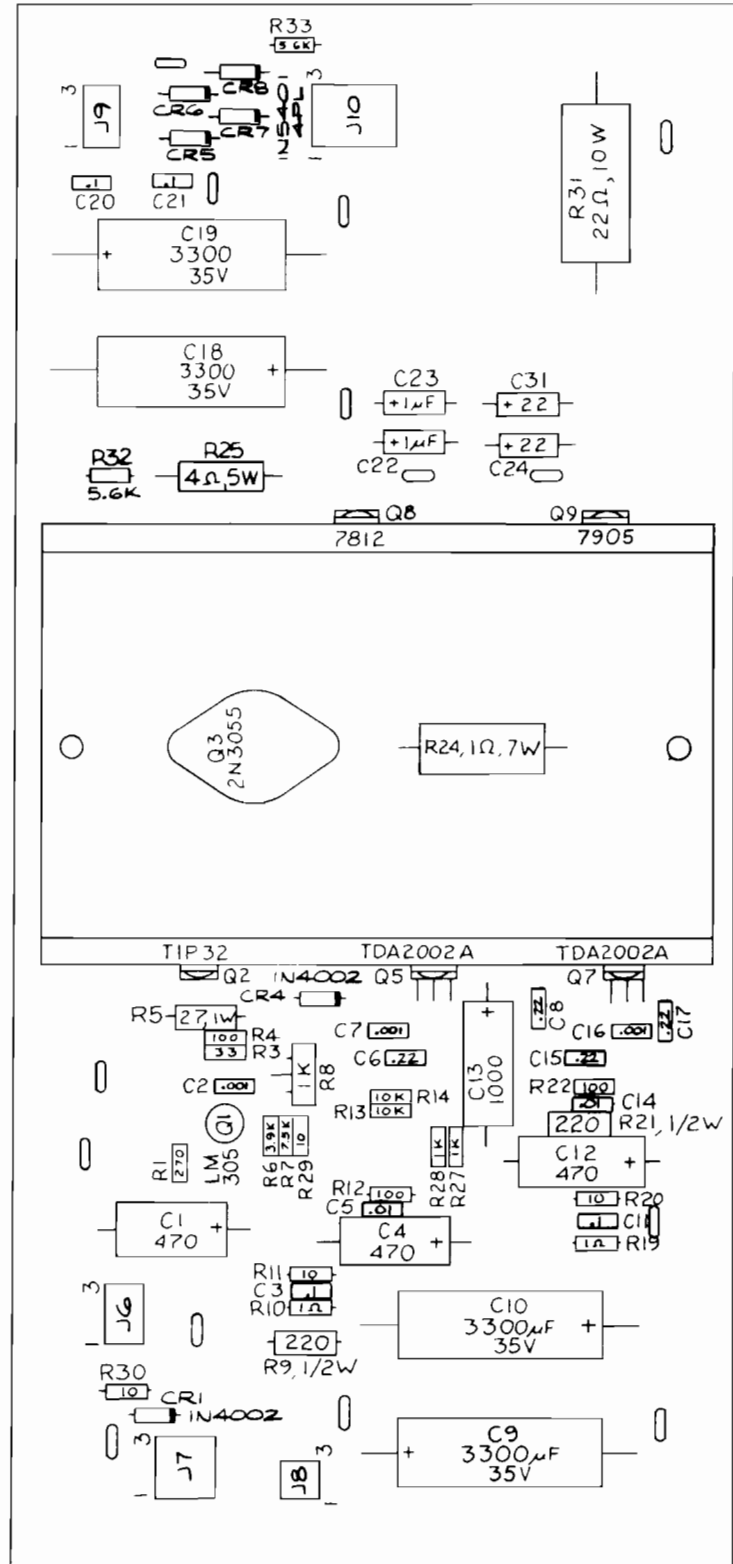


**Figure 23 Regulator/Audio II PCB Assembly**  
**A035435-02 E**

## Figure 23 Regulator/Audio II PCB Assembly Parts List

| <i>Part No.</i> | <i>Description (Reference Designations and Locations in Bold)</i>                                       |
|-----------------|---------------------------------------------------------------------------------------------------------|
| 12-52P7         | 2.7 Ohm, $\pm 5\%$ , 1W Resistor <b>(R5)</b>                                                            |
| 16-54P0         | 4 Ohm, $\pm 5\%$ , 5W Wirewound Resistor <b>(R25)</b>                                                   |
| 19-100P1015     | .1 Ohm, $\pm 3\%$ , 7W Wirewound Resistor <b>(R24)</b>                                                  |
| 19-315102       | 1K Ohm Vertical PCB-Mounting Cermet Trimpot <b>(R8)</b>                                                 |
| 24-250108       | 1000 uf Aluminum Electrolytic Fixed Axial-Lead 25V Capacitor <b>(C13)</b>                               |
| 24-250477       | 470 uf Aluminum Electrolytic Fixed Axial-Lead 25V Capacitor <b>(C1, 4, 12)</b>                          |
| 24-350226       | 22 uf Aluminum Electrolytic Fixed Axial-Lead 35V Capacitor <b>(C24, 31)</b>                             |
| 24-350338       | 3300 uf Aluminum Electrolytic Fixed Axial-Lead 35V Capacitor <b>(C9, 10, 18, 19)</b>                    |
| 24-500105       | 1 uf Aluminum Electrolytic Fixed Axial-Lead 50V Capacitor <b>(C22, 23)</b>                              |
| 29-088          | .1 uf Ceramic-Disc 25V Radial-Lead Capacitor <b>(C3, 11, 20, 21)</b>                                    |
| 31-1N4002       | 100V 1-Amp. Silicon Rectifier Type 1N4002 Diode <b>(CR1, 4)</b>                                         |
| 31-1N5401       | 100V 3-Amp. Silicon Rectifier Type 1N5401 Diode <b>(CR5-8)</b>                                          |
| 33-TIP32        | PNP Power Transistor, Type TIP32 <b>(Q2)</b>                                                            |
| 34-2N3055       | NPN Silicon Transistor, Type 2N3055 <b>(Q3)</b>                                                         |
| 37-LM305        | 5V Linear Voltage Regulator <b>(Q1)</b>                                                                 |
| 37-7812         | + 12V Voltage Regulator, Type 7812 <b>(Q8)</b>                                                          |
| 37-7905         | - 5V Voltage Regulator, Type 7905 <b>(Q9)</b>                                                           |
| 72-1608C        | #6-32 $\times$ 1/2-Inch Cross-Recessed Pan-Head Corrosion-Resistant Steel Machine Screw                 |
| 72-6606S        | #6 $\times$ 3/8-Inch Pan-Head Thread-Forming Cross-Recessed Type-AB Zinc-Plated-Steel Screw <b>(Q8)</b> |
| 75-F60405       | #6-32 $\times$ 1/4-Inch Binder-Head Nylon Screw <b>(Q5, 7)</b>                                          |
| 75-99516        | #6-32 Nut/Washer Assembly                                                                               |
| 78-16008        | Thermally Conductive Compound <b>(Q3)</b>                                                               |
| 78-16014        | Thermally Conductive Silicon Insulator <b>(Q2, 9)</b>                                                   |
| 79-58306        | 6-Position Connector Receptacle <b>(J6, 9)</b>                                                          |
| 79-58308        | 9-Position Connector Receptacle <b>(J7)</b>                                                             |
| 79-58346        | 12-Position Connector Receptacle <b>(J10)</b>                                                           |
| 79-58354        | 4-Position Connector Receptacle <b>(J8)</b>                                                             |
| 020670-01       | Test Point                                                                                              |
| 034531-01       | Heat Sink                                                                                               |
| 100015-103      | .01 uf Ceramic-Disc 25V Radial-Lead Capacitor <b>(C5, C14)</b>                                          |
| 110000-010      | 1 Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R10, 19)</b>                                                      |
| 110000-100      | 10 Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R11, 20, 29, 30)</b>                                             |
| 110000-101      | 100 Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R4, 12, 22)</b>                                                 |
| 110000-102      | 1K Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R27, 28)</b>                                                     |
| 110000-103      | 10K Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R13, 14)</b>                                                    |
| 110000-271      | 270 Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R1)</b>                                                         |
| 110000-330      | 33 Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R3)</b>                                                          |
| 110000-392      | 3.9K Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R6)</b>                                                        |
| 110000-562      | 5.6K Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R32, 33)</b>                                                   |
| 110000-752      | 7.5K Ohm, $\pm 5\%$ , 1/4 W Resistor <b>(R7)</b>                                                        |
| 110001-221      | 220 Ohm, $\pm 5\%$ , 1/2 W Resistor <b>(R9, 21)</b>                                                     |
| 116000-220      | 22 Ohm, $\pm 5\%$ , 10W Wirewound Resistor <b>(R31)</b>                                                 |
| 122002-102      | .001 uf Ceramic-Disc Minimum 25V Radial-Lead Capacitor <b>(C2, 7, 16)</b>                               |
| 122004-224      | .22 uf Ceramic-Disc 25V Capacitor <b>(C6, 8, 15, 17)</b>                                                |
| 137151-002      | Type TDA2002A 8W Linear Audio Amplifier Integrated Circuit <b>(Q5, 7)</b>                               |



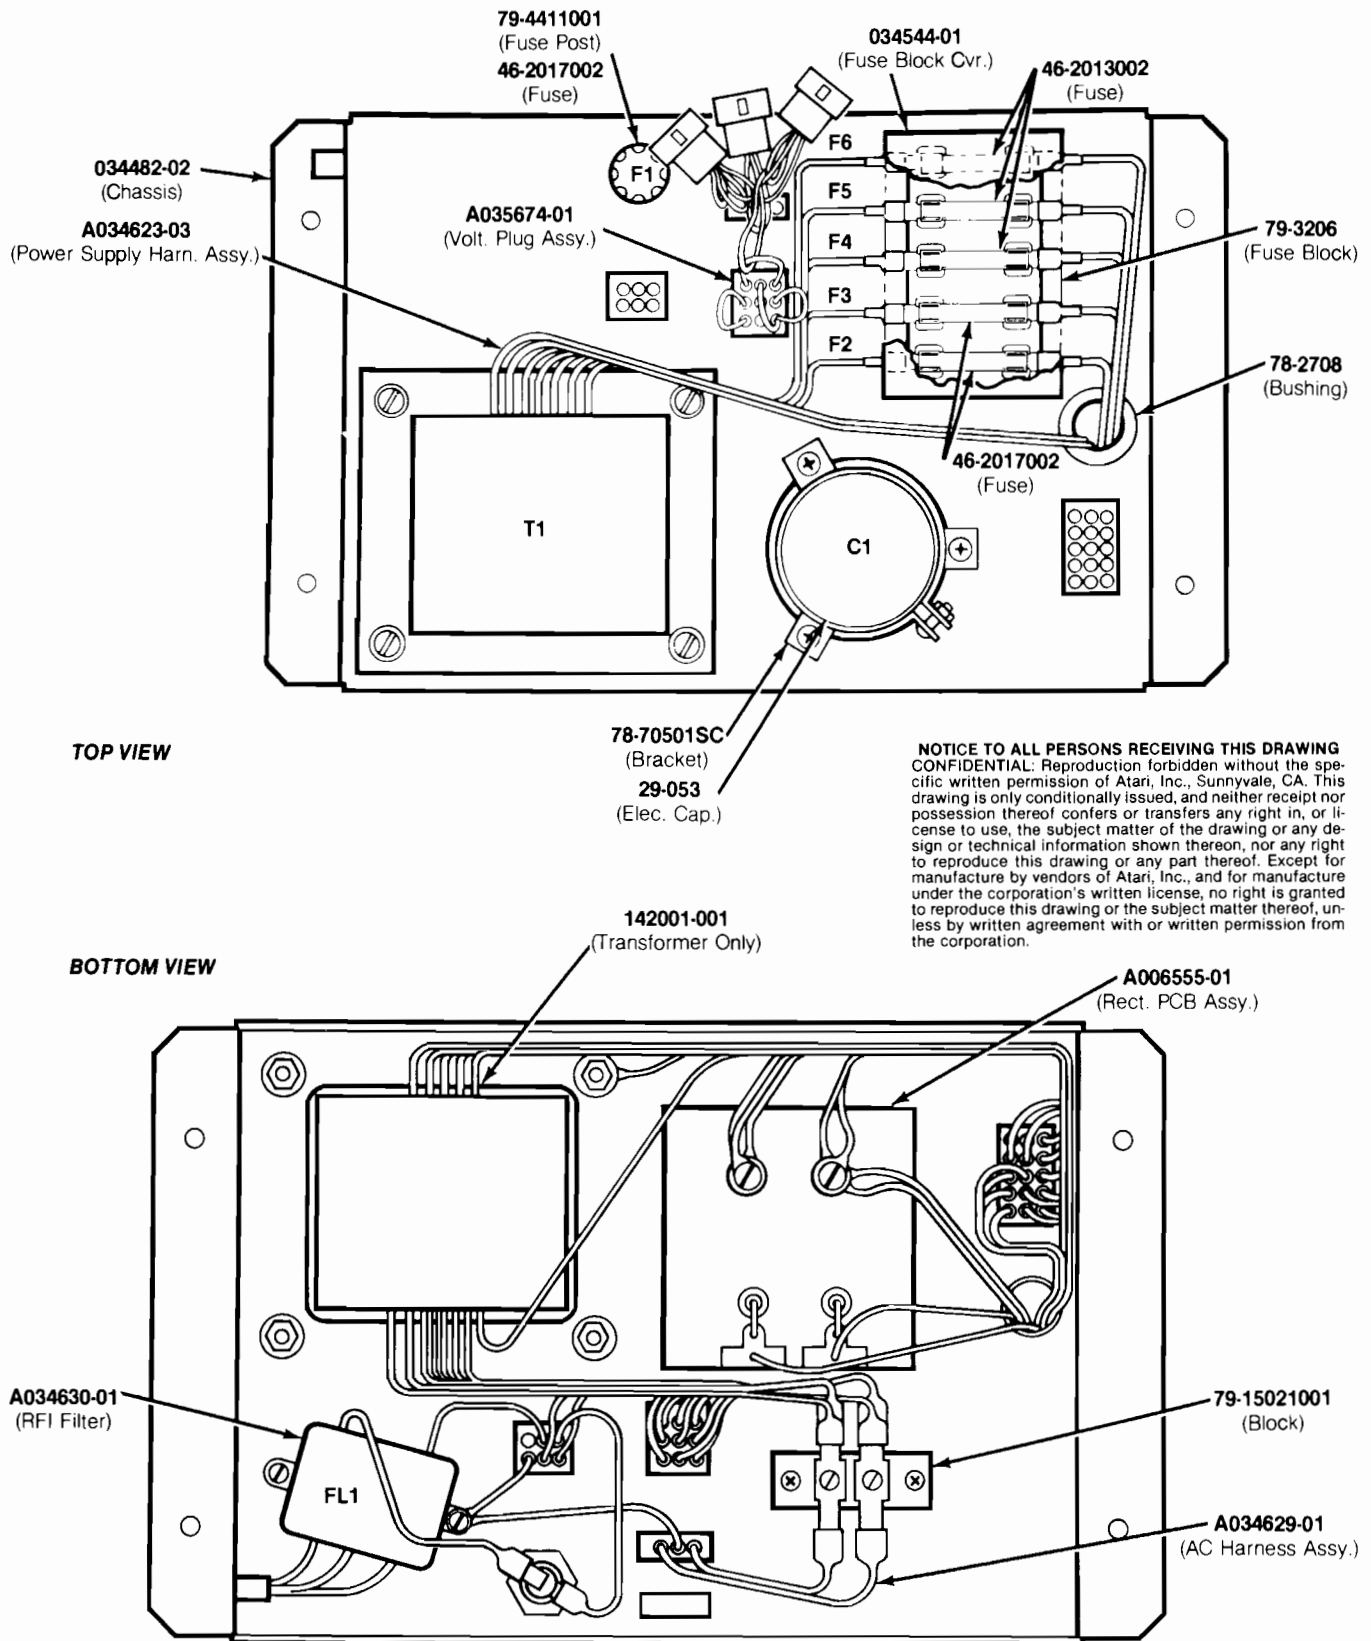


**Figure 24 Power Supply Assembly for Color Raster-Scan Games**  
A036099-01 A

## Figure 24 Power Supply Assembly for Color Raster-Scan Games Parts List

| <i>Part No.</i> | <i>Description</i>                                                                                                                                         |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A006555-01      | Rectifier Printed Circuit Board Assembly                                                                                                                   |
| A036098-01      | Transformer and Harness Assembly <i>(includes shielded power transformer)</i> (T1)                                                                         |
| A034629-01      | AC Harness Assembly                                                                                                                                        |
| A034630-01      | RFI Filter Assembly (FL1)                                                                                                                                  |
| A035674-01      | Voltage Plug Assembly <i>(set of four plugs)</i>                                                                                                           |
| 29-053          | 26,000 uf 15V Electrolytic Capacitor (C1)                                                                                                                  |
| 46-2013002      | 3-Amp. 250V 3AG Slow-Blow Glass Cartridge-Type Fuse (F4-F6)                                                                                                |
| 46-2017002      | 7-Amp. 250V 3AG Slow-Blow Glass Cartridge-Type Fuse (F1-F3)                                                                                                |
| 78-2708         | Nylon Type 6/6 Hole Bushing with $\frac{5}{8}$ -Inch Inside Diameter $\times$ $\frac{55}{64}$ -Inch Outside Diameter<br>$\times$ $\frac{1}{4}$ -Inch Thick |
| 78-70501SC      | 2-Inch-Diameter Capacitor Mounting Bracket                                                                                                                 |
| 79-15021001     | 2-Circuit Single-Row Terminal Block                                                                                                                        |
| 79-3206         | 5-Position 3AG Fuse Block with $\frac{1}{4}$ -Inch Quick-Disconnect Terminals                                                                              |
| 79-4411001      | Panel-Mounting Non-Indicating 3AG Cartridge-Type Fuse Post                                                                                                 |
| 034482-02       | Metal Power-Supply Chassis <i>(acceptable substitute is Atari part no. 034482-01)</i>                                                                      |
| 034544-01       | Fuse Block Cover                                                                                                                                           |
| 142001-001      | Shielded Power Transformer Only <i>(with isolation windings)</i>                                                                                           |

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL:** Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by vendors of Atari, Inc., and for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

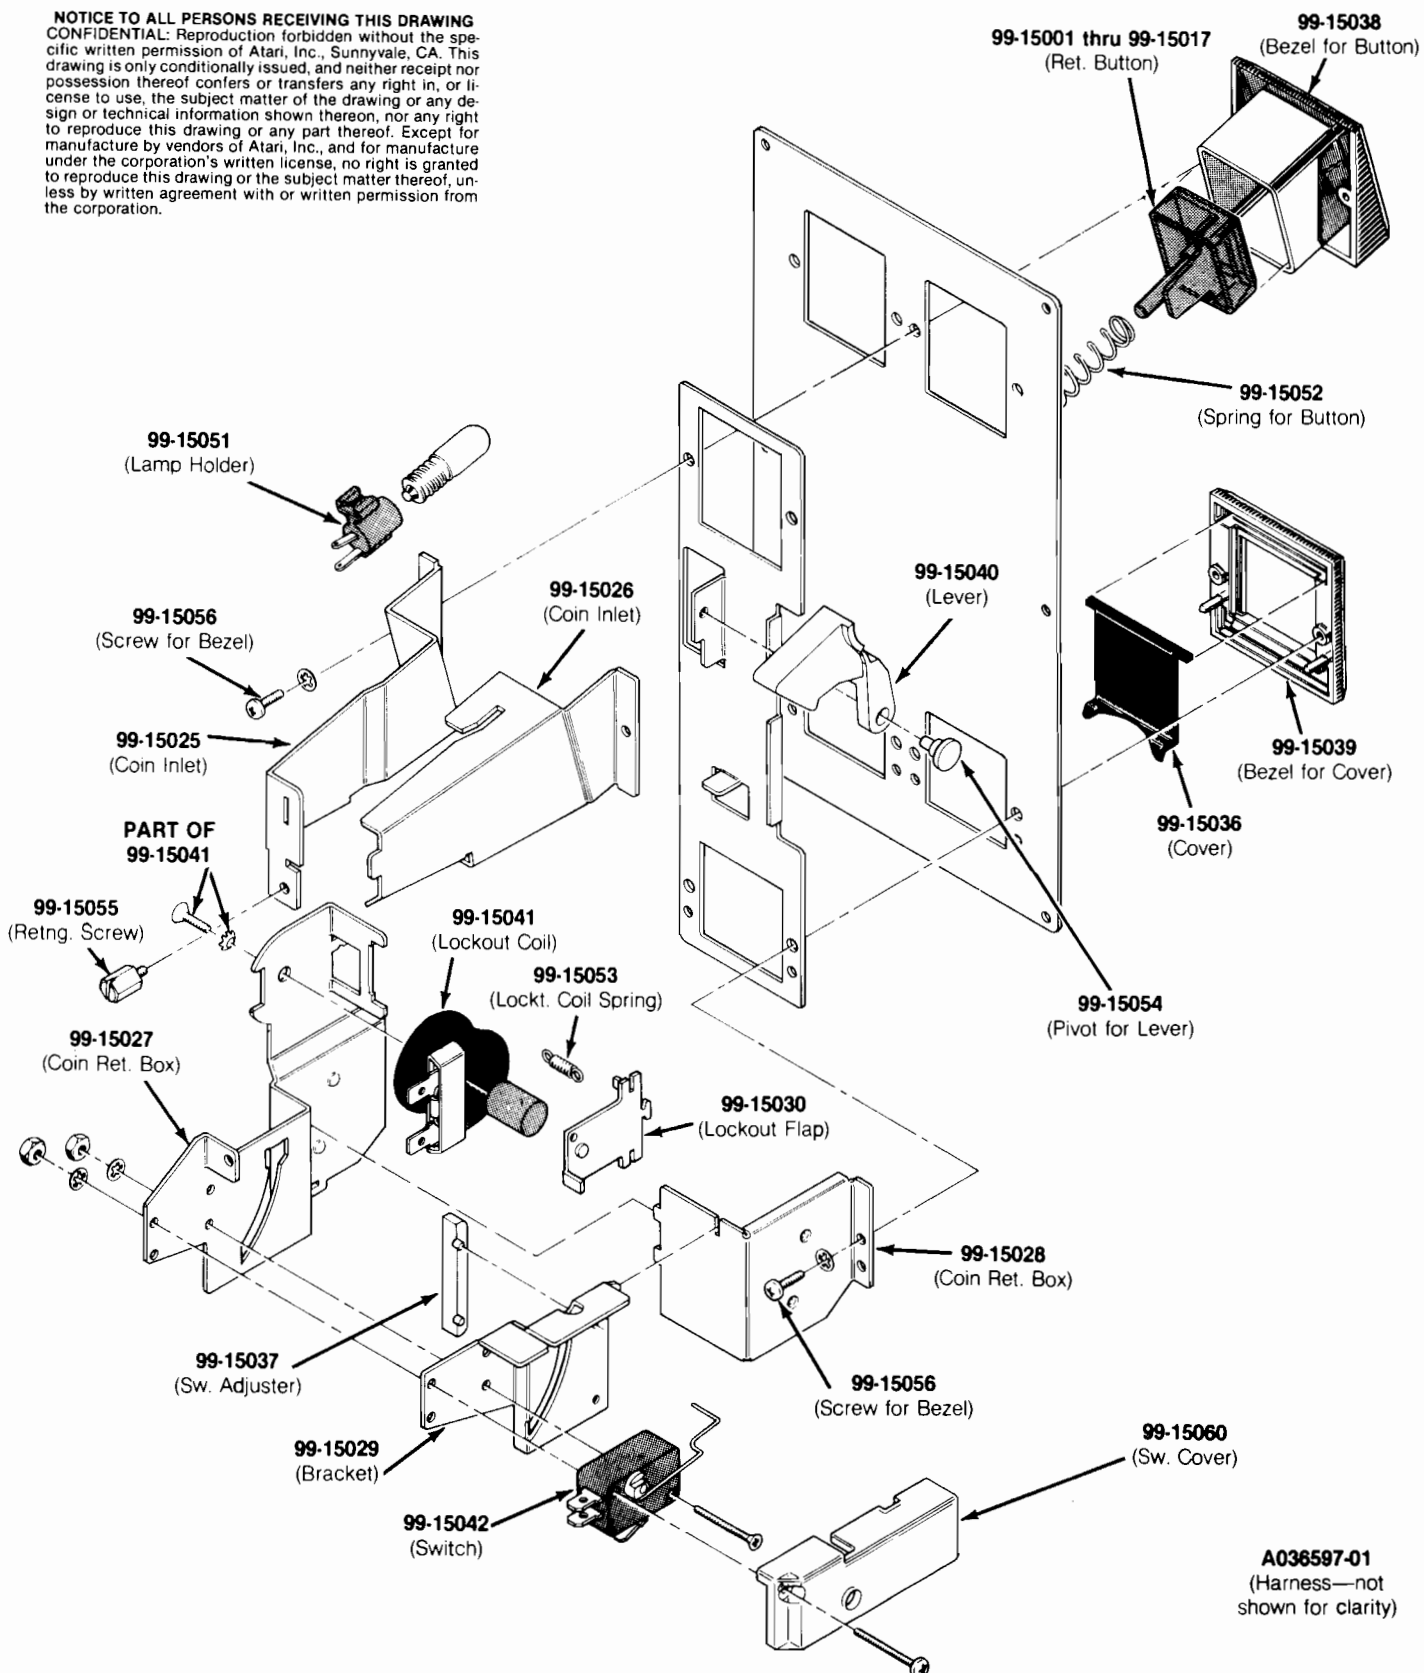

**Figure 25 Double Coin Acceptor/Mount Assembly**  
**A036693-01 thru -20 C**

## Figure 25 Double Coin Acceptor/Mount Assembly Parts List

A036693-01 — U.S. 25¢/25¢ Coin Door  
 A036693-02 — U.S. 50¢/50¢ Coin Door  
 A036693-03 — British 10 P/10 P Coin Door  
 A036693-04 — British 10 P/50 P Coin Door  
 A036693-05 — British 20 P/50 P Coin Door  
 A036693-06 — German 1 DM/1 DM Coin Door  
 A036693-07 — German 2 DM/1 DM Coin Door

A036693-08 — German 2 DM/5 DM Coin Door  
 A036693-09 — German 1 DM/5 DM Coin Door  
 A036693-10 — Belgian 5 Fr/5 Fr Coin Door  
 A036693-11 — French 1 Fr/1 Fr Coin Door  
 A036693-12 — French 2 Fr/1 Fr Coin Door  
 A036693-13 — Swedish 1 Kr/1 Kr Coin Door  
 A036693-14 — Hong Kong \$1/\$1 Coin Door

A036693-15 — Canadian 25¢/25¢ Coin Door  
 A036693-16 — Spanish 25 Pts/25 Pts Coin Door  
 A036693-17 — Swiss 1 Fr/1 Fr Coin Door  
 A036693-18 — Italian 100 L/100 L Coin Door  
 A036693-19 — Japanese 100Y/100Y Coin Door  
 A036693-20 — Australian 20¢/20¢ Coin Door

| <i>Part No.</i> | <i>Description</i>                                     |
|-----------------|--------------------------------------------------------|
| A036597-01      | Double Coin Acceptor Harness Assy.                     |
| 99-15001        | Coin Return Button with U.S. 25¢ Price Plate           |
| 99-15002        | Coin Return Button with U.S. \$1 Price Plate           |
| 99-15003        | Coin Return Button with German 1 DM Price Plate        |
| 99-15004        | Coin Return Button with German 2 DM Price Plate        |
| 99-15005        | Coin Return Button with German 5 DM Price Plate        |
| 99-15006        | Coin Return Button with Belgian 5 Fr Price Plate       |
| 99-15007        | Coin Return Button with French 1 Fr Price Plate        |
| 99-15008        | Coin Return Button with Japanese 100 Yen Price Plate   |
| 99-15009        | Coin Return Button with British 10 Pence Price Plate   |
| 99-15010        | Coin Return Button with Australian 20¢ Price Plate     |
| 99-15011        | Coin Return Button with Italian 100 Lire Price Plate   |
| 99-15012        | Coin Return Button with U.S. 50¢ (2 × 25¢) Price Plate |
| 99-15013        | Coin Return Button with British 20 Pence Price Plate   |
| 99-15014        | Coin Return Button with British 50 Pence Price Plate   |
| 99-15015        | Coin Return Button with French 2 Franc Price Plate     |
| 99-15016        | Coin Return Button with Swiss 1 Franc Price Plate      |
| 99-15017        | Coin Return Button with Hong Kong \$1 Price Plate      |
| 99-15025        | Left Half of Coin Inlet                                |
| 99-15026        | Right Half of Coin Inlet                               |
| 99-15027        | Side Plate of Coin Return Box                          |
| 99-15028        | Base Plate of Coin Return Box                          |
| 99-15029        | Switch Bracket                                         |
| 99-15030        | Flap for Lockout Coil (U.S. 25¢)                       |
| 99-15036        | Coin Return Cover                                      |
| 99-15037        | Switch Adjuster                                        |
| 99-15038        | Bezel for Coin Return Button                           |
| 99-15039        | Bezel for Coin Return Cover                            |
| 99-15040        | Coin Return Lever                                      |
| 99-15041        | Lockout Coil                                           |
| 99-15042        | Coin Switch for U.S. 25¢                               |
| 99-15051        | Lamp Holder                                            |
| 99-15052        | Spring for Coin Return Button                          |
| 99-15053        | Spring for Lockout Coil                                |
| 99-15054        | Pivot for Coin Return Lever                            |
| 99-15055        | Retaining Screw                                        |
| 99-15056        | Screw for Both Bezels                                  |
| 99-15060        | Switch Cover                                           |



## YOUR COMMENTS, PLEASE!

Centipede™/Cocktail  
1st printing

Your comments will assist Atari in improving the usefulness of our publications. They are an important part of preparing for revisions of manuals and parts catalogs. No postage stamp is necessary if mailed in the U.S.A.

If you have any technical questions about certain Atari or Kee Games products, or are requesting additional publications, we will immediately forward your note to the appropriate person.

Page:            Comments:



Fill in if you wish a reply:

Name \_\_\_\_\_

Firm \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Area Code \_\_\_\_\_ Phone \_\_\_\_\_

☐ Distributor

☐ Operator

☐ Other \_\_\_\_\_

First fold



No Postage  
Necessary  
if mailed in  
the United States

**BUSINESS REPLY MAIL**


FIRST CLASS

PERMIT NO. 1004

SUNNYVALE, CA

POSTAGE WILL BE PAID BY ADDRESSEE

**Atari, Inc.**  
**Attn.: Field Service/Coin-Op Division**  
**P. O. Box 427**  
**Sunnyvale, California 94086**

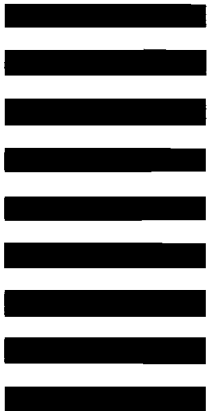

Second fold

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

From:







## Warranty

Seller warrants that its printed circuit boards and parts thereon are free from defects in material and workmanship under normal use and service for a period of ninety (90) days from date of shipment. Seller warrants that its television monitors (in games supplied with monitors) are free from defects in material and workmanship under normal use and service for a period of thirty (30) days from date of shipment. None of the Seller's other products or parts thereof are warranted.

If the products described in this manual fail to conform to this warranty, Sellers' sole liability shall be, at its option, to repair, replace, or credit Buyer's account for such products which are returned to Seller during said warranty period, provided:

- (a) Seller is promptly notified in writing upon discovery by Buyer that said products are defective;
- (b) Such products are returned prepaid to Sellers' plant; and
- (c) Seller's examination of said products discloses to Seller's satisfaction that such alleged defects existed and were not caused by accident, misuse, neglect, alteration, improper repair, installation or improper testing.

In no event shall Seller be liable for loss of profits, loss of use, incidental or consequential damages.

*Except for any express warranty set forth in a written contract between Seller and Buyer which contract supersedes the terms of this order, this warranty is expressed in lieu of all other warranties expressed or implied, including the implied warranties of merchantability and fitness for a particular purpose, and of all other obligations or liabilities on the Seller's part, and it neither assumes nor authorizes any other person to assume for the Seller any other liabilities in connection with the sale of products under this order.*


The use of any non-Atari parts may void your warranty, according to the terms of the warranty. The use of any non-Atari parts may also adversely affect the safety of your game and cause injury to yourself and others. Be very cautious in using non-Atari-supplied components with our games, in order to insure your safety.

Atari distributors are independent, being privately owned and operated. In their judgment they may sell parts or accessories other than Atari parts or accessories. Atari cannot be responsible for the quality, suitability or safety of any non-Atari part or any modification including labor which is performed by such distributor.

*This document is and contains confidential trade secret information of Atari, Inc.*

*This document is loaned under confidential custody for the sole purpose of operation, maintenance or repair of Atari equipment and may not be used by or disclosed to any person for any other purpose whatever, and remains the property of Atari, Inc.*

*Neither it nor the information it contains may be reproduced, used, or disclosed to persons not having a need to know consistent with the purpose of the loan, without written consent of Atari, Inc.*

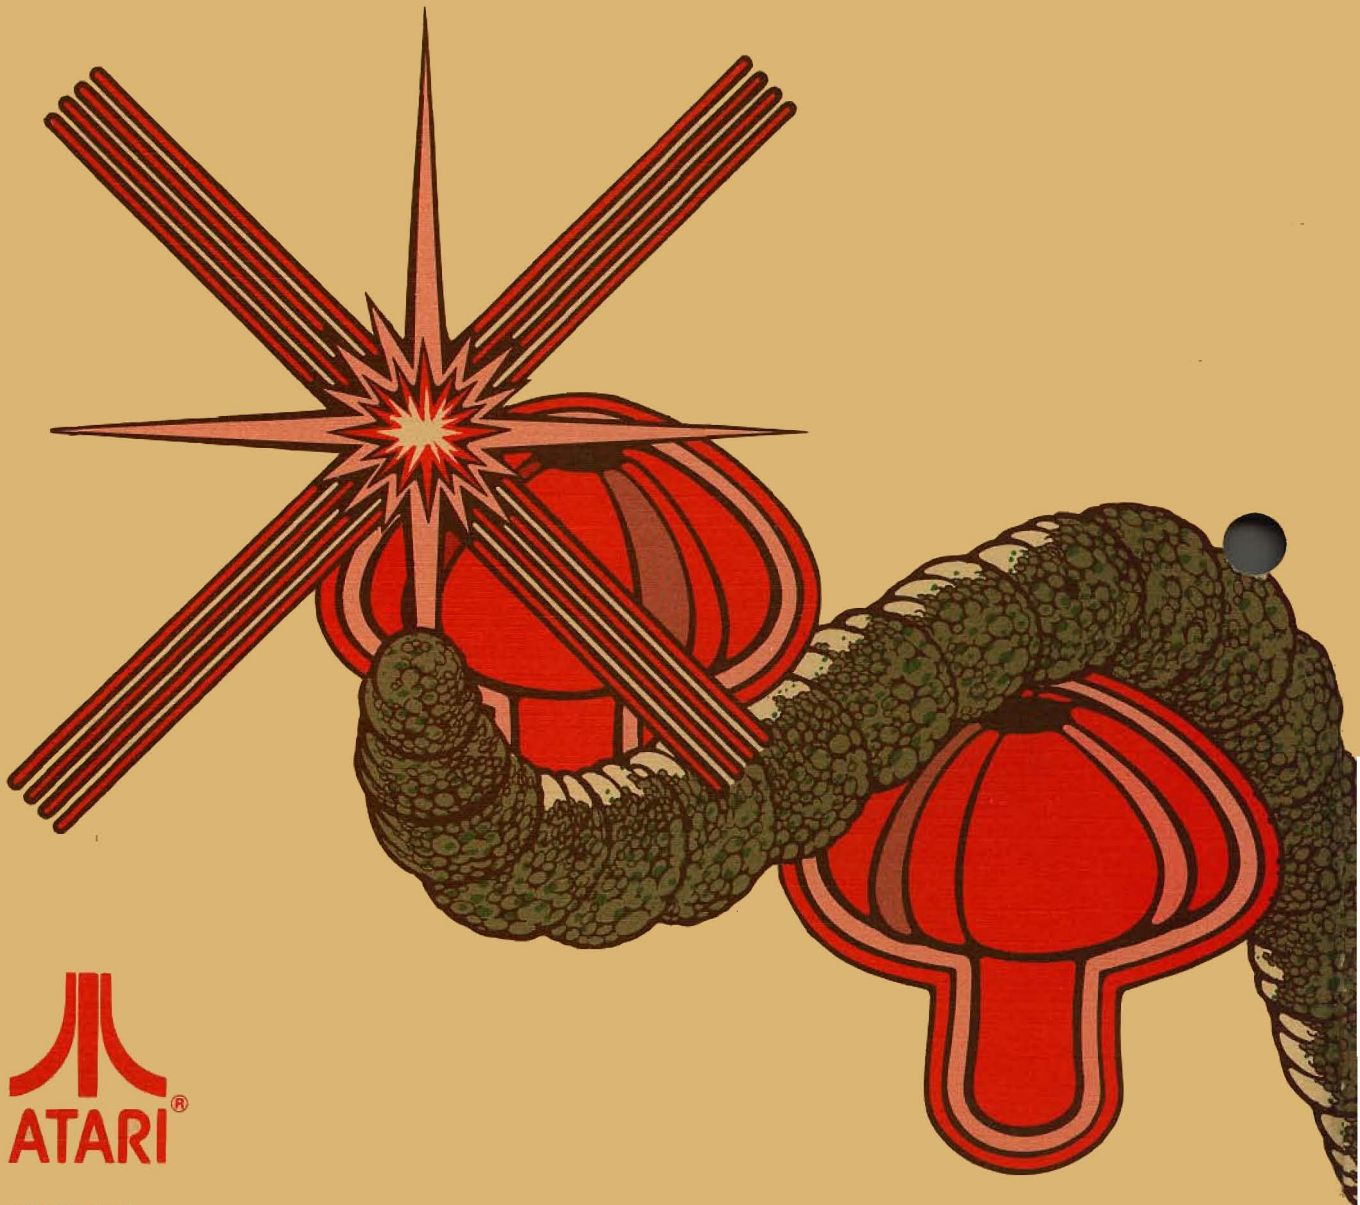

ATARI INC  
1265 BORREGAS AVENUE  
P.O. BOX 427  
SUNNYVALE, CALIFORNIA 94086  
408/745-2000 • TELEX 35-7488



A Warner Communications Company